



R986

MW/FM/FM STEREO 2-BAND RADIO

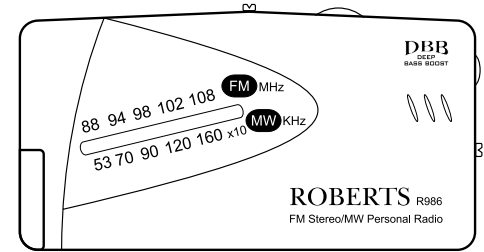

ROBERTS
Sound for Generations

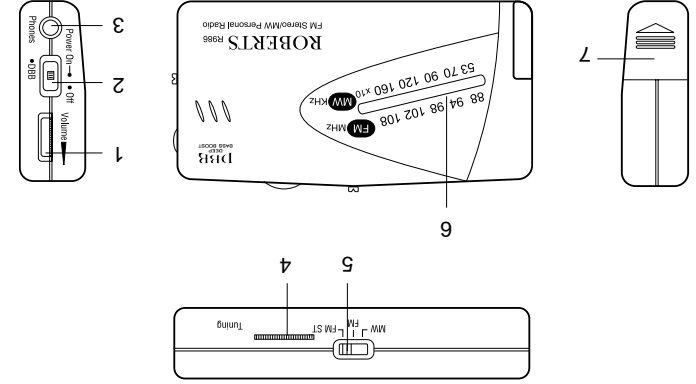

Controls

1. Volume Control
2. Power On/Off/DBB switch
3. Earphone Jack
4. Tuning Control
5. MW/FM/FM Stereo Band Selector
6. Dial Pointer
7. Battery Cover

Operating Instructions



Issue 1

If you need any further advice, please call our Technical Helpline on 0181 758 0338 (Mon-Fri)

These statements do not affect the statutory rights of a consumer.

ROBERTS RADIO TECHNICAL SERVICES DEPARTMENT
97-99 WORTON ROAD
ISLEWORTH MIDDLESEX
TW7 6EG

Guarantee

This instrument is guaranteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts dealer will be able to attend to any defect quickly and efficiently, but should it be necessary the dealer will return the instrument to the company's service department for attention. In the event that it is not possible to return the instrument to the Roberts dealer from whom it was purchased, please contact Roberts Radio Technical Services Department at the address shown below before taking further action.

General

Do not allow this unit to be exposed to water, steam or sand. Do not leave the unit where excessive heat could cause damage such as in a parked car where the heat from the sun can build up even though the outside temperature may not seem too high. It is recommended that the FM band be used where ever possible as better results in terms of quality and freedom from interference will usually be obtained than on the MW band.

Battery

To insert the battery first open the battery cover (7) by sliding it in the direction shown by the arrow. Insert one AAA (LR03) size battery into the compartment.

Earphones

Plug the earphones supplied into the earphone jack (3) located on the right-hand side of the radio.

Aerials

The earphones act as the FM aerial when plugged into the earphone jack. There is a separate directional aerial built into the radio for MW reception. To achieve the best MW reception, it may be necessary to rotate the radio.

Power On/Off/DBB (Deep Bass Boost) Switch

Turn on the radio by setting the power switch (2) to the "On" position. Setting the switch to the "DBB" position will enhance bass sounds. Return the power switch to the "Off" position to turn off the radio.

MW/FM/FM Stereo Band Selector

Set the band selector switch (5) to the desired waveband. For MW reception set the switch to the "MW" position. For FM stereo reception set the switch to the "FM ST" position. If the FM signal becomes weak or is accompanied by a high level of background hiss, you may select MONO mode by setting the switch to the "FM" position.

Tuning Control

Slowly rotate the tuning control (4) to select the desired station.

Dial Pointer

Rotate the tuning control until the dial pointer (6) corresponds to the frequency of the desired station.

Volume Control

Adjust the volume control (1) to the desired level of sound. Rotating the control clockwise will increase the sound level.

Specifications

Battery	1 x LR03 (AAA) size
Battery Life	Approx. 15hrs using alkaline battery
Frequency coverage	MW 530 - 1710kHz FM 87.5 - 108MHz
Semiconductors	3 Integrated circuits 3 Diodes
Output Power	0.5mW
Earphone Jack	3.5mm dia (Stereo)

The company reserves the right to amend the specification without notice

Imported by:-
ROBERTS RADIO LIMITED
PO BOX 130
MEXBOROUGH
SOUTH YORKSHIRE
S64 8YT