

# ROBERTS

Enjoy Listening

DAB / FM RDS / SD Digital Radio  
Recorder with PausePlus

Record



**DAB**


Digital Audio Broadcasting

Please read this manual before use

## Contents

<i>Controls</i> .....	2-3	<i>Timed recording</i> .....	23-26
<i>Battery operation</i> .....	4	<i>View record timers</i> .....	27
<i>Using the AC adaptor</i> .....	5	<i>Playing files - SD</i> .....	28
<i>Operating your radio</i> .....	6	<i>File and folder navigation</i> .....	29-30
<i>Selecting a station - DAB</i> .....	7	<i>SD memory card information</i> .....	31
<i>Auto-Select - DAB</i> .....	8	<i>Setting the alarm times</i> .....	32-34
<i>Secondary services - DAB</i> .....	8	<i>To view the alarm settings</i> .....	35
<i>Display modes - DAB</i> .....	9	<i>Cancelling alarms</i> .....	35
<i>Finding new stations - DAB</i> .....	10	<i>Snooze function</i> .....	36
<i>Signal strength display - DAB</i> .....	10	<i>Sleep function</i> .....	37
<i>Manual tuning - DAB</i> .....	11	<i>Nap timer</i> .....	38
<i>Dynamic Range Control (DRC) - DAB</i> .....	12	<i>Contrast viewing angle</i> .....	39
<i>Operating your radio - FM Auto-Tune</i> .....	13	<i>Display backlight dimmer</i> .....	40
<i>Manual tuning - FM</i> .....	14	<i>System reset</i> .....	41
<i>Display modes - FM</i> .....	15	<i>Headphone socket</i> .....	42
<i>Stereo / Mono setting - FM (headphones only)</i> .....	16	<i>Auxiliary input (Line in) socket</i> .....	42
<i>Scan sensitivity setting - FM</i> .....	17	<i>Software version</i> .....	43
<i>Presetting stations</i> .....	18	<i>Audio formats</i> .....	44
<i>Using your radio's PausePlus feature - DAB / FM</i> .....	19-20	<i>Cautions</i> .....	45
<i>Using an SD memory card with your radio</i> .....	21	<i>Specifications and circuit features</i> .....	45
<i>Recording to SD/SDHC cards</i> .....	22	<i>Guarantee</i> .....	46

## Controls (Front)

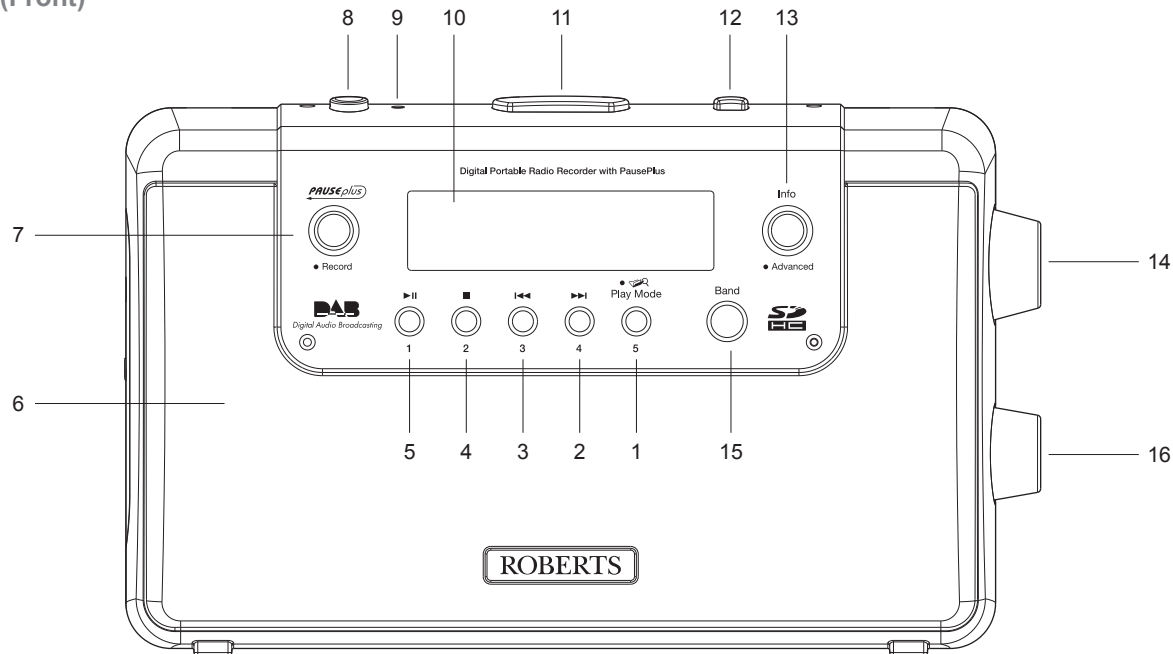


1. Preset 5 / Play Mode button
2. Preset 4 / Fast-forward button
3. Preset 3 / Rewind button
4. Preset 2 / Stop button
5. Preset 1 / Play / Pause button
6. Loudspeaker


7. PausePlus / Record button
8. On / Off button
9. On / Off indicator
10. LCD display
11. Tuning Up / Down buttons

12. Select button
13. Info / Advanced menu button
14. Volume control
15. Band button
16. Tone control

## Controls (Rear)

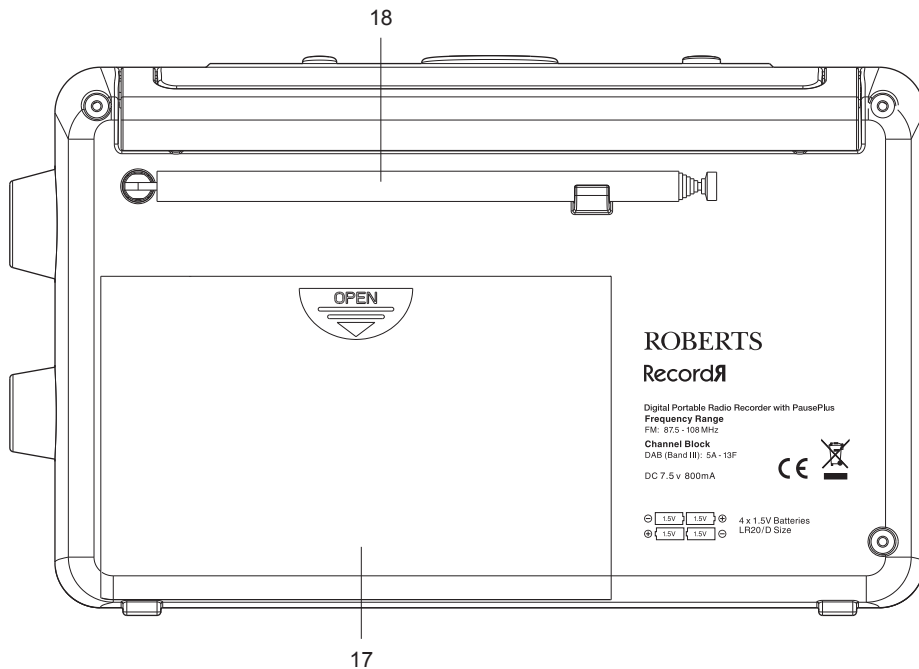

## Controls (Left hand side)

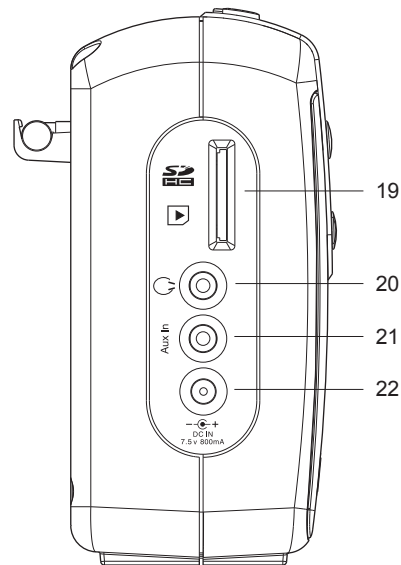


## Battery operation

1. Remove the battery cover on the back of the unit by sliding the cover in the direction of the arrow.
2. Insert four LR20 (D size) batteries into the spaces in the compartment. Take care to ensure all batteries are inserted with the correct polarity as shown inside the battery compartment. Replace the battery cover.
3. Reduced power, your radio switching off automatically, and a 'stuttering' sound are all signs that the batteries may need replacing.
4. If the radio is not to be used for any extended period of time it is recommended that the batteries are removed from the radio.

We would recommend for economy that the RecordR is used via the AC adaptor whenever possible with battery operation for occasional or standby use only.

**IMPORTANT:** The batteries should not be exposed to excessive heat such as sunshine, fire or the like. After use, disposable batteries should if possible be taken to a suitable recycling centre. On no account should batteries be disposed of by incineration.

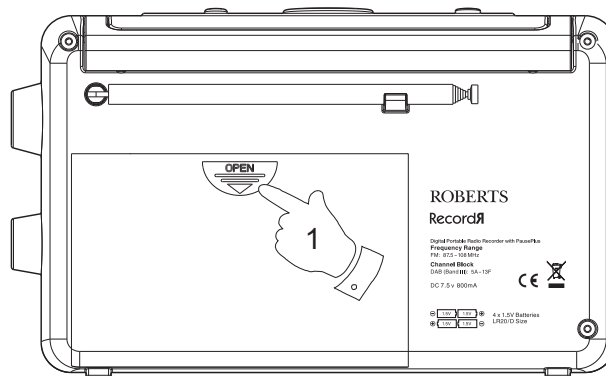


## Using the AC adaptor

1. Place your radio on a flat surface.
2. Fully extend the telescopic aerial. The aerial should be fully extended and positioned vertically for optimum reception.
3. Insert the adaptor plug into the DC socket located on the left hand side of your radio. Plug the adaptor into a standard 13 amp mains socket outlet. The display will show 'Welcome ROBERTS' for a few seconds.

**IMPORTANT:** The mains adaptor is used as the means of connecting the radio to the mains supply. The mains socket used for the radio must remain accessible during normal use. In order to disconnect the radio from the mains completely, the mains adaptor should be removed from the mains socket outlet completely.

Characters appearing on the LCD display indicate that the radio is connected to and powered from the mains supply.

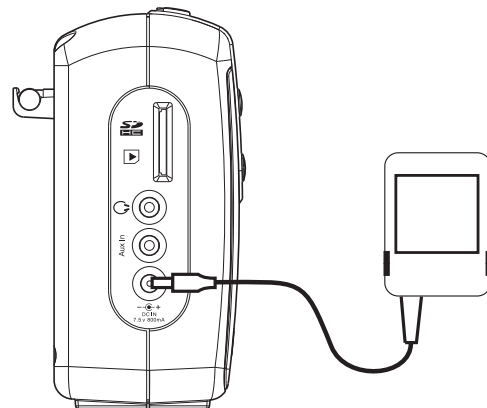

Welcome  
ROBERTS

## Operating your radio

1. Press the **On / Off** button to switch on your radio.

When first switched on, the radio will be in DAB mode. After each use the radio will remember the mode used and then switch on in that mode the next time that it is used.

 


2. If the radio has been used before, the last used station will be selected.

3. If this is the first time that the radio has been used a quick scan of the Band III DAB channels will be carried out. During the scanning process the display will show progress of the station search. The number on the right of the display is the number of stations that have been found.

4. When the scan is completed the first station (in numeric-alpha order 0....9, A....Z) will be selected. The first station in the list of stations found during scanning will be played. The display will show the station name.

5. If no signals are found then 'OFF AIR' will be displayed and it may be necessary to relocate your radio to a position giving better reception. You should then carry out a scan to find stations as described on page 10.



## Selecting a station - DAB

1. Press the **On / Off** button to switch on your radio.
2. Press and release the **Band** button until the DAB mode is selected. The display will show the name of the radio station currently selected.
3. Press the **Tuning Up** or **Down** buttons to step through the list of available stations.
4. When the desired station name appears on the display, press and release the **Select** button to select the station. The display will show 'Tuning' while your radio finds the new station.
5. Adjust the **Volume** and **Tone** controls to the required setting.

**Note:** If after selecting a station the display shows 'No Service' it may be necessary to relocate your radio to a position giving better reception.




On/Off

BBC R2 DAB  
The latest news


Band



BBC R2 DAB  
♦AbsRock ♦

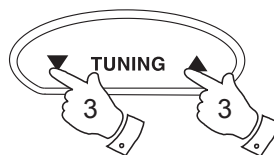


AbsRock DAB  
Tuning...

 


AbsRock DAB  
Home of the Gre

VOLUME

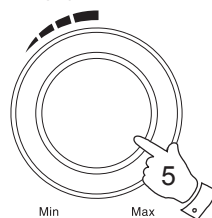

TONE

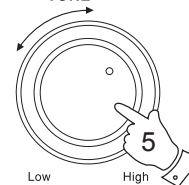





## Auto-Select - DAB

As an alternative to pressing the select button to select a station your radio can be set so as to automatically select a station.

 1. Press and hold the **Select** button until the display shows 'Auto-Select On'.
2. Press the **Tuning Up** or **Down** buttons until the station you require is visible on the display. After a few seconds your radio will automatically select the station shown on the display.
3. To switch off auto-select, press and hold the **Select** button until the display shows 'Auto-Select Off'.




Auto-Select On

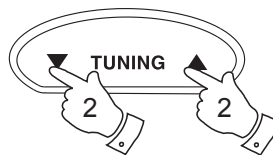

Auto-Select Off

## Secondary services - DAB

1. Certain radio stations have one or more secondary services associated with them. If a station has a secondary service associated with it then the secondary service will then appear immediately after the primary service as you press the **Tuning Up** button.
2. To tune to the secondary service, press and release the **Select** button. Most secondary services do not broadcast continually and if the selected service is not available, the radio will re-tune to the associated primary service.

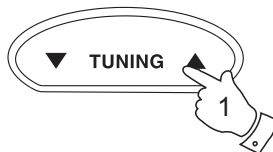

BBC R4 DAB  
♦BBC R4EX >> ♦




BBC R4EX DAB  
♦D Service << ♦

## Display modes - DAB

Your radio has a range of display options when in DAB mode:-

1. Press and release the **Info** button to cycle through the various options.

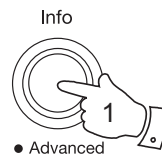

- |                        |  |
|------------------------|--|
| a. Scrolling text      | Displays scrolling text messages such as artist/track name, phone in number, etc.  |
| b. Programme type      | Displays the type of station being listened to e.g. Pop, Classic, News, etc.   |
| c. Time and date       | Displays the current time (24 hour format) and date.   |
| d. Multiplex Name      | Displays the name of the DAB multiplex to which the current station belongs.   |
| e. Signal strength     | Displays a graph showing the signal strength for the currently tuned DAB station. The clear unfilled rectangle indicates minimum signal level required for satisfactory reception. |
| f. Frequency & channel | Displays frequency and channel number for the currently tuned DAB station.   |
| g. Bit rate/audio type | Displays the digital bit rate and audio type for the currently tuned DAB station.  |

a

BBC R2	DAB
The latest news	

b

BBC R2	DAB
Pop Music	

c

BBC R2	DAB
09:30 06/07/2011	

d

BBC R2	DAB
BBC National DAB	

e

BBC R2	DAB
<div style="display: flex; align-items: center;"> <div style="width: 100px; height: 10px; background-color: black; position: relative;"> <div style="position: absolute; left: 0; width: 80%; height: 100%; background-color: black;"></div> <div style="position: absolute; left: 80%; width: 20%; height: 100%; background-color: white; border: 1px solid black;"></div> </div> </div>	

f

BBC R2	DAB
12B / 225.648MHz	


g

BBC R2	DAB
128kbPs / MP2	

## Finding new stations - DAB

As time passes new stations may become available. To find new stations proceed as follows.

1. Press and hold the **Info** button.
2. Press the **Tuning Up** or **Down** buttons until 'Auto Tune' appears on the display.
3. Press and release the **Select** button. Your radio will perform a scan of the Band III DAB channels. As new stations are found, the station counter on the right-hand side of the display will increase and stations will be added to the list.

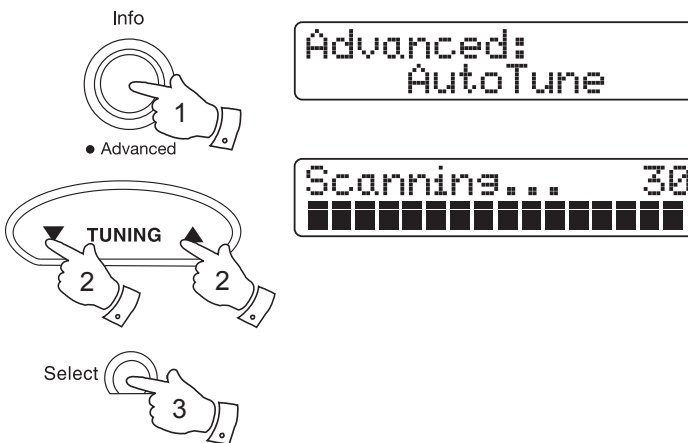

## Signal strength display - DAB



1. Repeatedly press and release the **Info** button until the lower line of the display shows signal strength.
2. Position your radio and try adjusting the aerial as to give maximum number of black rectangles on the signal strength display. Normally, the best reception will be found with the aerial fully extended.
3. The clear unfilled rectangle indicates minimum signal level required for satisfactory reception.



## Manual tuning - DAB

Manual tuning allows you to tune your radio to a particular DAB frequency in Band III. Any new stations found will be added to the station list. This function can also be used to assist the positioning of the aerial or the radio to optimise reception for a specific channel or frequency. Note that UK DAB stations are located in the range of channels 11B to 12D.

1. Press and hold the **Info** button.
2. Press the **Tuning Up** or **Down** buttons until the display shows 'Manual Tune'. Press and release the **Select** button to enter the manual tuning mode.
3. Press the **Tuning Up** or **Down** buttons to select the desired DAB channel.
4. Press and release the **Select** button. The open block in the signal strength graph shows you the minimum signal strength needed for good DAB reception. The signal blocks will go up and down showing the changing signal strength as you adjust the telescopic aerial or the radio position. Any new radio stations found on the tuned DAB multiplex will be added to the list stored in the radio.
5. Press and release the **Select** button to return to the normal tuning mode.

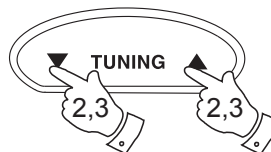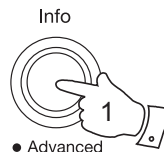

Advanced:  
Manual Tune

Manual Tune:  
12B 225.64MHz

■■■■■ ■■■■■■■■■■  
12B BBC Nation

BBC R2 DAB  
The latest news

## Dynamic Range Control (DRC) - DAB

Dynamic range control (also known as DRC) can make quieter sounds easier to hear when your radio is used in a noisy environment.

There are three levels of compression:

 



DRC 0 No compression applied. (default)

DRC 1 Maximum compression applied.

DRC 1/2 Medium compression applied.

1. Press the **On / Off** button to switch on your radio.
2. Press and release the **Band** button until the DAB band is selected.
3. Press and hold the **Info** button.
4. Press the **Tuning Up** or **Down** buttons until 'DRC Value' appears on the display. Press and release the **Select** button. The display will show the current DRC value.
5. Press the **Tuning Up** or **Down** buttons to select the required DRC setting (default is 0).
6. Press and release the **Select** button to confirm the setting. The display will return to the normal radio display.

Note: Not all DAB broadcasts are able to use the DRC function. If the broadcast does not support DRC, then the DRC setting in the radio will have no effect.

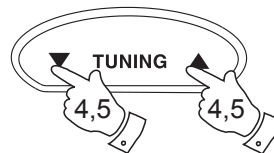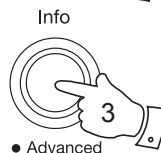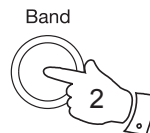

Advanced:  
DRC Value


DRC Value:  
0

DRC Value:  
1/2

DRC Value:  
1


## Operating your radio - FM Auto Tune

1. Fully extend the telescopic aerial. The aerial should be fully extended and positioned vertically for optimum reception.
2. Press the **On / Off** button to switch on your radio.
3. Press and release the **Band** button until the FM band is selected.

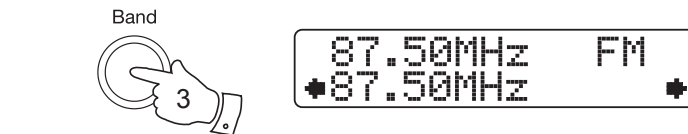

4. Press and release the **Tuning Up** button to cause your radio to search from low frequency to high frequency and to stop automatically when it finds a station of sufficient strength.

Note: If your radio does not auto scan, press and release the **Select** button until the display shows 'Auto Scan: ON'.

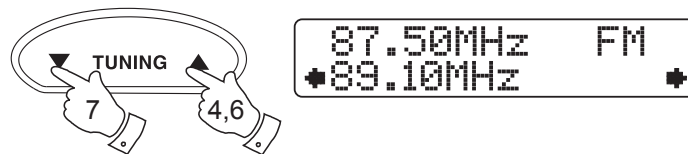


5. After a few seconds the display will update. The display will show the frequency of the signal found. If the signal is strong enough and there is RDS data present then the radio will display the station name.

6. To find other stations press and release the **Tuning Up** button as before.

7. Press and release the **Tuning Down** button to cause your radio to search from high frequency to low frequency and to stop automatically when it finds a station of sufficient strength. When the end of the waveband is reached your radio will recommence tuning from the opposite end of the waveband.

8. Adjust the **Volume** and **Tone** controls to the required setting.

9. To switch off your radio press the **On / Off** button.

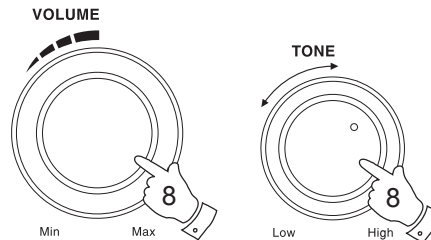


### Note:

If you find that FM reception is poor, try repositioning the Telescopic aerial. Fully extend and position vertically for optimum reception. If you find that an FM broadcast has a lot of background hiss, this may often be reduced by setting the radio into Mono reception mode for the current FM station. Please refer to the section "Stereo / Mono setting - FM" on page 16 for further details.

## Manual tuning - FM

1. Fully extend the telescopic aerial. The aerial should be fully extended and positioned vertically for optimum reception.
2. Press the **On / Off** button to switch on your radio.
3. Press and release the **Band** button until the FM band is selected.
4. Press and release the **Select** button until the display shows 'Auto Scan: Off'.
5. Repeatedly press and release the **Tuning Up** or **Down** buttons to tune to a station. The frequency will change in steps of 50kHz.  
If the radio is tuned to a station of sufficient signal strength with RDS information present, then the display may change to show the station name.
6. When the waveband end is reached the radio will recommence tuning from the opposite waveband end.
7. Adjust the **Volume** and **Tone** controls to the required setting.
8. To switch off your radio press the **On / Off** button.

**Note:** If you find that FM reception is poor, try repositioning the Telescopic aerial. Fully extend and position vertically for optimum reception. If you find that an FM broadcast has a lot of background hiss, this may often be reduced by setting the radio into Mono reception mode for the current FM station. Please refer to the section "Stereo / Mono setting - FM" on page 16 for further details.

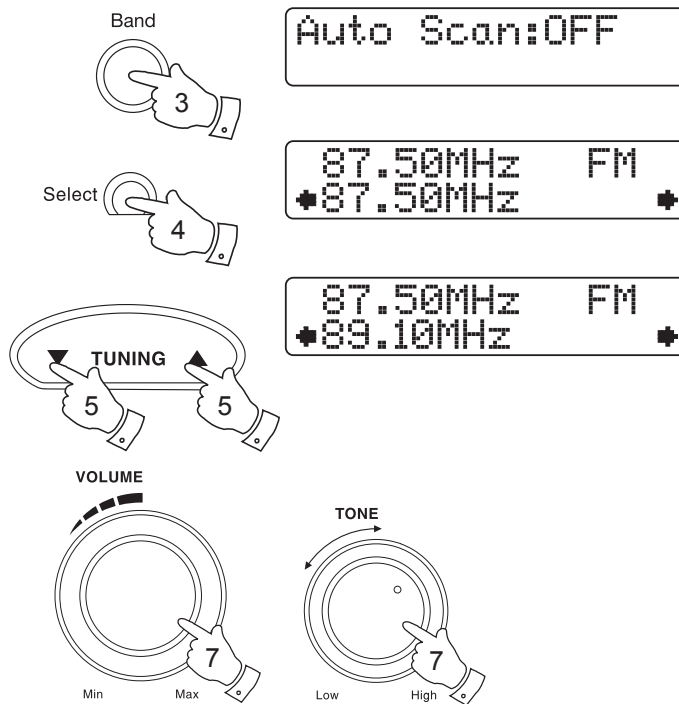


## Display modes - FM


Your radio has a range of display options for FM mode:-

The Radio Data System (RDS) is a system in which inaudible digital information is transmitted in addition to the normal FM radio programme. RDS offers several useful features. The following are available on your radio.

1. Press and release the **Info** button to cycle through the various options.

- |                    |   |
|--------------------|---|
| a. Scrolling text  | Displays scrolling text messages such as artist/track name, phone in number, etc.   |
| b. Programme type  | Displays type of station being listened to e.g. Pop, Classic, News, etc.  |
| c. Signal strength | Displays a graph showing the signal strength for the currently tuned FM station. The clear unfilled rectangle indicates minimum signal level required for satisfactory reception. |
| d. Audio mode      | Displays the audio mode for the currently tuned FM station.   |
| e. Time and date   | Displays the current time (24 hour format) and date.  |

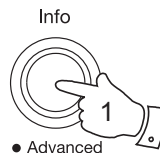

- a
- |                              |
|------------------------------|
| BBC R2 FM<br>The latest news |
|------------------------------|
- b
- |                        |
|------------------------|
| BBC R2 FM<br>Pop Music |
|------------------------|
- c
- |  |
|--|
| BBC R2 FM<br> |
|--|
- d
- |                   |
|-------------------|
| BBC R2 FM<br>Mono |
|-------------------|
- e
- |                               |
|-------------------------------|
| BBC R2 FM<br>10:08 07/07/2011 |
|-------------------------------|


Note: Your radio will display 'Radio Text' if there is no scrolling text and 'Program Type' if there is no programme type information.



## Stereo / Mono setting - FM (headphones only)

Your radio will play stereo FM broadcasts in stereo (via headphones) provided that the received signal is of adequate strength. However, as a stereo signal becomes weaker the audio signal will become poorer. It may be preferable to force the radio to play the station in mono in order to reduce the level of background hiss.


1. Press the **On / Off** button to switch on your radio.
2. Tune to the required FM radio station as previously described (see pages 13, 14).
3. Press and hold the **Info** button. The display will show 'FM Audio'.
4. Press and release the **Select** button. The current audio setting will show on the display.
5. Press the **Tuning Up** or **Down** buttons until 'Mono' appears on the display. Press and release the **Select** button. While this setting is engaged, the radio will play the current station in mono.  
  
The Mono override is a temporary setting and is applied to the currently tuned station only. It is cancelled automatically by tuning to another radio station.
6. If you wish to cancel the Mono override while listening to the currently tuned radio station, follow steps 3 - 5 above and select 'Auto'. The radio will then play the current station in stereo if the signal is sufficiently strong.

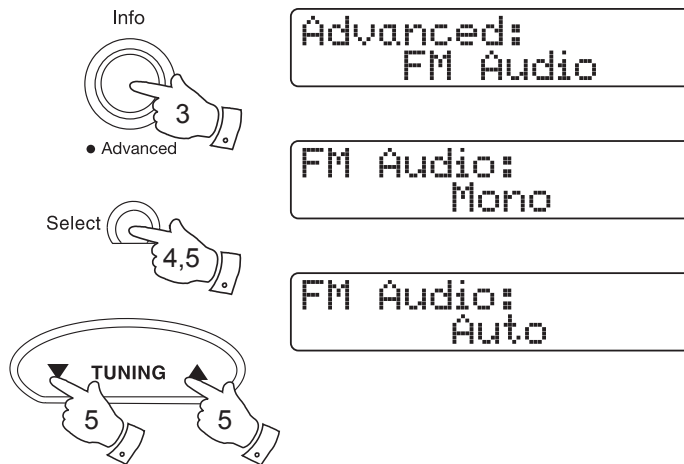

## Scan sensitivity setting - FM

Your radio will normally scan for FM broadcasts which are strong enough to give good reception. However, you may wish the Auto-scan function to also be able to find weaker signals, possibly from more distant radio transmitters. Your radio includes a local / distant option for the Auto-scan function.

1. Press the **On / Off** button to switch on the radio.
2. Press and release the **Band** button until the FM band is selected.
3. Press and hold the **Info** button.
4. Press the **Tuning Up** or **Down** buttons until 'Scan sensitivity' appears on the display. Press and release the **Select** button.
5. Press the **Tuning Up** or **Down** buttons to switch between Local and Distant options on the lower line of the display. The Distant option will allow the radio to find weaker signals when scanning.
6. Press and release the **Select** button to confirm your selection. The radio will then revert to the normal information display. The Local or Distant setting is stored in the radio and remains in force until changed or until a System Reset.

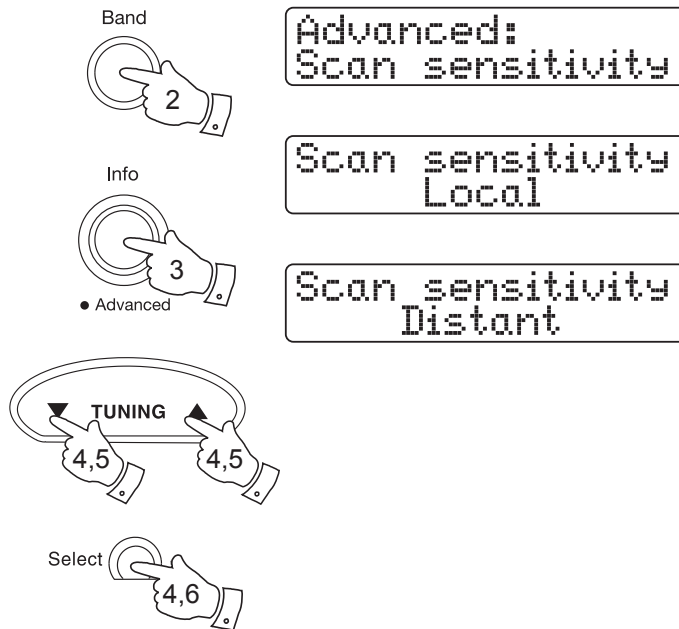

**Note:** The initial setting (out of the box, or after a System Reset) causes the radio to ignore weaker (or more distant) signals.




## Presetting stations

You may store your preferred DAB and FM radio stations to the preset station memories. There are 10 memory presets in your radio, 5 for DAB and 5 for FM. Presets are remembered by your radio in the event of a power failure. The procedure for setting presets and using them to tune stations is the same for FM and DAB modes, and is described below.

1. Press the **On / Off** button to switch on the radio.
2. Press and release the **Band** button to select the desired waveband.
3. Tune to the required station as previously described.
4. Press and hold the required **Preset** button 1-5 until the display shows, for example, 'DAB 1 Preset saved'. The station will be stored under the chosen preset. Repeat this procedure for the remaining presets.
5. Stations which have been stored in preset memories may be overwritten by following the above procedure.

## Recalling a preset station

1. Press the **On / Off** button to switch on the radio.
2. Press and release the **Band** button to select the desired waveband.
3. Press and release the required **Preset** button 1-5. The display will show, for example, 'Preset empty' if no station has been stored to that preset. If a preset has been stored, your radio will tune to the chosen preset station stored in the preset memory.

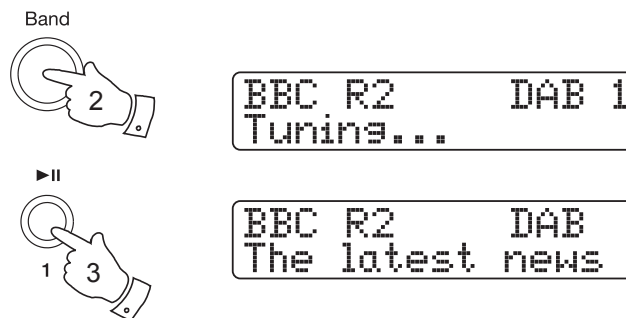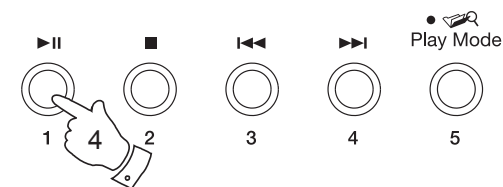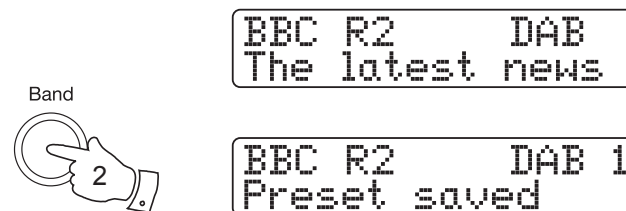

## Using your radio's PausePlus feature - DAB and FM

How many times has your favourite radio station been interrupted by that phone call from a double glazing firm or someone selling that must have item? Sound familiar? With a single press of the **PausePlus** button you can put your favourite station on hold while you answer that important call. After the call or other important task is finished simply press the **PausePlus** button to return to your favourite station exactly where you left off so that you never miss a single word.

To use the **PausePlus** feature you must have an SD or SDHC card inserted in the radio. Please see 'Using an SD memory card' page 21 for more information.


Radio stations can effectively be put on hold for up to 60 minutes.

If there is insufficient free space or if the card is write-protected and the rewind or record function is accessed then a warning message 'Space Full' or 'SD Protected' will be displayed.

1. Insert an SD card into your radio. Push the card label side facing towards you and gold contacts first into the card slot on the left hand side of your radio until it clicks.

To remove the card push the card in so that it clicks once more. It will then be pushed out slightly allowing removal.

2. Ensure your radio is playing. To use the PausePlus feature simply press and release the **PausePlus** button. The radio will start buffering the currently tuned DAB or FM radio station to the SD card and will pause the playback. The sound from the loudspeaker will be muted. The display shows that the radio is in Rewind/Pause mode and also shows the current paused state. The numbers show the current playback position in the pause buffer and the total time stored.
- If the radio is paused and the buffer becomes full then the radio will automatically start to play audio again.

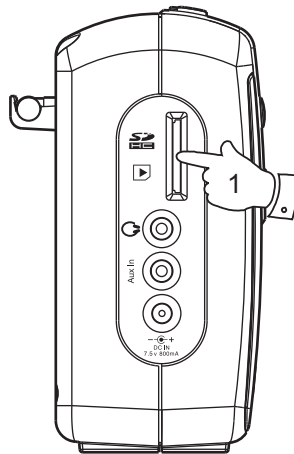


- Press and release the **PausePlus** button a second time to start playback with the current delay. The display will show the total buffer time increasing, but the time delayed will remain constant.

- To return to live listening simply press and hold the **PausePlus** button. The radio will revert to the normal station name display.

Once **PausePlus** has been cancelled, it will not be possible to go back to a previously stored part of the program.

The radio will no longer be using the SD/SDHC card to buffer the current program.

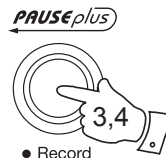


Rewind delay  
▶ 01:52/03:54

## PausePlus rewind and fast-forward - DAB and FM

- Press the Rewind or Fast Forward button to scroll forward to the item you wish to listen to. The display will show the amount of time you have scrolled back together with the maximum time you can rewind back to.

A short press steps through a few seconds, and a long press will wind back more rapidly through the stored program.

- To return to live listening press and hold the **PausePlus** button. (See paragraph 4 above).
- The rewind capacity is approximately 60 minutes.

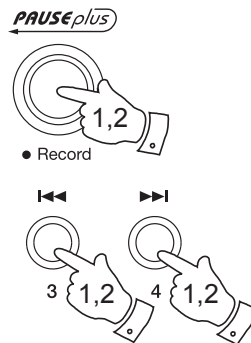

**Note:** You must stop the PausePlus feature before you can access other functions by pressing and holding the **PausePlus** button. If you attempt to use other functions on your radio while using the PausePlus feature a warning message 'Hold REWIND to stop rewinding' will be displayed.

REWIND refers to the **PausePlus** button on the radio.

Hold REWIND to  
stop rewinding

## Using an SD memory card with your radio

This section describes how to use your radio to access and playback your audio files via Secure Digital (SD, SDHC) cards. The RecordR can also record DAB or FM radio stations to SD, SDHC media.

The RecordR has been tested with a wide range of SD/SDHC cards from 512MB to 32GB capacity. Note that cards of less than 512MB capacity cannot be used. SD/SDHC memory must be formatted to use the FAT 16 or FAT 32 filing system in order to operate in the radio.

Please note that there are many different card variants available and it is not possible to guarantee that all cards will work in the RecordR. In the event that a particular card is not recognised, please try an alternative brand or capacity.

Audio formats supported for playback are MP3, WMA, WAV and AAC. Playback does not support files encoded using WMA lossless, WMA Voice, WMA 10 professional, nor files of any format which have DRM protection. For more details see 'Audio formats' page 44.

The SD card slot is located on the left hand side of the radio.


### Cautions:

To avoid possible damage to files on your SD card, place the unit in Standby mode before inserting and removing your SD card.

## Inserting and removing SD cards

1. To insert an SD card into your radio push the card label side facing towards you and gold contacts first into the card slot on the left hand side of your radio until it clicks.

To remove the card push the card in so that it clicks once more. It will then be pushed out slightly allowing removal.

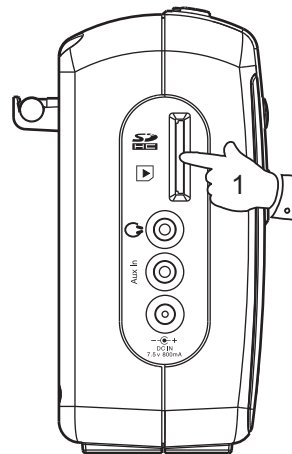


## Recording to SD/SDHC cards


Your RecordR radio has been designed to allow you to make recordings to SD/SDHC cards. You may record a current radio programme or you may use the timed record facility (see page 23).

It is possible to record onto SD/SDHC cards which already contain files written by the radio or using your computer. The recorded files will be added to those already present on the card.

**Note:** You must stop the recording before you can access other functions. If you attempt to use other functions on your radio while recording a warning message 'Hold RECORD to stop recording' will be displayed.

## Recording a radio program

1. Select the desired source for recording (DAB or FM radio). Set the volume to the required listening level (the volume of the recording will not be affected by this).
2. Insert the card on to which the recording is to be made (card label side facing towards you and gold contacts first, see proceeding page).
3. Press and hold the **Record** button. The display will show the record symbol . Recording will then start with the recording source shown on the display. Record duration may be up to 23 hours and 59 minutes. Recording will stop if the SD/SDHC card becomes full.
4. While a recording is in progress the **Play / Pause** button may be used to temporarily suspend recording. A second press of the **Play / Pause** button will resume recording.
5. In order to stop the recording press and hold the **Record** button once more. Recording will stop and a file will have been written to the SD card. The recording will be stored and the display will show 'Saved'.

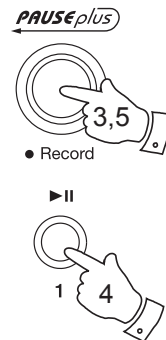

Record  BBC R2  
00:01:19

Record  BBC R2  
II 00:01:19

Record  
 BBC R2,0 Saved

Long recordings are split into files of just over 30 minutes duration to help protect recordings against power failure or accidental card removal. Recordings may also be split to accommodate DAB configuration changes made by the broadcaster.

Recording files are named using the radio station name or frequency and the date and time at which the recording began. If the recording is split, then the subsequent parts of the recording are given a sequence number to allow the radio to play them as a set, as shown:

BBC R4,21-09-2011,12-15.mp2  
BBC R4,21-09-2011,12-15\_01.mp2  
BBC R4,21-09-2011,12-15\_02.mp2  
BBC R4,21-09-2011,12-15\_03.mp2

Recordings may be played in the radio in SD card mode, or using media player programs on a computer (e.g. Windows Media Player).

## Making a recording cont.

**Note:** The SD card should only be removed when recording is stopped. Removing the SD card while recording is in progress may corrupt data on the card leading to the loss of files previously written.

Files that have been written to the SD/SDHC card are held in folders. Recordings are held in sub-folders according to the source used for the recording. 'LAST' (Last recording made), 'DAB Rec' (DAB recordings), FM Rec' (FM recordings) and 'REWIND' (used for files recorded to memory using the PausePlus feature).

The illustration shows the folders as they may appear on a PC running Windows.

## Timed recording

Timed record is available on DAB and FM to SD/SDHC cards and is provided for personal use only. When making recordings take care to observe all legal requirements and ensure that the copyright of third parties is not infringed.


Your radio has four record timers. Each timer can be set to different days and times. Recording timers may be set when the radio is in use or when it is in standby. Timers cannot be used when running on batteries as the clock is set from the DAB broadcast and does not run in battery mode.

Recording duration may be up to 23 hours and 59 minutes.

1. Insert an **SD/SDHC card** with sufficient capacity for the required recording. DAB recordings require approximately 64 megabytes per hour at a DAB data rate of 128 kilobits per second.

FM recordings require approximately 128 megabytes per hour.

**Note:** If you do not insert an SD card your recording will not take place and a warning 'No SD Card' will be shown on the display.

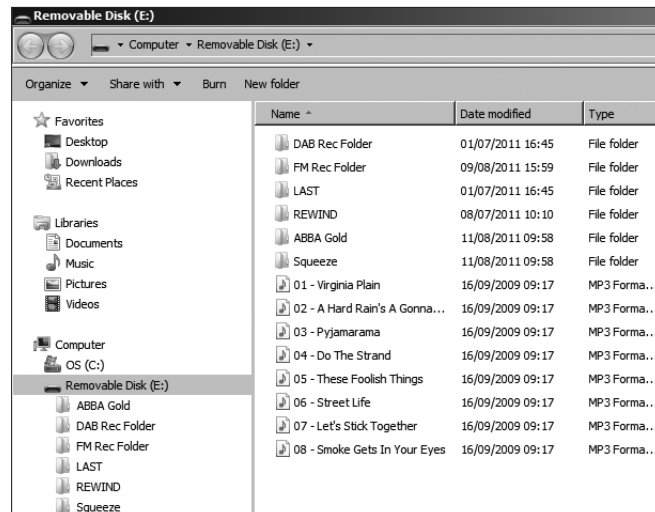


Warning message  
No SD Card



## Timed recordings cont.

2. Press and hold the **Info** button.
3. Press the **Tuning Up** or **Down** buttons until 'Recorder Set' appears on the display. Press and release the **Select** button to enter the timer record setup.
4. 'REC 1' flashes on the display.
5. Press the **Tuning Up** or **Down** buttons to select the desired record timer 1, 2, 3 or 4.
6. Press and release the **Select** button to enter the setting for the chosen timer. You will need to select the record source. Press the **Tuning Up** or **Down** buttons to select DAB, FM or OFF. If OFF is selected any current setting for that record timer will be cancelled.
7. Press and release the **Select** button. The first preset station in the list will appear on the display. Press the **Tuning Up** or **Down** buttons to select the desired preset 1-5.  
**Note:** You can only setup a record timer if a preset has been previously stored when in DAB and FM modes. Please see 'Presetting stations' page 18.
8. Press and release the **Select** button, the timer day option will flash on the display.

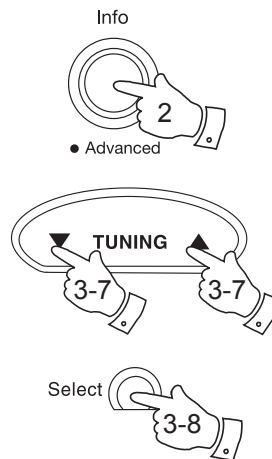

Advanced:  
- Recorder Set -

Time Record Set:  
- REC1 -

Set Rec Mode  
- FM -


Set REC PRESET  
P01 87.50MHz -

Set Rec State  
- Once -

9. Press the **Tuning Up** or **Down** buttons to choose the desired timer day option:

Daily	- will record everyday
Date	- will record on a set date
Weekdays	- will record only on weekdays
Weekends	- will record only on weekends
Weekly	- will record on a set day of the week
Once	- will record at one time only

If setting the record timer to the date option, continue with step 10 below. If setting the record timer to Weekly skip to step 14. Otherwise skip to step 15 on the next page.

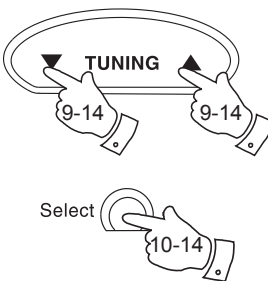

10. Press and release the **Select** button. The year will flash on the display.

Set Rec State  
-Date-

11. Press the **Tuning Up** or **Down** buttons to choose the year. Press and release the **Select** button to enter the year setting. The month will flash on the display.

Set Rec Date  
10-07-2011-

12. Press the **Tuning Up** or **Down** buttons to choose the month. Press and release the **Select** button to enter the month setting. The day will flash on the display.

Set Rec Date  
10-07-2011

 
13. Press the **Tuning Up** or **Down** buttons to choose the day. Skip to step 15 on the next page.

Set Rec Date  
10-07-2011

14. Press and release the **Select** button. The day of the week will flash on the display. Press the **Tuning Up** or **Down** buttons to choose the day.

Set Rec Weekly  
-Monday-


15. Press and release the **Select** button. The record start hour will flash on the display. To set the hour, press the **Tuning Up** or **Down** buttons. Press and hold the Tuning Up or Down buttons to advance the time quickly.



Set Rec Start  
-09:00

16. Press and release the **Select** button. The minute digits will flash on the display. To set the minutes, press the **Tuning Up** or **Down** buttons.

17. Press and release the **Select** button. The record end hour will flash on the display. To set the hour, press the **Tuning Up** or **Down** buttons.

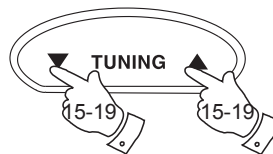

Set Rec Start  
09:30-

18. Press and release the **Select** button. The minute digits will flash on the display. To set the minutes, press the **Tuning Up** or **Down** buttons.

Set Rec End  
-11:00

19. Press and release the **Select** button to confirm your record timer settings. The display will show 'Exit with saving'.

20. Press and release the **Select** button to save your settings.

Set Rec End  
11:00-

**Note:** Once the timed record function has been set the timer record icon **R** will appear in the display when the unit is in standby. If the SD card is absent or write-protected then the radio will display **!** instead of **R**.

If your radio is in the standby mode it will switch on at the selected record time and the radio will tune to the station specified for the timed recording.

If your radio is already playing it will tune to the station specified for the timed recording.

The record icon **R** will appear on the display while the radio is recording. The radio will go to Standby after the recording is completed.


If the SD card is absent, the radio will still switch on and play the specified radio station for the duration required.

Time Record Set:  
Exit with saving

09:00 R  
10-07-2011


## View record timers

1. Press and hold the **Info** button.
2. Press the **Tuning Up** or **Down** buttons until 'Recorder Set' shows on the display. Press and release the **Select** button to enter the timed record setup.

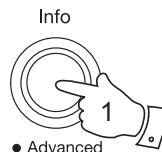


3. Press the **Tuning Up** or **Down** buttons to view timer 1, 2, 3 or 4.
4. Press and release the **Select** button to cycle through each of the settings for the chosen timer.

You may use the Tuning Up and Down buttons to modify any particular setting if desired, using the Select button to enter the modification.

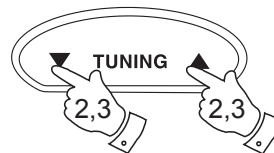

## Disabling record timers

1. To disable a record timer enter the timed record setup (see page 24, step 2 to 4) and press the **Tuning Up** or **Down** buttons until the desired record timer is highlighted on the display. Press and release the **Select** button.
2. Press the **Tuning Up** or **Down** buttons until 'OFF' is shown on the display. Press and release the **Select** button. The chosen timer will now be disabled.

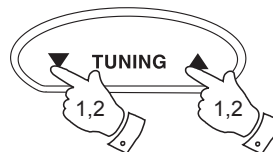

## Cancelling a recording

1. To cancel a timed recording whilst recording is in progress press and hold the **Record** button. The recording will be stored and 'Saved' will show on the display.

**PAUSE<sub>plus</sub>**



## Playing files - SD

1. Press the **On / Off** button to switch on your radio.
2. To select the SD mode press and release the **Band** button until the SD mode is shown on the display. Your radio will start playing from the SD card. It may take several seconds to read the data on the SD/SDHC card.
3. To pause playing, press the **Play / Pause** button. To resume playing, press the **Play / Pause** button again.
4. To Stop play, press the **Stop** button. The total number of files and folders on the media and the stop symbol will be displayed.

If you put the unit into standby mode without pressing the Stop button, then the next time the unit is switched on it will resume playback from the beginning of the previously played track.

If a different card is inserted, the radio will playback files in the following order.

- LAST folder \*
- DAB Rec folder \*
- FM Rec folder \*
- User added folders in numeric-alpha order

\* These folders are created by the radio if it has made any recordings to the card.


## Display modes - SD

1. Your radio has a range of display options when in SD mode. Press and release the **Info** button to cycle through the various options.


MP3, WMA, AAC - title, album, artist, genre, folder, audio type, bit rate  
DAB/FM files - file name, scrolling text, folder name, audio type and bit rate.

**Note:** The information displayed will vary according to the file type.


*If you need any further advice, please call our Technical Helpline on :-  
020 8758 0338 (Mon-Fri)*

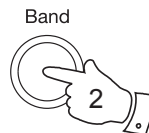

SD  
Reading...

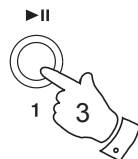


SD ▶  
File:04 - Invisib

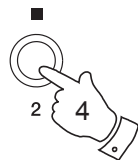

SD II  
File:04 - Invisib

SD ■  
Total: 0010 00127

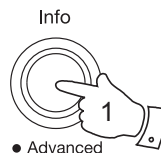


● Advanced

SD ▶  
001 0001 00:20

## File navigation

1. While the SD card is playing, press either the **Fast-forward** or **Rewind** buttons to change to the desired file. The file number will be updated in the display. If there is more than one folder, when all files in the current folder have been played the next folder will be played.

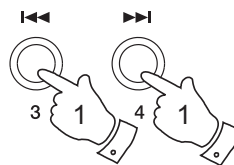


SD ▶ |  
001 J002 00:10

SD ◀ |  
001 J001 00:10

## Search function

1. While the SD card is playing, press and hold the **Fast-forward** or **Rewind** buttons. Release the button when the desired part of the current file is reached.

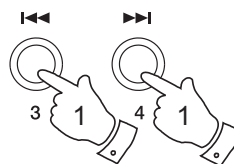

SD ▶▶ |  
001 J002 00:30

SD ◀◀ |  
001 J001 00:10

## Folder navigation

You may choose to organise your music files using folders for artist and album selection. See page 44 for folder and file name information.

1. Press and hold the **Play / Mode** button to access the folders on your SD/SDHC card. The top line shows the current folder and the lower line shows the folders/or files contained within this folder. Your folders/or files will be in numeric-alpha order.

Pressing the **Play / Mode** button if you are in a sub folder will take you to the folder at a higher level.

2. Press the **Tuning Up** or **Down** buttons to navigate through the folder/or file list.


3. To enter a lower level folder press the **Select** button.

When the file you want to play is displayed, press the **Select** button to play your chosen file.

Play Mode



□ Root  
□ Tangerine Dre

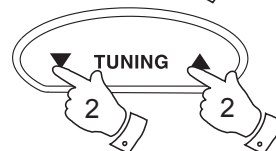


□ Tangerine Dre  
J Invisible limit

Select



## Repeat a single file

1. While the SD file is playing, press the **Play / Mode** button until the repeat single file symbol **C1** appears in the display. The current file will be repeated.

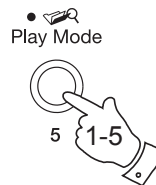

SD ▶ C1  
♪ Invisible limit

## Repeat Folder

2. While the SD file is playing, press the **Play / Mode** button until the repeat folder symbol **CF** appears in the display. All of the files in the folder will be played repeatedly.

SD ▶ CF  
♪ Invisible limit

## Repeat all files

3. While the SD file is playing, press the **Play / Mode** button until the repeat all files symbol **CA** appears in the display. All of the files on the SD card will be played repeatedly.

SD ▶ CA  
♪ Invisible limit

## Shuffle tracks

4. While the SD file is playing, press the **Play / Mode** button until the shuffle symbol **XC** appears in the display. The files will be shuffled.

SD ▶ XC  
♪ Invisible limit

## Play file introduction


5. While the SD card is playing, press the **Play / Mode** button until the file introduction symbol **Int** appears in the display. The first 10 seconds of each file will be played. When the desired file is reached, press the **Play / Mode** button to revert to normal play mode.

SD ▶ Int  
001 ♪001 00:10

## SD memory card information - DAB or FM

In DAB or FM mode you can display the capacity available on an SD/SDHC card. This is useful if you wish to use the card for recordings.

1. Ensure you have the SD/SDHC card inserted into the radio and that your radio is switched on.
2. Press and hold the **Info** button.
3. Press the **Tuning Up** or **Down** buttons until 'SD Information' appears on the display.
4. Press and release the **Select** button to view the SD card information.
5. Press the **Tuning Up** or **Down** buttons to view the total space on the SD card or to view the free space remaining.

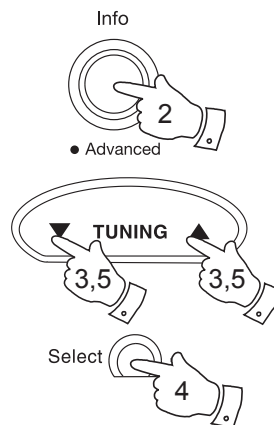

Advanced:  
SD Information

SD Information:  
Total 07.39GB

SD Information:  
Free 06.22GB

## SD memory card information - SD

In SD mode you can display the number of files and folders that are present on an SD card.

1. Ensure your radio is SD mode.
2. Follow steps 2-4 above to view SD memory card information.

SD Information:  
Total 001 /001

 




## Setting alarm times

Your radio has four alarms which can be set to wake you to DAB, FM radio, SD card or beep type alarm. Each alarm can be set to sound once, daily, on a specific date, weekdays, weekends or weekly. The alarms may be set while the unit is in Standby mode or while playing. Alarms cannot be used when running on batteries as the clock is reset from the DAB broadcast and does not run in battery mode.

Note: If no buttons are pressed for several seconds, your radio will exit the alarm setup.

1. Press and hold the **Info** button. Press the **Tuning Up** or **Down** buttons until 'Alarm Set' shows on the display.
2. Press and release the **Select** button to enter the alarm setup. Alarm 1' flashes on the display.
3. Press the **Tuning Up** or **Down** buttons to select the desired alarm timer 1, 2, 3 or 4.
4. Press and release the **Select** button. The alarm status will flash on the display.
5. Press the **Tuning Up** or **Down** buttons to select On or Off. If 'Off' is selected any current setting for that alarm will be cancelled.
6. Press and release the **Select** button. The alarm hour will flash on the display.
7. Press the **Tuning Up** or **Down** buttons to set the alarm hour. Press and hold the Tuning Up or Down buttons to advance the time quickly.

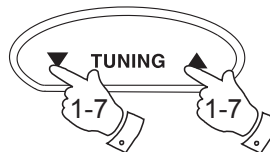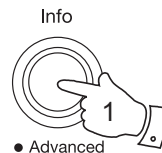

Advanced:  
-Alarm Set-

Alarm Set:  
-Alarm 1-

Alarm 1: On/Off  
-On-

Alarm 1: Time  
-06:00-

8. Press and release the **Select** button. The minute digits will flash on the display.

9. Press the **Tuning Up** or **Down** buttons to set the alarm minute.

10. Press and release the **Select** button. The alarm day option will show on the display.

11. Press the **Tuning Up** or **Down** buttons to select the required day option.

- |          |                                       |
|----------|---------------------------------------|
| Daily    | - will sound everyday                 |
| Date     | - will sound on a set date            |
| Weekdays | - will sound only on weekdays         |
| Weekends | - will sound only on weekends         |
| Weekly   | - will sound on a set day of the week |
| Once     | - will sound at one time only         |

 
- If setting the alarm to the date option, continue with step 12 below.
- If setting the alarm to Weekly skip to step 17 otherwise skip to step 18 overleaf.

12. Press and release the **Select** button. The year will flash on the display.


13. Press the **Tuning Up** or **Down** buttons to choose the year. Press and release the **Select** button to enter the year setting. The alarm month will flash on the display.

14. Press the **Tuning Up** or **Down** buttons to choose the month.

15. Press and release the **Select** button to enter the month setting. The alarm day will flash on the display.



Alarm 1: Time  
06:30-

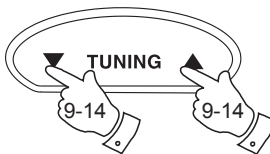

Alarm 1: Day  
-Date-

Alarm 1: Day  
10-07-2011-

Alarm 1: Day  
10-07-2011

Alarm 1: Day  
-10-07-2011

16. Press the **Tuning Up** or **Down** buttons to choose the alarm day. Skip to step 18 below.

17. Press and release the **Select** button. The day of the week will flash on the display. Press the **Tuning Up** or **Down** buttons to choose the desired day of the week.

18. Press and release the **Select** button. The alarm source option will show on the display.

19. Repeatedly press the **Tuning Up** or **Down** buttons to choose the desired alarm source (DAB, FM, SD or Buzzer).

If setting the alarm to the radio option, the radio alarm may be set to any of the stations which have been stored as presets.

Press the **Tuning Up** or **Down** buttons to choose from preset 1-5 on the display.

**Note:** That you can only set the alarm to use a preset which has already been stored. Please see 'Presetting stations' page 18.

20. Press and release the **Select** button to confirm your alarm settings. The display will show 'Exit with saving'. Press and release the **Select** button to save your settings.


Active alarms are indicated in the display by the alarm symbol.

When the alarm activates it will start softly and gradually increase in level.

The final volume is set by the volume control.

**Note:** It is not possible to lower the volume of your radio fully while playing an alarm. This is because your radio modifies the volume control behaviour during an alarm so that an alarm can still be heard even if the control was accidentally set to minimum.

**Important:** If using the SD card for the source for the alarm, then be sure to have inserted an SD card see page 21.

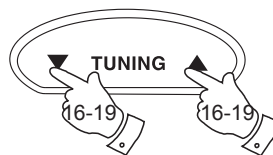

Alarm 1: Day  
- Monday -

Alarm 1: Mode  
- DAB -


Alarm 1: Mode  
- P01 BBC Radio 2 -

Alarm 1:  
- Exit with saving -

09:00  
10-07-2011

## To view the alarm settings

1. Press and hold the **Info** button.
2. Press the **Tuning Up** or **Down** buttons until 'Alarm Set' shows on the display. Press and release the **Select** button to enter the alarm setup.

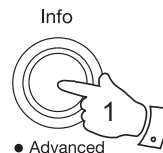


Alarm Set:  
-Alarm 1-


3. Press the **Tuning Up** or **Down** buttons to view alarms 1, 2, 3 or 4.

4. Press and release the **Select** button to cycle through each of the settings for the chosen alarm.

You may use the Tuning Up and Down buttons to modify any particular setting if desired, using the Select button to enter the modification.

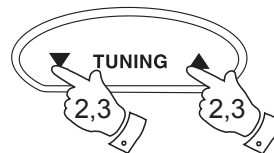

Alarm 1: Time  
06:30-

 

## Cancelling alarms

1. While an alarm is sounding it can be cancelled by pressing the **On/Off** button.



## Snooze function

1. When the radio, SD or buzzer alarm sounds, pressing any button (except the On /Off button) will silence the alarm for 5 minutes.


The Snooze symbol **z** and the alarm symbol will flash on the display. This sequence can be repeated during the 60 minute alarm period.


2. To cancel the Snooze function, press the **On / Off** button.




## Sleep function

Your radio can be set to turn off after a preset time has elapsed. The sleep setting can be adjusted between 5 and 120 minutes in 5 minute increments. Ensure your radio is switched On.


1. When using your radio, press and hold the **Info** button.
2. Press the **Tuning Up** or **Down** buttons until 'Sleep Set' shows on the display.
3. Press and release the **Select** button to enter sleep menu.
4. Press the **Tuning Up** or **Down** buttons to select desired sleep time. The sleep setting will increase in 5 minute increments from 5 minutes up to 120 minutes. A further press will cause the sleep timer to be set to OFF which will cancel the sleep function.
5. Press and release the **Select** button. The display will exit the sleep options. The sleep symbol  will show on the display.
6. Your radio will switch off after the preset sleep time has elapsed.
7. To cancel the sleep timer and switch off your radio before the chosen sleep time has elapsed, press the **On / Off** button.  
To cancel the sleep timer without switching off your radio, choose the 'OFF' setting in step 4.

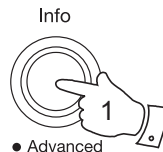

Advanced:  
Sleep Set

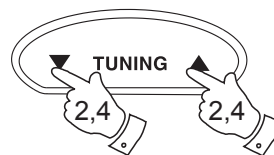

Sleep time set  
30 Mins

 


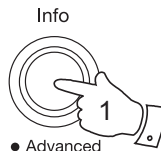
AbsRock S  
Home of the Gre




## Nap timer

The Nap timer facility allows you to set the radio to wake you after a pre-determined interval (up to 2 hours) without needing to set the alarms. You may set the nap timer while the unit is in standby or while playing. The nap timer cannot be used when running on batteries.


1. Press and hold the **Info** button.
2. Press the **Tuning Up** or **Down** buttons until 'Nap Set' shows on the display.
3. Press and release the **Select** button to enter setup menu.
4. Press the **Tuning Up** or **Down** buttons to select desired nap time. The nap setting will increase in 5 minute increments from 5 minutes up to 120 minutes. A further press will cause the nap timer to be set to OFF which will cancel the nap function.
5. Press and release the **Select** button. The display will exit the nap options. The nap symbol  will show on the display when the unit is in Standby.
6. When the selected nap timer has elapsed, the radio buzzer will sound.
7. To cancel the buzzer when it sounds press the **On / Off** button.  
To cancel the nap timer without switching off your radio, choose the 'OFF' setting in step 4.



Advanced:  
Nap Set

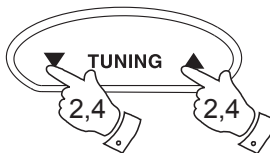

Nap time set  
30 Min

 


09:00 N  
10-07-2011



## Contrast / viewing angle control

The contrast of the display can be adjusted while the unit is playing. The adjustment also changes the angle from which the display can best be seen.

1. Ensure your radio is switched on.
2. Press and hold the **Info** button.
3. Press the **Tuning Up** or **Down** buttons until 'Contrast' appears on the display.
4. Press and release the **Select** button.
5. Press the **Tuning Up** or **Down** buttons to adjust the contrast. The contrast level indication on the screen will change at the same time.
6. Press and release the **Select** button to confirm the setting.

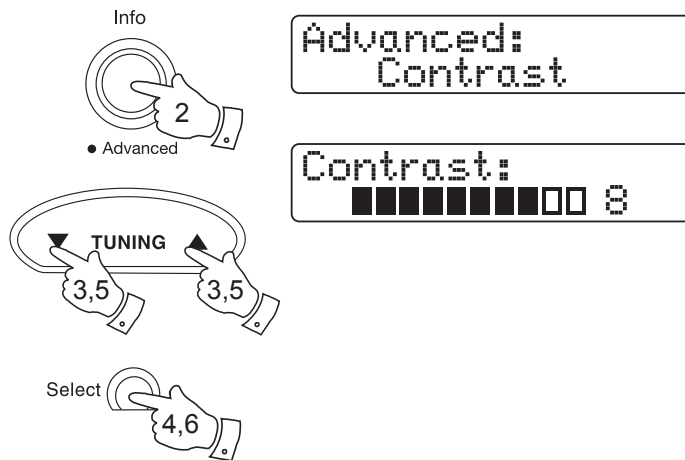



## Display backlight dimmer

 


The brightness of the display can be adjusted when the radio is in use and when it is in standby. If you use the unit in a bedroom, you may prefer a lower brightness level than the standard setting. There are three brightness levels and an almost off 'night time' setting.

1. When the radio is in standby press and release the **Info** button to adjust the brightness level.
2. To adjust the display brightness when the radio is in use, press and hold the **Info** button.
3. Press the **Tuning Up** or **Down** buttons until 'Backlight' appears on the display. Press and release the **Select** button.
4. Press the **Tuning Up** button to increase the brightness and the **Tuning Down** button to decrease brightness.
5. Press and release the **Select** button to confirm the setting.

**Note:** When using the radio powered by the batteries, the display backlight will be switched on for approximately 10 seconds when any button is pressed.

## Clock display

1. When your radio is in standby mode the time and date will be displayed. The time is always shown using a 24 hour clock format.

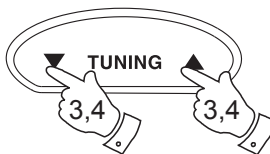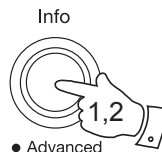

Advanced:  
Backlight

Backlight:  
■■■ 2

09:00  
10-07-2011

## System reset


If your radio fails to operate correctly, or some digits on the display are missing or incomplete carry out the following procedure.

1. Ensure your radio is switched on. Press and hold the **Info** button.
2. Press and release the **Tuning Up** or **Down** buttons until 'Factory Reset' appears on the display. Press and release the **Select** button.
3. Press and release the **Tuning Up** or **Down** buttons until 'Yes' appears on the display. If you do not wish to carry out a system reset, highlight 'No' and then press the **Select** button. The display will revert to the previous display.
4. With 'Yes' displayed, press and release the **Select** button. A full reset will be performed. The station list and presets will be erased. Timers and alarms will be cancelled and sleep and nap timer settings will be set to their default values. The display will show 'Welcome ROBERTS' and after a few seconds a station scan search will be performed automatically. The display will show progress of the station search. The number on the right of the display is the number of stations that have been found.

In case of malfunction due to electrostatic discharge, reset the product as above to resume normal operation.

It may be necessary in some cases to disconnect the mains power and remove batteries, then reconnect power after 10 seconds.

If a problem persists our technical staff would be pleased to offer any assistance on operating the radio. Our technical helpline number is 020 8758 0338.

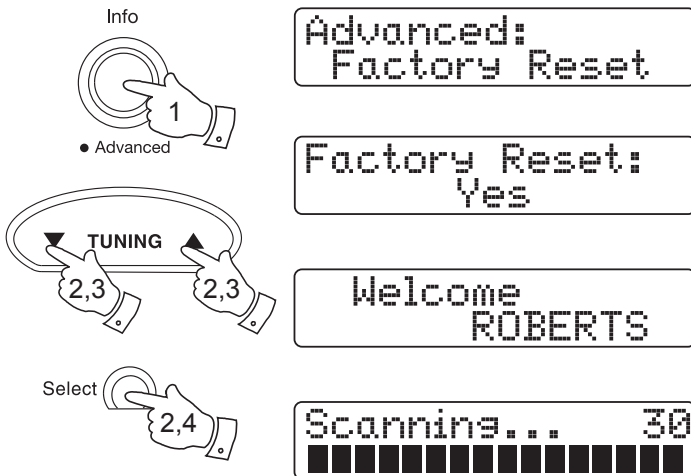


## Headphone socket

A 3.5mm stereo **Headphone Socket** located on the left hand side of your radio is provided for use with either headphones or an earpiece. Inserting a plug automatically mutes the internal loudspeaker.

Please be aware that the sensitivity of headphones can vary widely. We therefore recommend setting the volume to a low level before connecting headphones to the radio.


**IMPORTANT:** Excessive sound pressure from earphones and headphones can cause hearing loss.

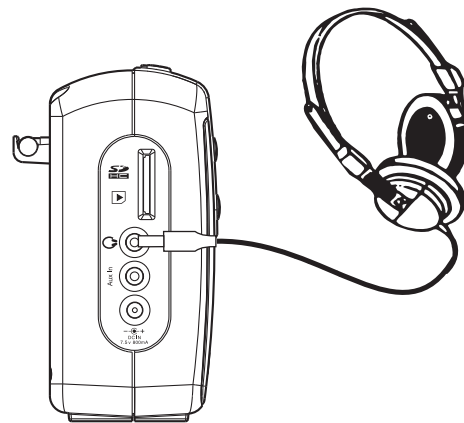

## Auxiliary Input (Line in) socket

A 3.5mm stereo **Auxiliary Input socket** is provided on the left hand side of your radio to permit an audio signal to be fed into the unit from an external audio device such as iPod, MP3 or CD player.


1. Connect a stereo or mono audio source (for example, iPod, MP3 or CD player) to the **Auxiliary Input socket** (marked "Aux In").
2. Press and release the **Band** button until 'AUX' is selected on the display. Auxiliary In mode is only available when a plug is inserted into the Auxiliary Input socket.
3. Adjust the **Volume control** on your iPod, MP3 or CD player to ensure an adequate signal and then adjust the volume on the radio for comfortable listening.

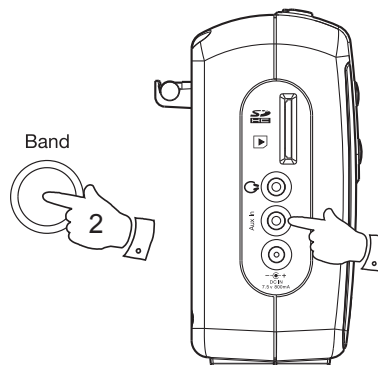

## Software version

The software display cannot be altered and is just for your reference. Ensure your radio is switched on.

1. Press and hold the **Info** button.
2. Press the **Tuning Up** or **Down** buttons until 'SW Version' appears on the display.
3. Press and release the **Select** button to view the software information.
4. After several seconds your radio will exit the menu.

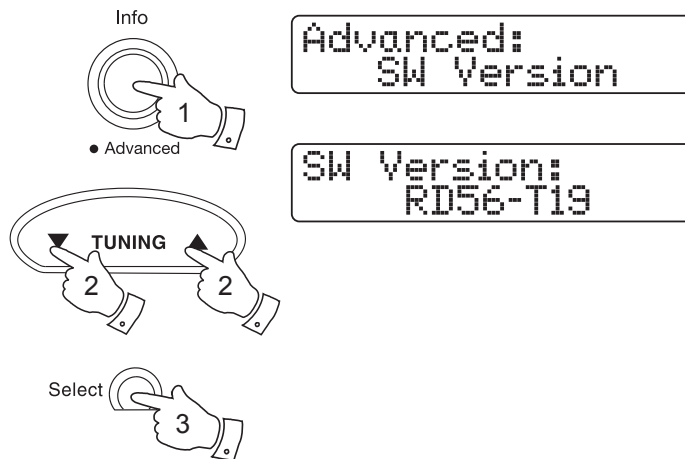

## Audio formats

### Bit-Rates

The following table summarises the maximum supported bit-rates for the various audio formats that are playable on your radio. Higher rates may be playable in some cases but performance of the product may be affected.

Codec	Maximum supported rate
AAC (LC)	320 kbits/sec
MP3	320 kbits/sec
WAV <sup>(1)</sup>	1536 Mbits/sec
WMA <sup>(2)</sup>	320 kbits/sec

All codecs support 2-channel (stereo) coded files only.

All codecs support sample rates up to 48 kbits/sec (includes 32 and 44.1 kbits/sec).

SD/SDHC playback supports MP3 and WMA formats only.

Files which have Digital Rights Management (DRM) protection applied will not be playable on your radio.

(1) The maximum supported bit-rate is for 48 kHz sampling, 2 channels and 16-bits per sample.

There are many variants of WAV format. 16 bit PCM stereo is supported. Most other variants are not supported.

(2) WMA Lossless, WMA Voice, WMA 10 Professional, and files which have DRM protection are not supported.

### SD/SDHC card information

Listed here are guidelines for SD/SDHC cards to be used in your radio.

1. Card capacity must be between 512MB and 32GB.
2. Card must be FAT16 or FAT32 formatted.
3. We recommend less than 500 files or folders are placed in the root folder.
4. We recommend less than 10,000 files are placed on a card.
5. We recommend that folders are nested less than 10 levels deep.
6. We recommend that file and folder names are less than 128 characters long.
7. Actual limits (points 3, 4, 5, 6) are higher and are set by the card format.

*If you need any further advice, please call our Technical Helpline on :-  
020 8758 0338 (Mon-Fri)*

## Cautions

Do not allow this radio to be exposed to water, steam or sand. Do not leave your radio where excessive heat could cause damage such as in a parked car where the heat from the sun can build up even though the outside temperature may not seem too high. It is recommended that the DAB band be used wherever possible as better results in terms of quality and freedom from interference will usually be obtained than on the the FM band.

- The name plate is located on the rear of the unit.



- Your radio should not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the radio.
- It is recommended to operate the product such that there is a minimum distance (10cm recommended) to adjacent objects in order to ensure good ventilation.
- The ventilation of the product should not be restricted by covering it or its ventilation openings with items such as newspapers, tablecloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the product.
- It is recommended to avoid using or storing the product at extremes of temperature. Avoid leaving the unit in cars, on window sills, in direct sunlight etc.

## Specifications

### Power Requirements

Mains AC 100 ~ 240V 50/60Hz (Adaptor)  
Batteries 4 x LR20 (D size)

### Battery Life

Up to 120 hours of listening for 4 hours a day at normal volume using alkaline cells according to the operating mode. Longer playback time may be achieved when using SD playback or Auxiliary input modes.

### Frequency Coverage

FM 87.5-108MHz  
DAB 174.928 - 239.200MHz

## Circuit Features

Loudspeaker 75mm  
Output Power 0.8 Watts

Headphone socket 3.5mm dia  
Auxiliary Input socket 3.5mm dia

Aerial System FM Telescopic aerial  
DAB Telescopic aerial

The Company reserves the right to amend the specification without notice.

## Guarantee

This instrument is guaranteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

N.B. Damaged or broken telescopic aerials will not be replaced under guarantee.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts' dealer will be able to attend to any defect quickly and efficiently but should it be necessary the dealer will return the instrument to the Company's service department for attention. In the event that it is not possible to return the instrument to the Roberts' dealer from whom it was purchased, please contact Roberts Radio Technical Services at the address shown overleaf.

These statements do not affect the statutory rights of a consumer.

## ROBERTS RADIO TECHNICAL SERVICES

97-99 Worton Road  
Isleworth  
Middlesex  
TW7 6EG

Technical Helpline :- 020 8758 0338 (Mon-Fri during office hours)

Web site: <http://www.robertsradio.co.uk>

