

ROBERTS

Splash Mini

DAB / DAB+ / FM RDS Shower Radio with Bluetooth playback



DAB
Digital Audio Broadcasting

DAB+

+ Digital
Radio

Bluetooth™

 
Please read this manual before use

Contents

<i>Controls</i>	2-3	<i>Scan sensitivity setting - FM</i>	19
<i>Battery operation</i>	4	<i>Presetting stations</i>	20
<i>Display icons</i>	5	<i>Recalling a preset station</i>	21
<i>Wall mounting</i>	5	<i>Bluetooth mode</i>	22-26
<i>DAB / FM wire aerial (inside the battery compartment)</i>	5	<i>Connecting Bluetooth devices</i>	23
<i>Operation via an AC adaptor (not supplied)</i>	6	<i>Playing audio files in Bluetooth mode</i>	24
<i>Using the radio for the first time</i>	7	<i>Connecting and disconnecting a Bluetooth device</i>	25
<i>Operating your radio and selecting a station - DAB</i>	8	<i>Display options - Bluetooth mode</i>	26
<i>Secondary services - DAB</i>	9	<i>Display backlight</i>	27
<i>Display options - DAB</i>	10-11	<i>Software version</i>	28
<i>Finding new stations - DAB</i>	12	<i>System reset</i>	29
<i>Manual tuning - DAB</i>	13	<i>Carrying strap</i>	30
<i>Dynamic Range Control (DRC) - DAB</i>	14	<i>Cautions</i>	31
<i>Prune stations - DAB</i>	15	<i>Specifications</i>	32
<i>Operating your radio - FM auto-tune</i>	16	<i>Circuit features</i>	32
<i>Manual tuning - FM</i>	17	<i>Guarantee</i>	34
<i>Display options - FM</i>	18		


Controls (front view)

1. Loudspeaker
2. Volume Up button
3. Band button
4. Volume Down button
5. Preset 1 button
6. Preset 2 / Previous button
7. LCD display
8. Preset 3 / Play / Pause button
9. Info / Menu button
10. Preset 4 / Next button
11. Tuning Up button
12. Tuning Down button
13. On / Off button
14. Select / Bluetooth Pair button

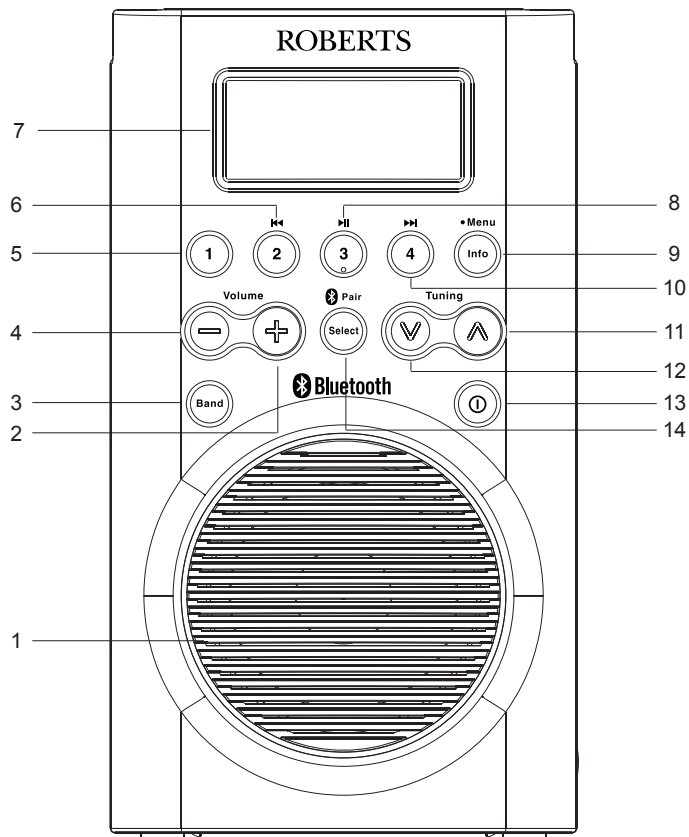

Controls (rear)

 
- 15. DC input socket
- 16. Slot for wall mounting
- 17. Carry strap location x 2
- 18. USB socket for service use only (inside battery compartment)
- 19. Battery compartment
- 20. DAB / FM wire aerial (inside battery compartment)
- 21. Battery compartment door

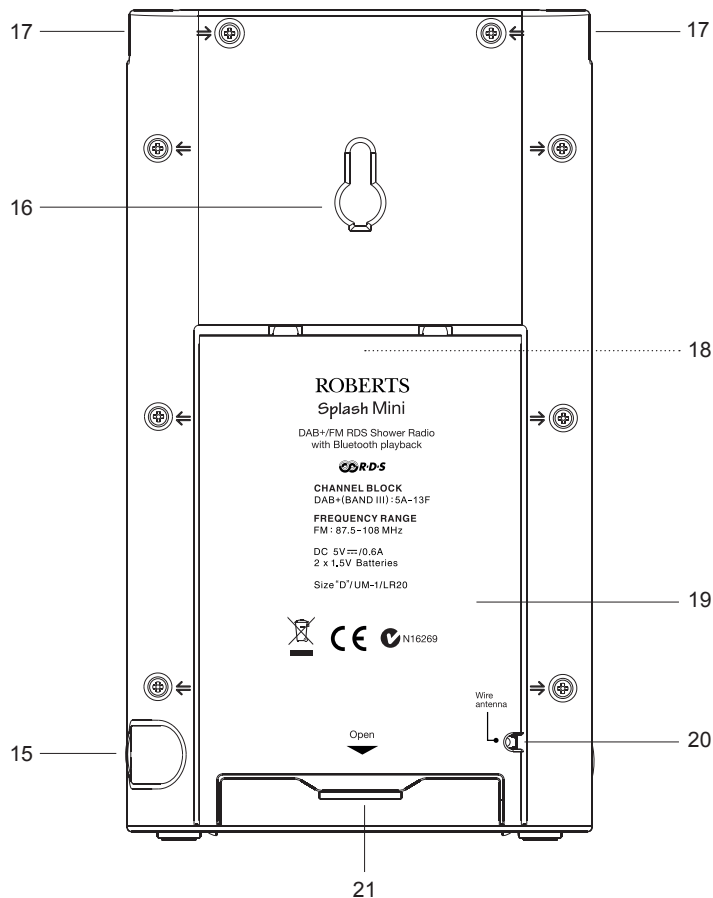

Battery operation


1. Remove the battery cover on the rear of the unit by pushing the battery cover door in the direction of the arrow and then lift up the battery compartment cover.
2. Insert two LR20 (D size) batteries into the spaces in the compartment. Take care to ensure all batteries are inserted with the correct polarity as shown inside the battery compartment. Replace the battery cover and close the battery cover door.
3. Reduced power, distortion and a 'stuttering' sound are all signs that the batteries may need replacing. Batteries should be replaced when the battery low indicator  shows on the display.
4. If the radio is not to be used for any extended period of time it is recommended that the batteries be removed from the radio.

 IMPORTANT: The batteries should not be exposed to excessive heat such as sunshine, fire or the like. After use, disposable batteries should if possible be taken to a suitable recycling centre. On no account should batteries be disposed of by incineration.

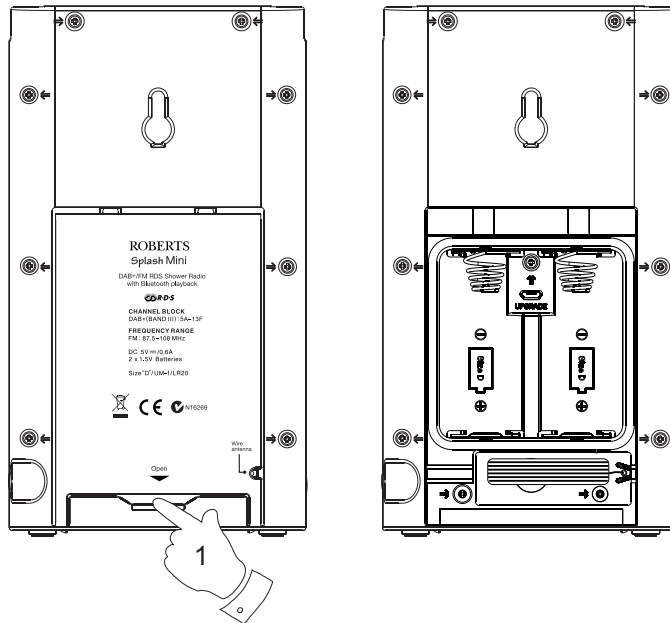

Display icons

 - a. Low battery indicator
- b. DAB indicator
- c. FM indicator
- d. Signal strength indicator
- e. Text display

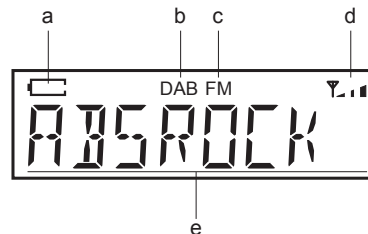

Wall mounting

 
The Splash Mini has the option of being wall mounted using a keyhole slot on the back of the radio.

You should choose a suitable fixing depending on the construction of the wall to which the radio will be fixed. Before wall mounting the radio ensure that the fixing is secure and is able to support the weight of the radio.

DAB / FM wire aerial (inside the battery compartment)

1. Release the catch securing the rear battery compartment door of your radio and then lift up the battery compartment cover.
2. Take out the wire DAB / FM wire aerial and extend and position for the best reception.

Ensure the wire is threaded through the slot in the edge of the battery cover.

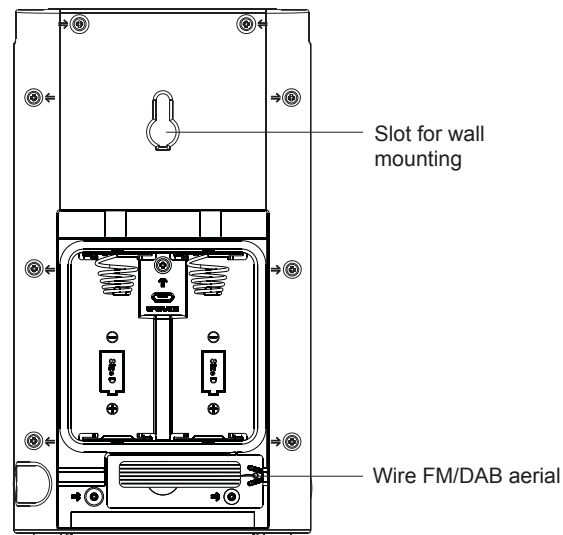


Operation via an AC adaptor (not supplied)

The AC adaptor for use with your Splash Mini radio should provide 5 volts DC output at 600mA, centre pin positive.



Note: Roberts does not supply a mains adaptor for this radio.

 1. Lift back the rubber cover and Insert the adaptor plug into the DC socket located on the right hand side of your radio.
 2. Plug the adaptor into a standard mains socket outlet. Whenever the adaptor is used the batteries are automatically disconnected.
- **IMPORTANT:** The mains adaptor is used as the means of connecting the radio to the mains supply. The mains socket used for the radio must remain accessible during normal use. In order to disconnect the radio from the mains completely, the mains adaptor should be removed from the mains socket outlet completely.
 - **IMPORTANT:** The Splash Mini radio should not be used with the mains adaptor in a bathroom, shower or poolside environment. Use on batteries only.

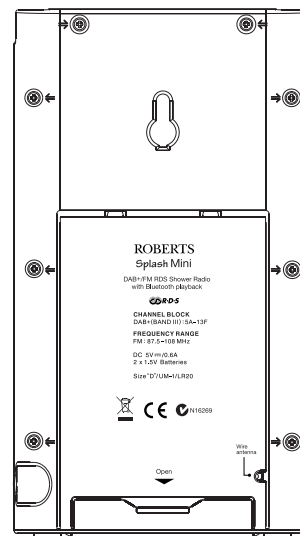

Using the radio for the first time

  1. Carefully fully extend the wire aerial located on the rear of your radio (inside the battery compartment). Place the wire antenna so that it is as straight as possible extending either above or below the radio.
2. Press the **On / Off** button to switch on your radio.
3. If this is the first time that the radio has been used a scan of the Band III DAB channels will be carried out. If the radio has been used before, the last used station will be selected.
4. During the scanning process the display will show the progress of the station search. The number on the right of the display is the number of stations that have been found.
5. When the scan is completed the first station (in numeric-alpha order 0...9, A...Z) will be selected. The first station in the list of stations found during scanning will be played. The display will show the station name and the current time will be set. If the station list is still empty after the scan your radio will display 'No DAB Station' and the clock time will not be set.
6. If no signals are found then it may be necessary to relocate your radio to a position giving better reception. You should then carry out a scan to find stations as described on page 12.
- Your radio has an indicator  on the display to indicate the strength of the DAB radio signal being received.
7. Adjust the volume as needed using the **Volume** buttons.



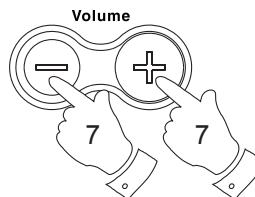



Operating your radio and selecting a station - DAB

1. Press and release the **On/Off** button to switch on your radio.
2. Press and release the **Band** button until the DAB mode is selected. The display will show the name of the radio station currently selected.
3. Press the **Tuning Up** or **Down** buttons to step through the list of available stations.
4. When the desired station name appears on the display, press and release the **Select** button to select the station. The radio will select the new station.



Note: If after selecting a station the station does not connect it may show 'OFFAIR' it may be necessary to relocate your radio to a position giving better reception.

    5. Adjust the **Volume** to the required setting.
6. Approximately 10 seconds after tuning to a new radio station, if the current time is set the display will revert to showing the current time.
7. To switch off the radio press and release the **On/Off** button.

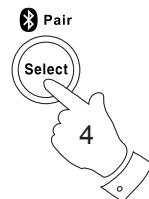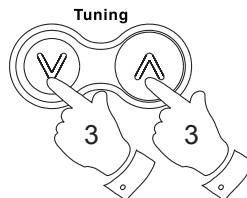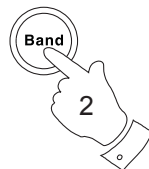

Secondary services - DAB

  1. Certain radio stations have one or more secondary services associated with them. If a station has a secondary service associated with it then the secondary service will then appear immediately after the primary service as you press the **Tuning Up** button.
2. To tune to the secondary service, press and release the **Select** button. Most secondary services do not broadcast continually and if the selected service is not available, the radio will re-tune to the associated primary service.

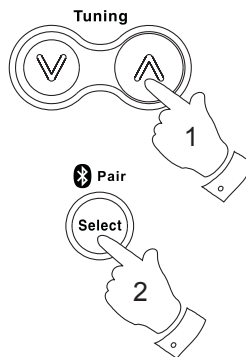

Presetting stations

In many locations there will be a large number of DAB radio stations to choose from and you may find it convenient to store a selection of those that you frequently listen to in the preset station memories in your radio. There are 8 presets in total, 4 for DAB and 4 for FM. Presets are remembered by your radio in the event of a power failure.

The procedure for setting presets and using them to tune stations is the same for FM and DAB modes and is described on page 20.



Display options - DAB

Your radio has a range of display options when in DAB mode:-

1. Press and release the **Info / Menu** button to cycle through the various options. All display options except the scrolling text display will revert to the clock display after about 10 seconds.



- | | |
|--------------------|---|
| a. Time | Displays the current time. |
| b. Date | Displays the current date. |
| c. Station name | Displays the name of the DAB station being listened to. |
| d. Scrolling text | Displays scrolling text messages such as artist/track name, phone in number, etc. |
| e. Signal strength | Displays the signal strength for the station being listened to. The minimum signal marker shows the minimum signal strength required for clear DAB reception. |

  

Display options DAB - cont

f. Programme type Displays the type of station being listened to e.g. Pop, Classic, News, etc.



 
g. Multiplex Name Displays the name of the DAB multiplex to which the current station belongs.



h. Frequency Displays the frequency for the currently tuned DAB station.



i. Bit rate Displays the digital audio bit rate for the currently tuned DAB station.





j. Audio type Displays the audio type for the currently tuned DAB station.



Finding new stations - DAB

From time to time, new DAB radio stations may become available. Or you may have moved to a different part of the country. In this case you may need to cause your radio to scan for new stations.

 
 
1. Press and release the **On/Off** button to switch on your radio.
2. If needed, press and release the **Band** button until the DAB mode is selected.
3. To scan for stations, **press and hold** the **Info / Menu** button. The DAB menu will show on the display.
4. Press the **Tuning Up** or **Down** buttons until the display shows 'SCAN'.
5. Press and release the **Select** button. Your radio will perform a scan of the Band III DAB channels.

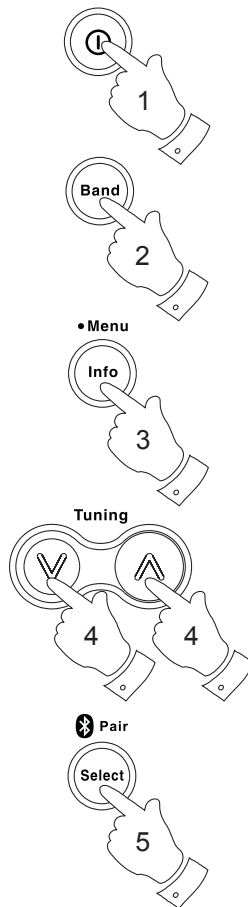

Manual tuning - DAB

Manual tuning allows you to tune your radio to a particular DAB frequency in Band III. Any new stations found will be added to the station list. This function can also be used to assist the positioning of the aerial or the radio to optimise reception for a specific channel or frequency. Note that UK DAB stations are located in the range of channels 11B to 12D.

1. **Press and hold the *Info / Menu* button.** The DAB menu will show on the display.
2. Press the ***Tuning Up*** or ***Down*** buttons until the display shows '**MANUAL**'. Press and release the ***Select*** button to enter the manual tune mode.
3. Press the ***Tuning Up*** or ***Down*** buttons to select the desired DAB channel.
4. Press and release the ***Select*** button to tune to the chosen frequency.
5. If a signal is present, this will be indicated on a signal strength display. The minimum signal marker (|) shows the minimum signal strength needed for good DAB reception. The signal indicator chevrons go up or down showing the changing signal strength as you adjust the aerial or your radio position. Press and release the ***Select*** button. After several seconds the display will return to the normal radio display.

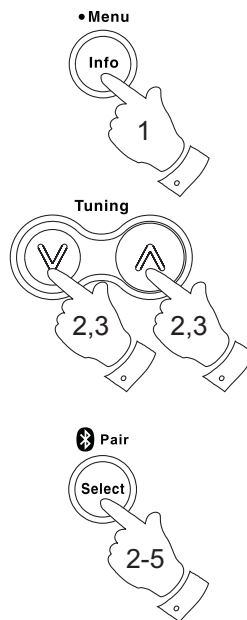  

Dynamic Range Control (DRC) - DAB



The DRC facility can make quieter sounds easier to hear when your radio is used in a noisy environment.

There are three levels of compression:

DRC OFF	No compression applied. (default)
DRC HIGH	Maximum compression applied.
DRC LOW	Medium compression applied.

1. Press and release the **On/Off** button to switch on your radio.
2. Press and release the **Band** button until the DAB mode is selected.
3. **Press and hold** the **Info / Menu** button. The DAB menu will show on the display.
4. Press the **Tuning Up** or **Down** buttons until 'DRC' appears on the display. Press and release the **Select** button. The display will show the current DRC value.
5. Press the **Tuning Up** or **Down** buttons to select the required DRC setting (default is OFF).
6. Press and release the **Select** button to confirm the setting. After several seconds the display will return to the normal radio display.

  Note: Not all DAB broadcasts are able to use the DRC function. If the broadcast does not support DRC, then the DRC setting in the radio will have no effect.

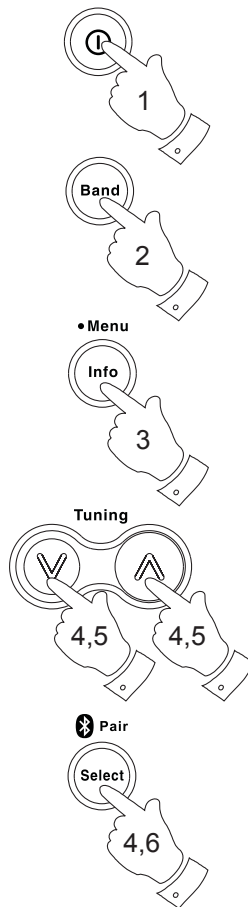


Prune stations - DAB

Over time, some DAB services may stop broadcasting, or may change location and then not be able to receive a station. In order to remove such stations from the DAB station list, the Prune stations function will delete the DAB stations from your station list that can no longer be received.

Stations which cannot be found or which have not been received for a very long time are shown in the station list with a question mark.



1. Press and release the **On/Off** button to switch on your radio.
2. Press and release the **Band** button until the DAB mode is selected.
3. **Press and hold** the **Info / Menu** button. The DAB menu will show on the display.
4. Press the **Tuning Up** or **Down** buttons until 'PRUNE' appears on the display. Press and release the **Select** button.
5. Press the **Tuning Up** or **Down** buttons to select 'Y'. Press and release the **Select** button to cause the stations list to be pruned, eliminating unavailable stations.
6. If you do not wish to prune stations select 'N' in step 5 and then press and release the **Select** button. The display will revert back to the previous display.

 Note: If you have moved to a different part of the country you should also carry out a search for new stations (please see the section 'Finding new stations' on page 12).

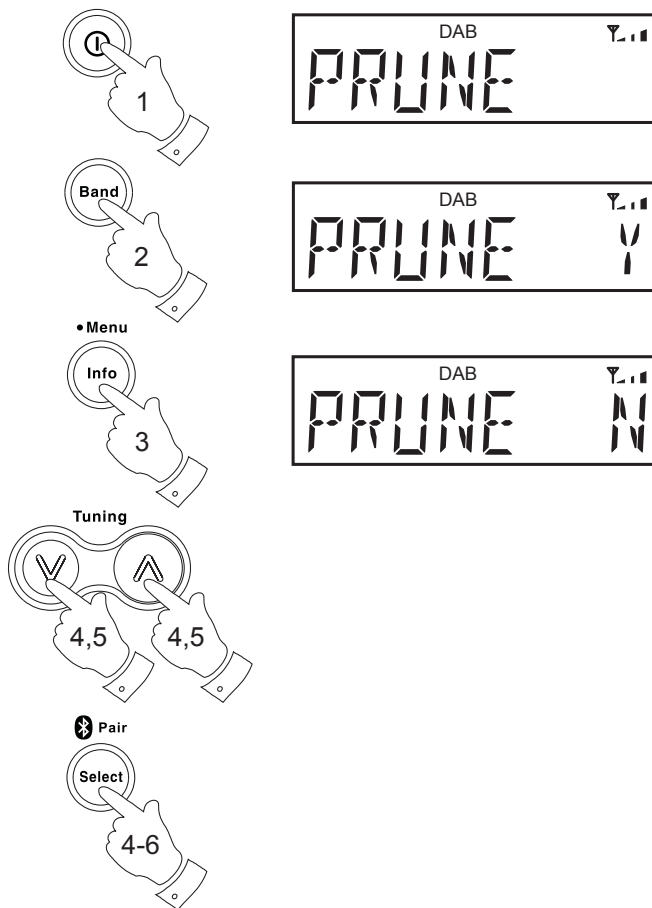

Operating your radio - FM auto-tune



 
 
1. Carefully fully extend the wire aerial located on the rear of your radio (inside the battery compartment). Place the wire antenna so that it is as straight as possible extending either above or below the radio.
2. Press and release the **On/Off** button to switch on your radio.
3. Press and release the **Band** button until the FM mode is selected.
4. **Press and hold** the **Tuning Up** button and then release the button to cause your radio to search from low frequency to high frequency and to stop automatically when it finds a station of sufficient strength.
5. After a few seconds the display will update. The display will show the frequency of the signal found. If the signal is strong enough and there is RDS data present then the radio may display the station name.
6. To find other stations **press and hold** the **Tuning Up** button as before or press and release the **Select** button.
7. **Press and hold** the **Tuning Down** button and then release the button to cause your radio to search from high frequency to low frequency and to stop automatically when it finds a station of sufficient strength.
8. When the end of the waveband is reached your radio will recommence tuning from the opposite end of the waveband.
9. Adjust the **Volume** to the required setting. To switch off your radio, press and release the **On/Off** button.

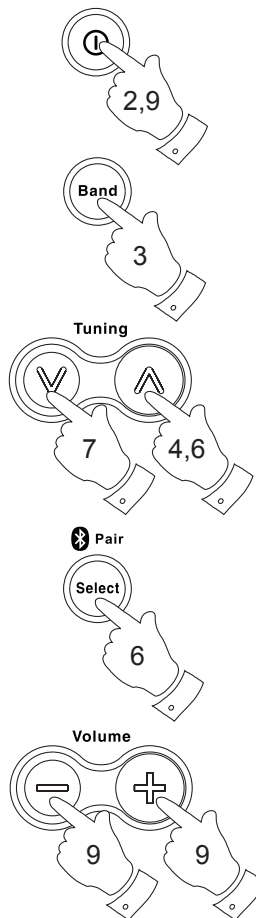

Manual tuning - FM

1. Carefully fully extend the wire aerial located on the rear of your radio (inside the battery compartment). Place the wire antenna so that it is as straight as possible extending either above or below the radio.
2. Press and release the **On/Off** button to switch on your radio.
3. Press and release the **Band** button until the FM mode is selected.
4. Press and release the **Tuning Up** or **Down** buttons to tune to a station.
The frequency will change in steps of 50kHz.
If the radio is tuned to a station of sufficient signal strength with RDS information present, then the display may change to show the station name.
5. When the waveband end is reached the radio will recommence tuning from the opposite waveband end.
6. Set the **Volume** to the desired setting.
7. To switch off your radio press and release the **On/Off** button.

    Note: If you find that the FM reception is poor, try repositioning the wire aerial, up or down or side to side.

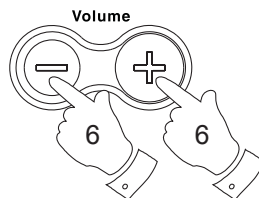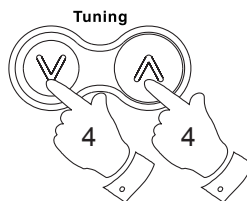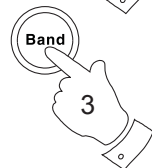

Display options - FM

Your radio has a range of display options for the FM mode:-


The Radio Data System (RDS) is a system in which inaudible digital information is transmitted in addition to the normal FM radio programme. RDS offers several useful features. The following are available on your radio.

1. Press and release the **Info / Menu** button to cycle through the various options. All display options except the text display will revert to the clock display after about 10 seconds.



- | | |
|-------------------|---|
| a. Time | Displays the current time. |
| b. Date | Displays the current date. |
| c. Frequency | Displays the current frequency of the radio station being listened to. |
| d. Scrolling text | Displays scrolling text messages such as artist/track name, phone in number, etc. |
| e. Programme type | Displays type of station being listened to e.g. Pop, Classic, News, etc. |
| f. Station name | Displays the name of the radio station being listened to. |
| g. Audio mode | Displays the audio mode of the radio station being listened to. The radio has a single speaker and therefore the audio will only be played in Mono. |

 Note: If no RDS information is available, the radio will be unable to display the station name, scrolling text and programme type information.

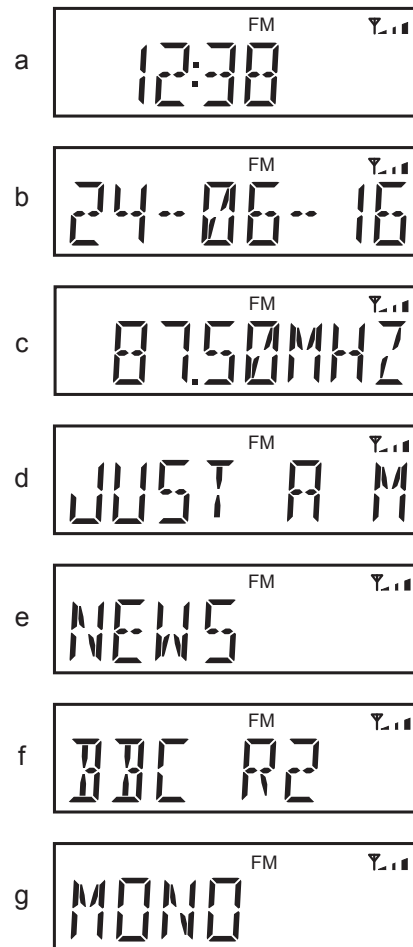


Scan sensitivity setting - FM

Your radio will normally scan for FM broadcasts which are strong enough to give good reception. However, you may wish the Auto-scan function to also be able to find weaker signals, possibly from more distant radio transmitters. Your radio includes a local / distant option for the Auto-scan function.

1. Press and release the **On/Off** button to switch on your radio.
2. Press and release the **Band** button until the FM mode is selected.
3. **Press and hold** the **Info / Menu** button. The FM menu will show on the display.
4. Press and release the **Tuning Up** or **Down** buttons until 'SCAN' shows on the display. Press and release the **Select** button.
5. Press and release the **Tuning Up** or **Down** buttons to switch between 'LOCAL' and 'DISTANT' options on the display. The Distant option will allow the radio to find weaker signals when scanning.
6. Press and release the **Select** button to confirm your selection. The radio will then revert to the normal information display. The Local or Distant setting is stored in the radio and remains in force until changed or until a System Reset.

 Note: The initial setting (out of the box, or after a System Reset) causes the radio to ignore weaker (or more distant) signals.



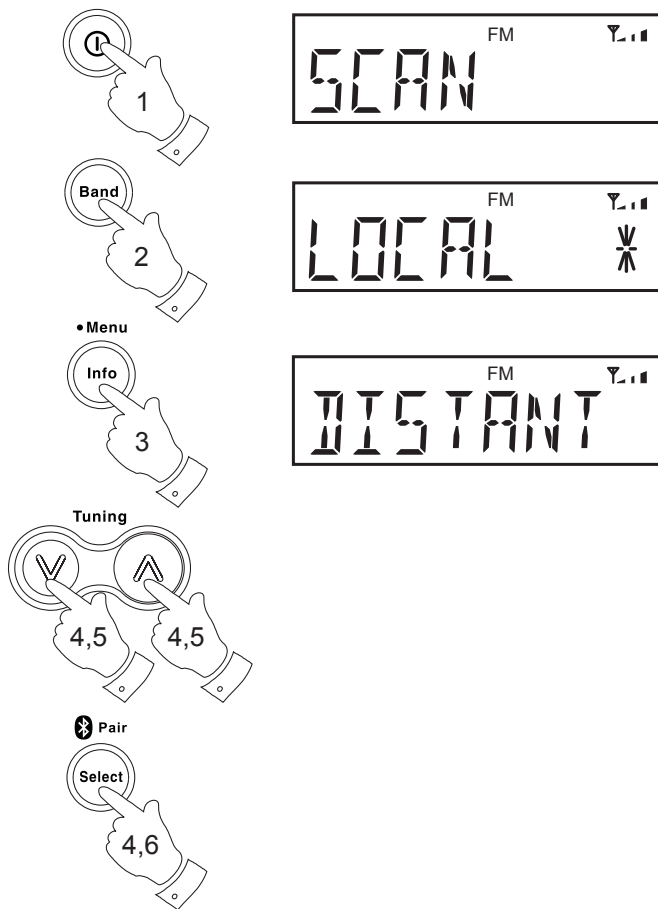


Presetting stations

You may store your preferred DAB and FM radio stations to the preset station memories. There are 8 memory presets in your radio, 4 for DAB and 4 for FM. Presets are remembered by your radio in the event of a power failure.


The procedure for setting presets and using them to tune stations is the same for FM and DAB modes, and is described below.

   1. Press and release the **On/Off** button to switch on the radio.
2. Press and release the **Band** button to select either the FM or DAB mode.
3. Tune to the required station as previously described.
4. **Press and hold** the required **Preset** button 1 - 4 until 'STORED' shows on the display. The station will be stored under the chosen preset. Repeat this procedure for the remaining presets.
5. The display will show, for example, 'EMPTY' if no station has been stored to that preset.
6. Stations which have been stored in preset memories may be overwritten by following the above procedure.

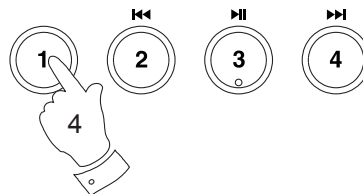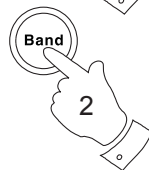

Recalling a preset station

 1. Press and release the **On/Off** button to switch on the radio.
2. Press and release the **Band** button to select either the FM or DAB mode.
3. Press and release the required **Preset** button 1-4. The display will show, for example, 'Empty' if no station has been stored to that preset. If a preset has been stored, then the display will show either the station name (for DAB stations) or the frequency (for FM stations).
4. Your radio will tune to the chosen preset station stored in the preset memory.

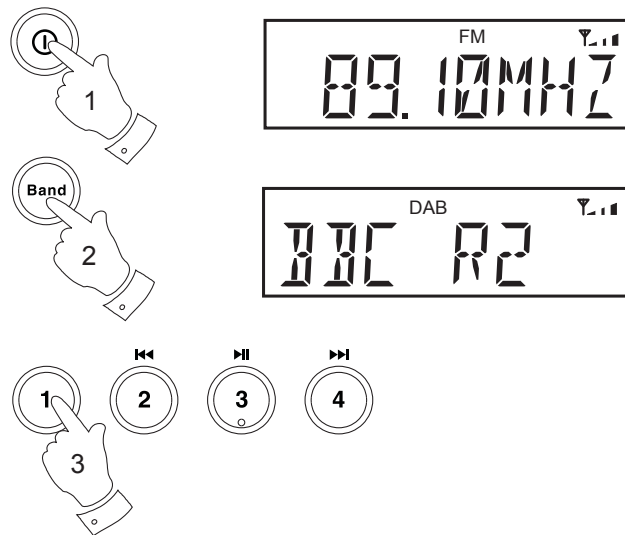

Bluetooth mode

The Bluetooth mode on your radio allows you to play audio, play sound from video files and stream music from Bluetooth capable devices such as your mobile phone, computer, tablet etc. through your radio's loudspeaker.

- When a Bluetooth enabled device such as your Splash Mini radio is in a 'discoverable' state other Bluetooth devices can detect, pair with or connect to it.
- 'Bluetooth pairing' occurs when two Bluetooth enabled devices agree to establish a connection and communicate with each other.
- ***Your radio will show the Bluetooth search indicator on the display when it is discoverable or when it is trying to connect to a previously paired Bluetooth device. When a device is paired with and connects to your radio, the name of the connected device will show briefly on the display.***

Bluetooth connectivity performance may vary depending on the connected Bluetooth devices. Please refer to the Bluetooth capabilities of your device before connecting to your radio. All features may not be supported on some paired Bluetooth devices.

A Bluetooth connection can provide a link for audio up to a distance of approximately ten metres. When pairing two Bluetooth enabled devices, for convenience, we recommend they should be no more than 2 to 3 metres apart. The presence of other functioning Bluetooth devices during connection may lead to operational difficulties.

Bluetooth is a short-range radio communication system and generally Bluetooth devices can communicate with each other clearly within a regular sized room or office. The reliability of a Bluetooth connection between different rooms will greatly depend upon the construction of the building.

Bluetooth communication range may be substantially reduced if the signal passes through a solid object. Human bodies, brick and concrete walls, heavy furniture or bookcases will all reduce the operational range of your Bluetooth devices to a greater or lesser extent. Glass, dry-wall or wood paneled walls and office partitions may have a less severe but noticeable effect. Metal pipes, foil-lined plasterboard, metal window frames and domestic wiring can also have an effect. You should position your Bluetooth devices closer to each other if you observe communication difficulties.

WiFi networks and cordless phones generally use similar radio frequencies to Bluetooth and may interfere with one another. If any interference is noticed, then try relocating the radio or one of the other devices.

The Bluetooth capabilities of your radio allow it to receive audio from many Bluetooth capable devices including mobile phones, personal computers and tablets. Only one Bluetooth device can be connected to your radio at a time. It supports the following Bluetooth profiles and functionality.

- Your radio supports A2DP (Advanced Audio Distribution Profile) which is a stereo audio connection that streams stereo music from PCs, mobile phones etc. SBC and AAC audio codecs are supported.
- Your radio supports AVRCP (Audio Video Remote Control Profile) which allows your radio to control music playback from the connected device.

 
Note: Some mobile phones may temporarily disconnect from your radio when you make or receive calls. Some devices may temporarily mute their Bluetooth audio streaming when they receive text messages, emails or for other reasons unrelated to audio streaming. Such behaviour is a function of the connected device and does not indicate a fault with your radio.

Connecting Bluetooth devices

1. Ensure that the Bluetooth capability on your phone, tablet or PC is enabled. You may need to refer to the user documentation for your device, since the method will vary with each device.
2. Press and release the **On/Off** button to switch on the radio.
3. Press and release the **Band** button on your radio until the Bluetooth mode is selected. Your radio will show that it is 'discoverable' by showing the **Bluetooth search indicator 'BT_____'** on the display.
4. Using the Bluetooth settings of your phone, tablet or PC direct it to search for 'discoverable' devices. After a few seconds, you should see a device named '*Splash Mini*'. Just occasionally it may take longer for the radio to be found by your device.
5. Select '*Splash Mini*' to cause your phone, tablet or PC to pair with your radio and to establish a connection.
6. Once the connection is established, the name of the connected device will be briefly displayed on the radio.

You can now begin playing music from your phone, tablet etc.


Some Bluetooth devices may require a 'Passkey' (an authentication key) in order to establish a link between devices. A passkey is similar to a password, although you only need to use the passkey once to establish a link. If your device asks for a passkey to be able to pair with your radio then enter a code of 0000 (four zeroes).

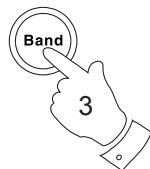

Playing audio files in Bluetooth mode

When you have successfully connected your radio with your chosen Bluetooth device you can start to play your music using the controls on the device.

 1. Once playing has started adjust the volume to the required setting using the **Volume** controls on your radio and on the connected device.

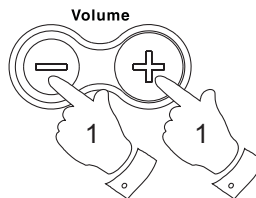


2. The volume of your radio in Bluetooth mode is affected by the volume settings on the radio and also on the connected Bluetooth device.

If you adjust the volume control on the radio but you find that the volume from the radio is not sufficient, it may be that the volume setting of the connected device needs to be increased.

3. The audio player in your phone, tablet or PC may be able to respond to the **Play/Pause**, **Next** track and **Previous** track control on the radio. To play or pause the audio press and release the **Play/Pause** button. To access the next or previous track, press the **Next** or **Previous** buttons as required.

 Note: That not all player applications or devices may respond to all of these controls.

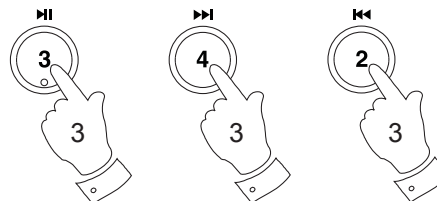

4. If your connected device is able to provide information from the track being played, you may press and release the **Info / Menu** button to display the Title, Artist and Album details on the display as well as the time. The display will revert to displaying the time approximately 10 seconds after the last button press.



Connecting and disconnecting a Bluetooth device

You can only have one Bluetooth device connected to your radio at any one time although it may be paired with several devices. Once you have a Bluetooth enabled device connected to your radio it cannot be interrupted by another Bluetooth device unless you choose to break the connection.

1. To connect to a new device or to disconnect from the current device, **press and hold** the **Bluetooth Pair** button on the radio. 'DISCOVER' will show on the radio's display.

2. The radio will disconnect from your device and then will become 'discoverable' by other devices. The **Bluetooth search indicator** 'BT _ _ _ _' will show on the screen.

You may then pair your radio with a new device as described in steps 4 to 6 on page 23.

3. To connect to a device that was previously paired with the radio, press and release the **Bluetooth Pair** button on the radio. The radio will then display a list of up to 8 previously connected devices. Press and release the **Tuning Up** or **Down** buttons to step through the list.

 
4. To connect to one of the previously paired devices, press and release the **Select** button when the device name is displayed. In some cases you may also need to re-enable the connection in your devices Bluetooth settings. The radio will then connect to the device.

5. If you no longer want your Bluetooth device to be paired with your radio you will need to delete the 'Splash Mini' pairing on the device. Please refer to the Bluetooth documentation for your phone, tablet, PC etc. for details of how to cancel current pairings.


If automatic reconnection fails, then you will generally be able to connect simply by selecting the 'Splash Mini' pairing in your device's Bluetooth settings.

DISCOVER

BT _ _ _ _

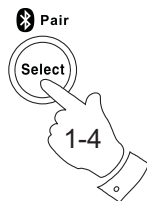

JENNIFER

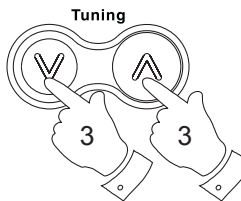 

Display options - Bluetooth mode

Your radio has a range of display options when in Bluetooth mode:-

1. Press and release the **Info / Menu** button to cycle through the various options. The display will revert to displaying the time approximately 10 seconds after the last button press.



- | | |
|----------------|--|
| a. Track title | Displays the title of the track currently playing. |
| b. Artist | Displays the artist information for the track currently playing. |
| c. Album | Displays the album information for the track currently playing. |
| d. Time | Displays the current time. |

a

IN A HEA

b

ELSA MIL

c

WALKING

d

12:30

Display backlight

The brightness of the display can be adjusted for when the radio is in use. If you use the unit in the bedroom, you may prefer a lower brightness level than the standard setting. There a range of brightness levels from which to choose and there is also a timer which can be set to dim the backlight after a preset time.

To change the current brightness setting, follow the steps below.

 
1. Press and release the **On/Off** button to switch on your radio.
2. **Press and hold** the **Info / Menu** button. The DAB menu will show on the display.
3. Press the **Tuning Up** or **Down** buttons until 'SYSTEM' appears on the display. Press and release the **Select** button.
4. Press the **Tuning Up** or **Down** buttons until 'BACKLITE' appears on the display. Press and release the **Select** button.
5. In the backlight menu you may adjust the following settings using the **Tuning Up** or **Down** and **Select** buttons.

Time out: The backlight display can be set to remain bright or to dim after a set time between 10 and 180 seconds.

On level: To adjust the brightness while the controls are being used, the On level can be set to high, medium or low.

Dim level: To adjust the brightness after a preset time has elapsed, the Dim level can be set to high, medium or low.



When the Dim backlight setting is in use pressing any button will switch the radio to the 'On level' brightness for a few seconds. This is so that even if the 'Dim level' is set low, it is still possible to see the time when needed.

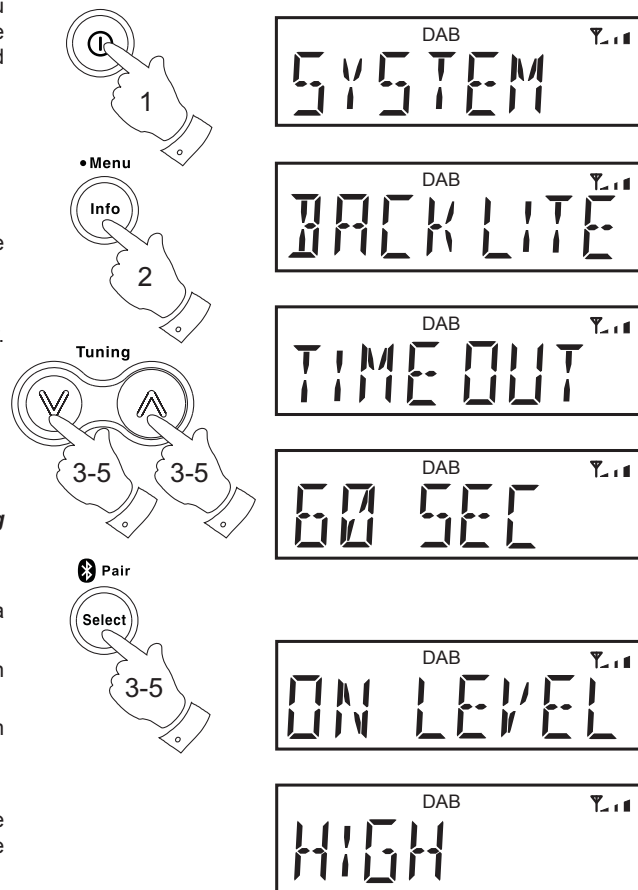

Software version

The software display cannot be altered and is just for your reference.

  1. Press and release the **On/Off** button to switch on your radio.
2. **Press and hold** the **Info / Menu** button.
3. Press the **Tuning Up** or **Down** buttons until 'SYSTEM' shows on the display.
4. Press and release the **Select** button.
5. Press the **Tuning Up** or **Down** buttons until 'SW VER' shows on the display.
6. Press and release the **Select** button. The display shows the software information.
7. Press and release the **Info / Menu** button to exit the software display.

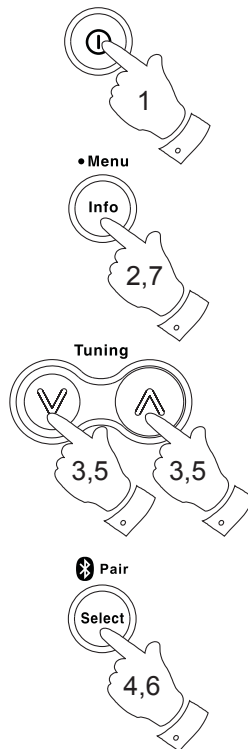


System reset

If your radio fails to operate correctly, or some digits on the display are missing or incomplete carry out the following procedure.

1. Press and release the **On/Off** button to switch on the radio.
2. **Press and hold** the **Info / Menu** button.
3. Press the **Tuning Up** or **Down** buttons until 'SYSTEM' shows on the display. Press and release the **Select** button.
4. Press the **Tuning Up** or **Down** buttons until 'RESET' shows on the display. Press and release the **Select** button.
5. Press the **Tuning Up** or **Down** buttons until 'Y' appears on the display. If you do not wish to carry out a system reset, highlight 'N' and then press and release the **Select** button. The display will revert to the previous display.
6. With 'Y' displayed, press and release the **Select** button. A full reset will be performed. The station list and presets will be erased. Settings will be set to their default values. The radio will then restart as when first plugged in (see also page 7).

 In the event of a malfunction due to electrostatic discharge, power supply transients or short interruptions, reset the product as above to resume normal operation. If you are not able to perform the reset operation as above, removal and reconnection of the power source (batteries) may be required.

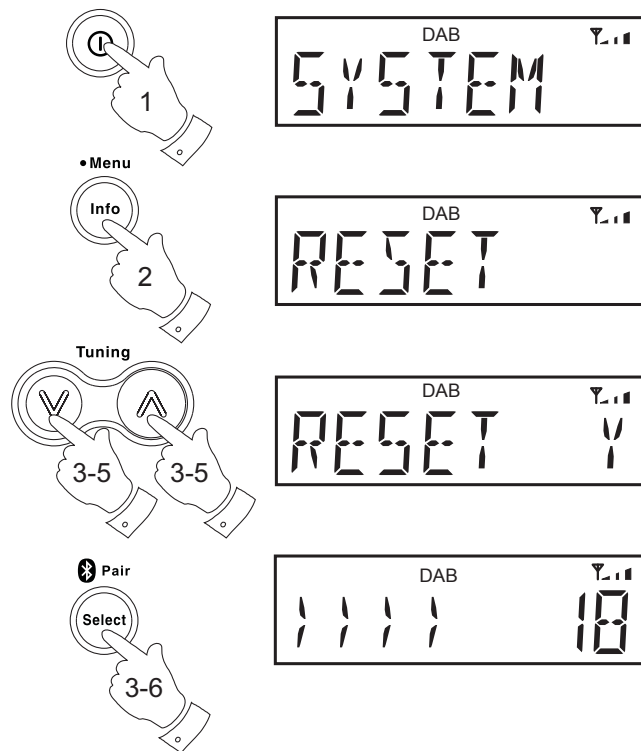


Carrying strap

The multi purpose carry strap may be used to hang or carry the radio if not wall mounted.


1. The strap is fitted as shown in the diagrams 1-4.
2. Ensure that the free end of the strap is completely through the buckle before using the strap to carry the radio.

IMPORTANT: If the carry strap is used to hang the radio, make sure that the carry strap is securely fitted to your radio.

 
1

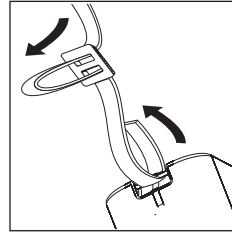


3

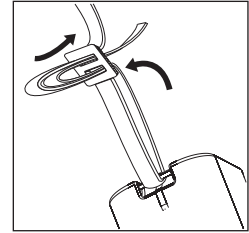 

2

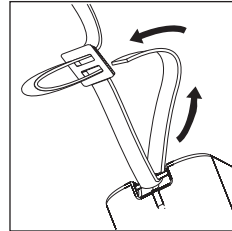 

4

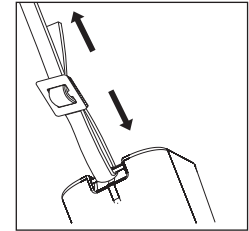 

Cautions

Do not allow this radio to be exposed to water (but see splash proof below), steam or sand. Do not leave your radio where excessive heat could cause damage such as in a parked car where the heat from the sun can build up even though the outside temperature may not seem too high.

It is recommended that the DAB band be used wherever possible as better results in terms of quality and freedom from interference will usually be obtained than on the FM band.

- The name plate is located on the rear of the unit.



- No objects filled with liquids, such as vases, shall be placed on the radio.
- It is recommended to operate the product such that there is a minimum distance (10cm recommended) to adjacent objects in order to ensure good ventilation.
- The ventilation of the product should not be restricted by covering it or its ventilation openings with items such as newspapers, tablecloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the product.
- It is recommended to avoid using or storing the product at extremes of temperature. Avoid leaving the unit in cars, on window sills, in direct sunlight etc.
- The product must be used in a moderate climate.

Splash proof (when used on battery only)

The Splash Mini radio is designed to withstand occasional exposure to splashing water in a bathroom, shower or poolside environment. The radio is not intended to be immersed in water.

Specifications

Power Requirements

Batteries 2 x LR20 (D size) not supplied

Battery Life

Approx. 32 hours of listening for 4 hours a day at normal volume using alkaline cells when used in DAB mode.

Battery life in FM mode will be less.

Frequency Coverage

FM	87.50 - 108MHz
DAB	174.928 - 239.200MHz

Circuit features

Loudspeaker 76mm

Aerial system	FM	Wire aerial
	DAB	Wire aerial

The Company reserves the right to amend the specification without notice

Notes

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Guarantee

This product is guaranteed for twenty four months from the date of purchase by the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Product with removed or defaced serial numbers.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the product was purchased. It is likely that your Roberts' dealer will be able to attend to any defect quickly and efficiently, but should it be necessary the dealer will return the product to the company's service department for attention. In the event that it is not possible to return the product to the Roberts dealer from whom it was purchased, please contact Roberts Radio using the contact details on the www.robertsradio.com website.

For product repairs falling outside the guarantee period, please refer to the "customer care" tab on the www.robertsradio.com website.

These statements do not affect the statutory rights of a consumer.



Issue 2

ROBERTS RADIO LIMITED

PO Box 130
Mexborough
South Yorkshire
S64 8YT

Website: <http://www.robertsradio.com>

© 2016 Roberts Radio Limited

