

ROBERTS

Sound for Generations

WM-201

Wi-Fi Internet Radio



Please read this manual before use

Contents

<i>WM-201 Internet Radio and Media Player features</i>	2
<i>Controls and connections</i>	3-4
<i>Remote control</i>	5
<i>Remote handset battery replacement</i>	6
<i>Before you can use this product</i>	7
<i>Navigation controls</i>	8
<i>Remote control functions</i>	9-10
<i>Connecting your radio to your computer network</i>	11-14
<i>Switching your radio on</i>	15
<i>Volume control</i>	15
<i>Audio settings (tone controls)</i>	16
<i>Switching your radio off</i>	16
<i>Selecting a radio station</i>	17-19
<i>Storing a radio station in a preset</i>	20
<i>Recalling a preset station</i>	21
<i>Listen to previously broadcast material</i>	22-23
<i>Customising your radio</i>	24-26
<i>Media Player</i>	27
<i>Access your audio files using Windows Shares</i>	27-29
<i>Access your audio files using UPnP software</i>	29-32
<i>Media selection</i>	33-35
<i>Controlling playback</i>	35-38
<i>Auxiliary input socket</i>	39
<i>Setting the auxiliary input level</i>	40
<i>Setting the clock</i>	41
<i>Setting the clock format</i>	42
<i>Setting daylight saving time</i>	43
<i>Setting the alarms</i>	44-46
<i>Cancelling / Disabling alarms</i>	47
<i>Sleep timer</i>	48
<i>Backlight</i>	49
<i>Language</i>	50
<i>Software version</i>	50
<i>Network configuration</i>	51-52
<i>Troubleshooting</i>	53-54
<i>Factory reset</i>	55
<i>Upgrade firmware</i>	56
<i>Headphone socket</i>	57
<i>Line out socket</i>	57
<i>General</i>	58
<i>Specifications</i>	58
<i>Mains supply</i>	59
<i>Software license information</i>	60
<i>Guarantee</i>	62


WM-201 Internet radio and Media player features

The Roberts WM-201 provides the following features in an attractive compact unit:-

- Listen to over 600 radio stations from around the country, and over 6000 from around the world.
- Listen to previously broadcast material from the BBC (using listen again)
- 12 radio station presets
- Play your music collection from your computer.
- The Media Player can connect to Windows Shares or UPnP servers (e.g. Windows Media Player 11)
- MP3, WMA, AAC, WAV, AIFF, FLAC, Real Audio and AU audio formats are supported.
- The WM-201 connects wirelessly to your home computer network, or via a wired Ethernet connection.
- Large clock display (with 12 or 24 hour display mode)
- Four alarm timers to wake you to either buzzer or radio alarm. Each alarm can be set to sound once, everyday, weekly, on weekdays or at weekends.
- Sleep timer with a gentle volume reduction feature so you don't wake up just as the radio turns off.
- Easy-to-read 3 line text display.
- Fully adjustable display brightness.
- Operation from the front panel or the remote control.
- Menu displays in major European languages:
English, French, German, Italian, Spanish, Portuguese,
Dutch, Danish, Finnish, Swedish and Norwegian.
- Auxiliary input to allow the WM-201 to be used as an amplifier and loudspeaker system for external MP3 players, CD players, etc.
- Line level output for optional connection to other audio equipment.
- A standard 3.5mm headphone socket is provided for private listening.
- High quality full-range, stereo speakers (2 x 5W).
- Bass and Treble level adjustment.
- Acoustically tuned cabinet.

Controls and connections

(Front)

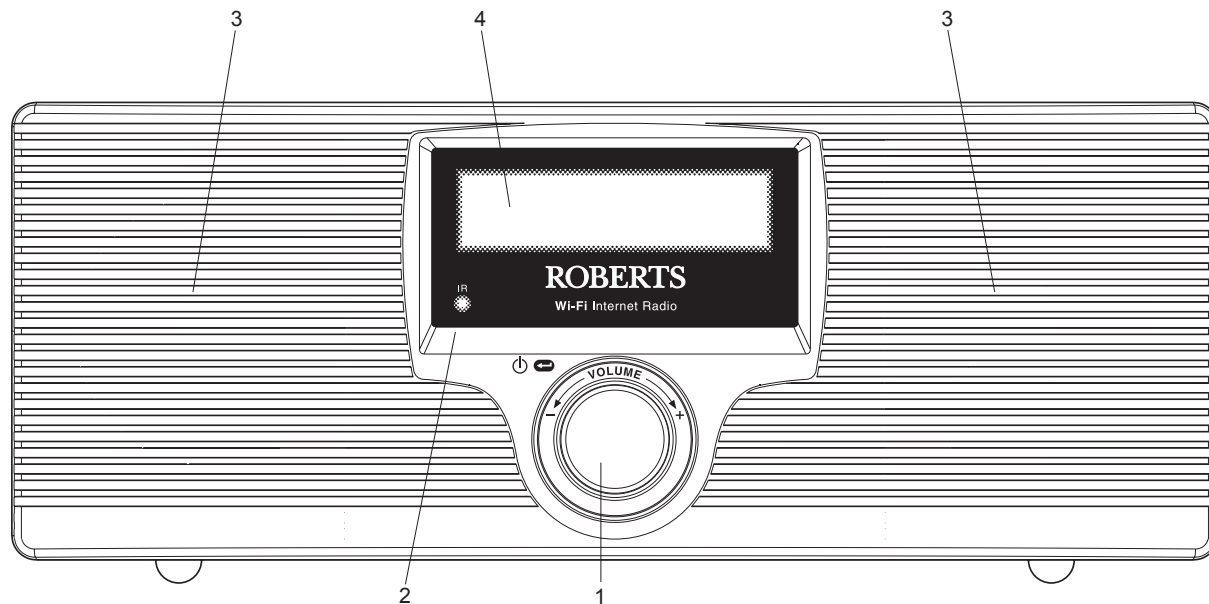

1. Select / On / Off / Volume control


2. Infra-red sensor

3. Speakers

4. LCD display

Controls and connections


(Rear)

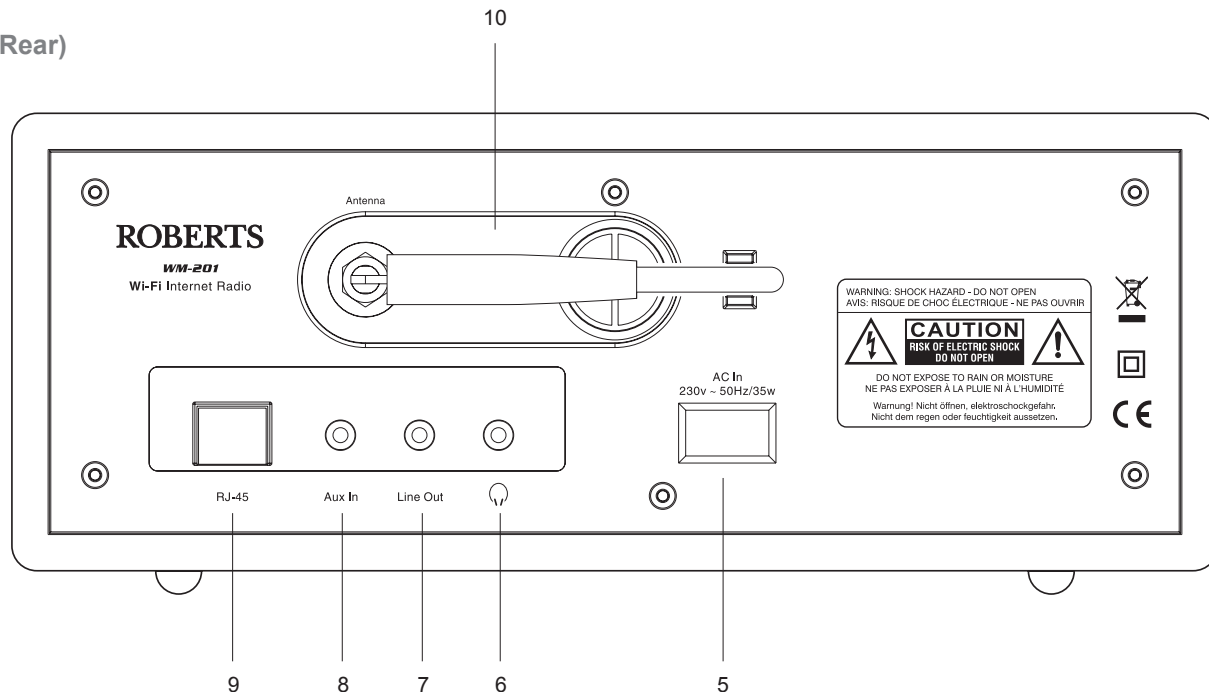

- 5. Mains input socket
- 6. Headphone socket
- 7. Line Out socket
- 8. Auxiliary Input socket
- 9. RJ-45 socket (Ethernet)
- 10. Wi-Fi antenna

Remote control


- 1. Radio button
- 2. Clock / Time button
- 3. Radio Preset buttons 1-6
- 4. Reply button
- 5. Queue / Queue Clear button
- 6. Rewind button
- 7. Pause / Stop button
- 8. Fast-forward button
- 9. Back button
- 10. Select / Audio button
- 11. Menu down button
- 12. Menu up button
- 13. Volume up / down button
- 14. On / Standby button
- 15. Auxiliary Input button
- 16. Media button

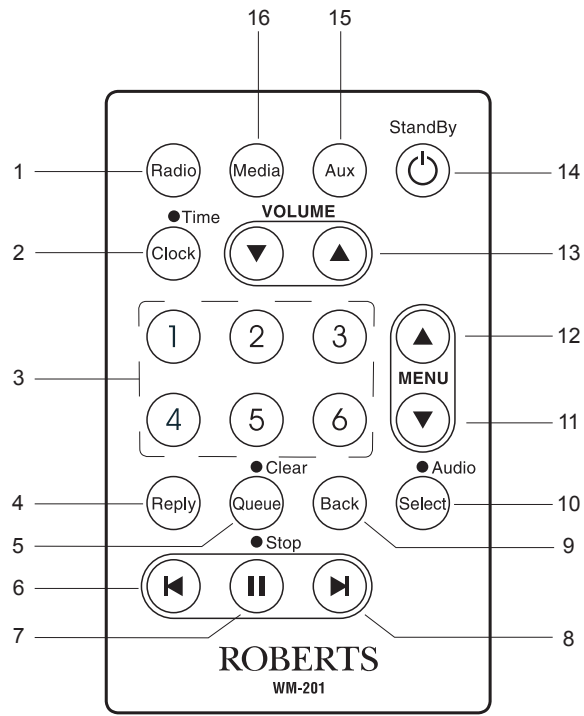

Remote handset battery replacement

1. With the aid of the end of a paper clip slide the catch to the right hand side.
2. Remove battery holder by pushing holder in direction shown.
3. Remove battery from holder.
4. Replace battery (CR2032 or equivalent) ensuring that the positive side of the battery faces you with holder positioned as shown.
5. Replace the battery holder.

IMPORTANT: The battery should not be exposed to excessive heat such as sunshine, fire or the like. After use, disposable batteries should if possible be taken to a suitable recycling centre. On no account should batteries be disposed of by incineration.

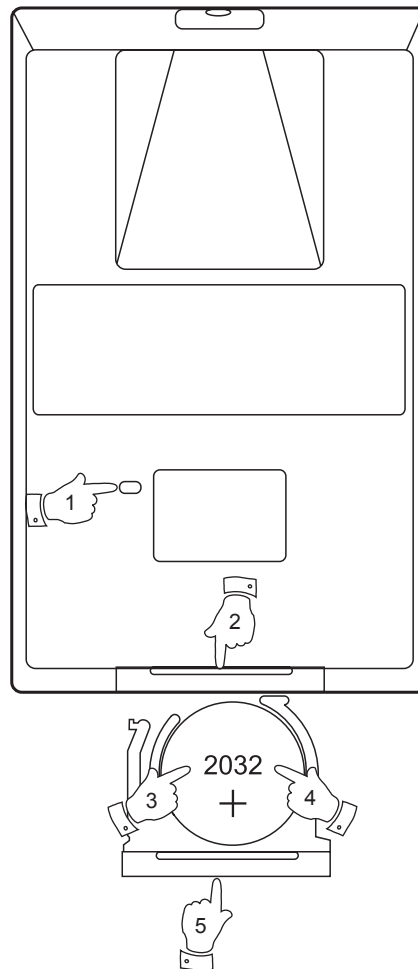

Before you can use this product

Before you can use your Internet radio, you must have the following:

- A broadband Internet connection.
- A wireless access point (Wi-Fi) or a wired Ethernet connection (10 or 100 Mbits/sec with RJ45 connection) connected to your broadband Internet, preferably via a router. In many cases the broadband modem, router and wireless access point will be a single combined unit supplied by your Internet Service Provider or bought from a computer store.
- If your wireless network is configured to use Wired Equivalent Privacy (WEP) or Wi-Fi Protected Access (WPA) data encryption then you need to know the WEP or WPA key so you can get the Internet radio to communicate with the network.

The Internet radio will typically work within a 10-20 metre radius from your wireless access point. The actual range achieved will depend upon the building type, other nearby wireless networks, and possible interference sources.

IMPORTANT: Before you continue, make sure that your wireless access point or router is powered up and working with your broadband Internet service (use your computer to verify this). To get this part of the system working you must read the instructions supplied with the wireless access point or router.

Navigation controls



1. The majority of functions on your radio may be performed by using the Rotary control on the front panel. Turn the control clockwise or anti-clockwise to highlight the desired function, and then give a short press on the **Rotary** control to select that function. In this instruction booklet, press always means **press and release**. Where a **long press** is needed to perform an operation this is specifically stated in the text.

When not being used for navigating the system menus, the rotary control simply acts as a conventional volume control.

The rotary control also has an additional function. When listening to the radio, a long press of the control will provide access to a menu to allow adjustment of bass and treble settings.

2. Your WM-201 radio is supplied with a compact remote control. All functions can be performed using this. Many operations require the user to make a selection from the menu. Use the **Up** and **Down** buttons in the group labelled MENU to highlight the desired function. Then press the **Select** button.
3. If an error is made when navigating the menus, it is generally possible to go back to the previous menu by pressing the **Back** button on the remote control.

So that the radio can be used without the remote control, menus also include a **Back** option which takes the user to the previous menu. This can be accessed using the front panel Rotary control or via the remote control. In this instruction book the words '**Back** option' refer to either of these methods.

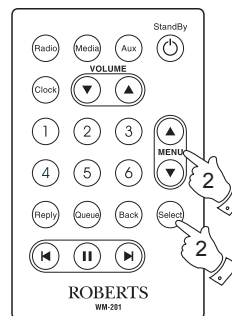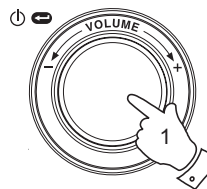

Menu item 1
Menu item 2
Menu item 3
<<Back

Remote control functions

- **Standby** button is used to switch your radio on and off.
- **Radio** button will open the radio stations menu.
- **Media** button will open the Media menu
- **Aux** button will select the Auxiliary input mode
- **Clock** button will open the alarms and sleep timer menu. A long press will show the time and date while the radio is in use.
- **Select** button is used to choose the highlighted option in a menu. A long press is normally used to access the Audio settings menu.
- **Back** button is used to access the previous menu.



Location
Genre
Preset 1


Windows Shares
UPNP Servers
Playback mode

Aux In


Set Alarm
Sleep timer
<< Back

Menu item 1
Menu item 2
Menu item 3
<< Back


- **Menu Up** and **Menu Down** buttons are used to highlight an option within a menu.




- **Volume Up** and **Volume Down** buttons allow you to change the volume level.



- **Preset** buttons provide quick access to six of your favourite radio stations.

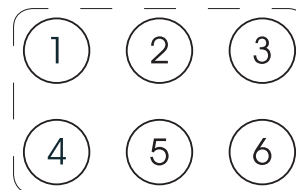

- **Queue** button will enter the track list (queue) in the media player. A long press will clear the queue and stop playback.



- **Rewind, Pause and Fast-forward** buttons are used for playback control in the Media Player.



- **Reply** button is reserved for possible future applications.



Connecting your radio to your computer network

1. Place your radio on a flat surface and plug the mains lead into the **Mains input socket** located on the rear of your radio (marked 'AC in') ensuring that the plug is pushed fully into the socket.
2. If planning to use a wired network connect the Ethernet cable into the RJ-45 socket at the back of the radio. If a wired connection is present then the radio will use this in preference to a wireless connection.

3. Plug the other end of the mains lead into a wall socket and switch on the wall socket.

IMPORTANT: The mains plug is used as the means of connecting the radio to the mains supply. The mains socket used for the radio must remain accessible during normal use. In order to disconnect the radio from the mains completely, the mains plug should be removed from the mains socket outlet completely.


4. The display on the front of the radio will light up and say: 'Roberts Internet Radio'. If you are using a wired Ethernet connection to your router, the radio should connect, and download a radio station list update. It will then go to the main mode menu, see page 14, 'After you have connected to your network'.

If you are not using a wired connection, or if the wired connection is not working, after a few seconds the display will change to show 'Scan for networks', see page 12.

There are two indicator lights incorporated into the RJ-45 connector. If you have problems with your wired connection, they may help you to identify the possible cause of the problem.

Green ON = Link established, Flashing = Data transfer

Yellow ON = 100M bps link, OFF = 10M bps link

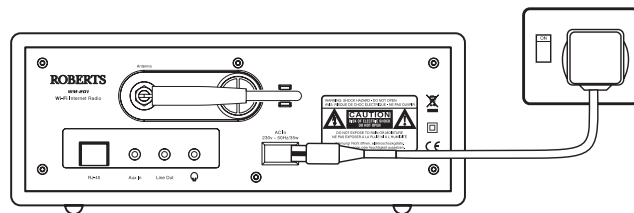

Roberts Internet
Radio

Initialising
network

Connecting to
network

Network OK


Radio Stations
Media Player
Auxiliary Input

Connecting to a wireless network

1. When the display says 'Scan for networks', press the **Select** control. The radio will now scan for all available wireless networks and will show 'Scanning'.
2. If the radio cannot find a network then the display will say 'No Wireless Networks Found'. If this happens then you will have to get your wireless access point working - please see the instructions supplied with it.
3. When the radio finds your wireless network, it displays the Network Name (ESSID) for the access point on the screen. This is a name that is allocated to the access point by the person who set up the network - for example: 'My Home Network'.
4. It is possible, and in some locations highly likely, that your radio will find more than one wireless access point, in which case you should choose which one you need to connect to.
5. Rotate the **Select** control to see the ESSID for each access point that the radio has found. If your network is shown proceed to step 7 on the next page.
6. If your network is not found, it is possible that it is configured such that the ESSID is not broadcast (sometimes referred to as hidden). If this is the case then use the Back option and then select 'Enter network name'. This procedure is described in the 'Network Configuration Menu', see page 52, 'Entering the network name manually'. If you know that your network name is not hidden, and it was not found, then either try re-scanning, or refer to 'Troubleshooting' on page 53.

If you make a mistake at any point, use the Back option to go back to the previous screen.)

If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

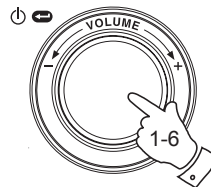

Scan for networks

Scanning



No Wireless
Networks found

My Home Network
<<Back

Jones Family
My Home Network
Smith

Jones Family
Paul's Network
Smith
<< Back

Scan for networks
Enter network name
View configuration

Connecting to a wireless network cont.

- When the ESSID for the access point you want to connect to is highlighted on the screen, press the **Select** control.
- If your network is not configured to need an encryption code, the screen should say 'Connecting to network', then 'Network OK'. If this is the case then you have successfully connected your radio to your network, so please proceed to the section 'After you have connected to your network' on the next page.


- If the screen displays either 'Enter WEP key' or 'Enter WPA key', it is because the network is using one of the encryption systems: Wired Equivalent Privacy (WEP) or Wi-Fi Protected Access (WPA). You therefore need to enter the correct WEP or WPA key into the radio to allow it to communicate with your network.

If you do not have the WEP or WPA key, then you should obtain it from the person who set your network. Some Wi-Fi routers may come with a key already set up by the supplier, in which case you should refer to the user documentation provided with it.

WEP keys are 10 or 26 characters long (using 0 - 9, and A - F). Some Wi-Fi access points can also use pass-phrases for WEP but these do not conform to a defined standard and are not supported. WPA keys are usually set up using a pass-phrase of between 8 and 63 characters. Your Internet radio can accept pass-phrases for WPA keys.

If the WEP or WPA key was previously entered and the radio has not had a factory reset the display will show 'Using saved key' and should then connect to the network.

- After 3 seconds, the display goes into the key entry mode. To enter the key, use the knob to select each character of the key in turn, pressing the **Select** control after each character. Remember, WEP keys only use the numbers 0 - 9 and letters A - F. WPA keys are sensitive to upper and lower case characters so you must enter them exactly.

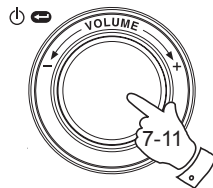

Jones
My Home Network
Smith

Connecting to
network



Network OK

Enter WEP key

Enter WPA key



89ABC D EFGHI
PASSWOR█

10. If you make an error use either the **Back** key on the remote control to delete the character entered, or give a long press on the **Select** control. Use the left and right arrows to move the block cursor to access incorrectly entered characters.
11. After the final character of the WEP or WPA key has been entered, locate the 'END' symbol and press the **Select** control. (The 'END' symbol is located between the punctuation symbols and the numbers 0 - 9.) The radio should now be able to connect to the network.



After you have connected to your network

1. Once connected to your radio to the network (and therefore also to the Internet) it will display the main Mode menu. This menu provides access to all major functions of the radio. There are also buttons on the remote control for each of the Mode menu options except for the Configure menu.
2. Rotate the **Select** control until the 'Off' option is highlighted on the display.

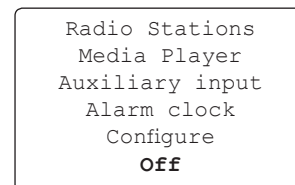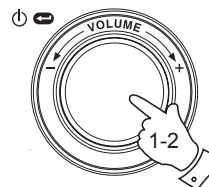


Switching your radio on

1. With the radio in Standby mode (displaying the clock), press the **Select** control (or the **On / Standby** button on the remote control). Rotate the **Select** control forward and backward to highlight different elements in the menu.
2. When the first item 'Radio Stations' (or 'Stations') is highlighted, press the **Select** control to enter the Radio menu. Alternatively, you could press the **Radio** button on the remote control.
3. The Radio menu allows selection of radio station by location and genre. It also provides access to the radio station presets. When the radio first connected to the Internet it automatically stored a radio station in Preset 1. (If you don't like it, you can easily change it later.) Rotate the **Select** control so that the station name is highlighted on the display.
4. Press the **Select** control once more and the display will show 'Connecting' while it finds the audio stream for the station. After a few seconds you should hear the radio station, and then the display will change to show additional information from the broadcast.

Volume control

1. While the radio station is playing with its name on the radio's display, you can change the volume by rotating the **Select** control or by pressing the **Volume up** and **Volume down** buttons on the remote control.
2. If the radio is in its menu-browsing state, you can change the volume either pressing the **Volume up** and **Volume down** buttons on the remote control, or by waiting for the menu display to time-out (nominally 15 seconds) and then by rotating the **Select** control.

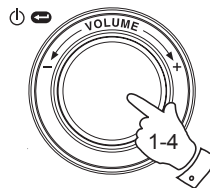

9:33 AM

Radio Stations


Media Player
Auxiliary input
Alarm clock
Configure
Off

Location
Genre

BBC Radio 1

BBC Radio 1
Next on BBC Radio
44kbps Real

Volume

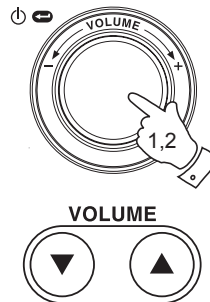


Audio settings (tone controls)

Your radio has an Audio Settings menu where the bass and treble characteristics of the sound can be adjusted to your personal taste.

1. When the radio is playing **press and hold** the **Select** control (or press and hold the Select button on the remote control). The radio will select the Audio menu which allows bass and treble adjustment as well as alternative access to the main Mode Menu.
2. If adjusting selecting bass, rotate the **Select** control until 'Bass' is highlighted on the display. Press and release the **Select** control. The display will show the current Bass level. Rotate the **Select** control to set the desired level (between -5 and +5) and press and release to confirm selection.
3. If selecting treble rotate the **Select** control until 'Treble' is highlighted on the display. Press and release the **Select** control. The display will show the current Treble level. Rotate the **Select** control to set the desired level (between -5 and +5) and press and release to confirm selection.
4. To quickly cancel any bass or treble setting, rotate the **Select** control until 'Flat' is highlighted on the display. Press and release the **Select** control and the equalisation levels will be reset.

Switching your radio off

5. The Audio settings menu also provides a quick way to switch off your radio. Give a long press to enter the menu, and then a short press to select the Off option. Your radio will immediately enter the Standby mode with the clock display. Alternatively you can use the **Standby** button on the remote control.

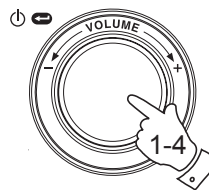


Off
Bass
Treble
Flat
Mode Menu
<<Back

Off
Bass
Treble
Flat

Off
Bass
Treble
Flat

Off
Bass
Treble
Flat

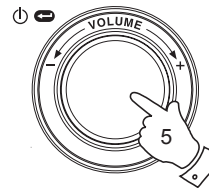

9:47 AM

Selecting a radio station


1. If the radio is in Standby mode press the **Select** control to switch it on. If the radio is already playing press the **Select** control to access the menus. If needed, use the **Back** option to access the main Mode menu.
2. Rotate the **Select** control until 'Radio Stations' is highlighted on the display.
3. Press the **Select** control so that the radio will enter the Radio Stations menu.
4. Rotate the **Select** control to choose between 'Location' or 'Genre'.

Location enables you to choose a radio station from the list first by geographic region and then by country.

Genre enables you to choose radio stations according to their content, for example Classic, Rock, Sport, News, etc.

Press the **Select** control to confirm your selection. If selecting by location, please proceed to the next page. If selecting by genre, please proceed to page 19, 'Selecting a radio station by genre'.

Note: if you make a mistake at any point, rotate the **Select** control until the **Back** option is selected, and then press it to go back to the previous menu level.

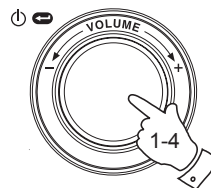

Radio Stations

Media Player
Auxiliary input
Alarm clock
Configure
Off

Location

Genre
BBC Radio 1

Location

Genre


BBC Radio 1
Preset 2
Preset 3

Selecting a radio station by location

1. Rotate the **Select** control to scroll through the list of regions. This menu is cyclic, i.e. you can scroll the list continually in either direction.
2. When your selected continent is highlighted on the display press the **Select** control to confirm your choice. Your radio will list the countries available. This menu is cyclic (so you can go back through the list to quickly access the UK, for example).
3. Rotate the **Select** control until your selected country is highlighted on the display. Press and release the **Select** control to confirm your choice. The station list for that country will appear on display.
4. Rotate the **Select** control until your selected station name is highlighted on the display.
5. Press the **Select** control to confirm your choice of station. The display will show 'Connecting' while it finds the new station.

If the station has on-demand content (that is, it gives the option of listening to programmes which have already been broadcast), see page 22, 'Listening to previously broadcast material'.

Should you be unable to connect to a particular station, please note that some radio stations do not broadcast 24 hours per day, and some stations are not always on-line.

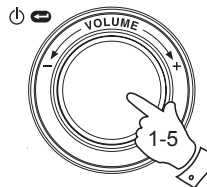

Caribbean
Europe
Middle East

Turkey
UK
Ukraine

100-101 FM
100-102 Century
100.7 Heart FM
102.2 Smooth FM
102.3 2CR FM


100.7 Heart FM
Connecting
|

Selecting a radio station by genre

1. Rotate the **Select** control to scroll through the list of content types. This menu is cyclic - you can scroll the list continually in either direction.
2. When your selected Genre is highlighted on the display press the **Select** control to confirm your choice. Your radio will then enter the station list. This menu is cyclic.
3. Rotate the **Select** control until your selected station name is highlighted on the display.
4. Press the **Select** control to select the station. The display will show 'Connecting' while it finds the new station.

If the station has on-demand content (that is, it gives the option of listening to programmes which have already been broadcast), see "Listening to previously broadcast material" on page 22.

Should you be unable to connect to a particular station, please note that some radio stations do not broadcast 24 hours per day, and some stations are not always on-line.

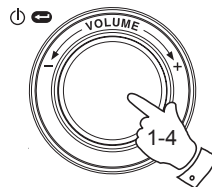

Soft Rock
Sports
Talk
Top 40
Unknown
Varied


100-101 FM
100-102 Century
100.7 Heart FM
102.2 Smooth FM
102.3 2CR FM

100.7 Heart FM
Connecting
|

Storing a radio station in a preset

There are 12 memory presets available. All may be accessed using the rotary control. Additionally, presets 1 - 6 may be accessed using the remote control.

1. Select the required station as previously described.
2. When the radio is playing use the **Select** control to access the Radio Stations menu. If needed, use the **Back** option.
3. In the Radio Stations menu rotate the **Select** control to display the preset station list.
4. Scroll through the preset list until you reach the next available preset (or a preset that you wish to change).
5. **Press and hold** the **Select** control until the display shows that the station has been stored - for example, 'Assigned To Preset 1'. The station will be stored under this chosen preset. Repeat this procedure for any other preset memories that you wish to configure.
6. If using the remote control, presets 1 - 6 can be stored by pressing and holding the required preset button on the remote control without the need to navigate the radio menus.

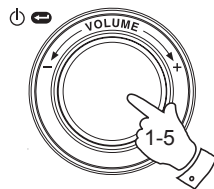

Radio Stations

Media Player
Auxiliary input
Alarm clock
Configure
Off


Location

Genre

Preset 1

Preset 2

Preset 3

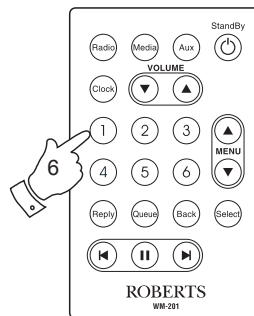


Assigned to
Preset 1

Recalling a preset radio station


1. When the radio is playing use the **Select** control to access the Radio Stations menu. If needed, use the **Back** option.
2. In the Radio Stations menu rotate the **Select** control to display the preset station list.
3. Rotate the **Select** control to scroll through the preset station list (presets 1 - 12).
4. Highlight the required saved radio station and press and release the **Select** control. The radio will connect to the station stored in preset memory.
5. Alternatively, presets 1 - 6 can be recalled by briefly pressing the required preset button on the remote control without the need to navigate the radio menus.

Note: If you have not previously stored a radio station in the selected preset, your current radio station will continue to play.

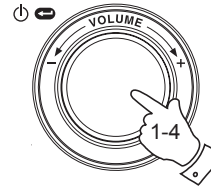

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off


Location
Genre
100.7 Heart FM
Planet Rock
Preset 3
BBC Radio 4
Preset 5
Radio Luxembourg
Radio Caroline

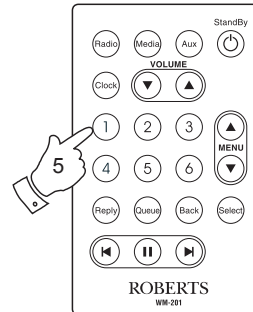

Listening to previously broadcast material

Some radio stations allow you listen to programmes that have already been broadcast. When you select a radio station that has this facility, the station does not start playing immediately, but instead the display shows the options 'Live' and 'On demand'.

1. Rotate the **Select** control to highlight 'Live' or 'On Demand'.
2. Press and release the **Select** control to select:
 - 'Live' - plays the current output from the station as normal.
 - 'On Demand' - lets you listen to previous broadcasts.The options will depend on the station you have chosen.
3. When you choose 'On Demand', the display shows the names of the programmes available.
4. Rotate the **Select** control to highlight the programme that you wish to listen to. Press the **Select** control to select the programme.
5. When you have chosen the programme you want to listen to, either it will start to play, or the display may show a list of days for you to choose from, or it may show you a playback start time of 00:00. Note that this is not the time that the original broadcast took place. It is the time after the start of the programme from which the radio will start playing. If a start time is displayed, skip to step 7 on the next page.
6. Rotate the **Select** control to select the day the programme was broadcast. Press the **Select** control to choose the day. The display will then show a programme start time of 00:00.

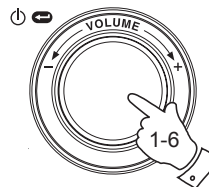

BBC Radio 3
BBC Radio 4
BBC Radio 6

Live (Real Audio)
Live (WMA)
On Demand

BBC Radio 4
Live (WMA)
On Demand

Any Questions
The Archers
Bells on Sunday

MON
TUE
WED

- To listen from the beginning of the programme, press the **Select** control again. Alternatively, rotate the **Select** control to choose the required start time and then press the **Select** control to start the programme playing.

Fast-forward / Rewind broadcasts





Stations which enable you to listen to previously broadcast programmes also allow you to fast-forward and rewind to any point within the programme.

- Press the **Fast-forward** button on the remote control. The elapsed time that the programme has been playing will be displayed and will automatically advance in 30 second increments.
- When the required time into the programme is reached, press the **Select** button.
- Press the **Rewind** button on the remote control to rewind. The elapsed time that the programme has been playing will be displayed and will automatically count back in 30 second increments.
- When the required time into the programme is reached, press the **Select** button and the programme will resume from that point.

Play / Pause function

When listening to previously broadcast material, it is possible to temporarily pause the programme if needed.

- To pause playback press the **Play / Pause** button on the remote control. To resume playback press the **Play / Pause** button again.

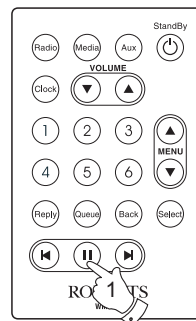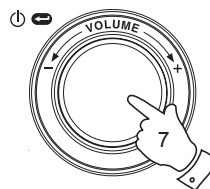


Customising your radio

In addition to storing your favourite radio stations in the radio presets, your radio allows you to create a customised list of stations which can appear in a special menu on the radio called 'My Stuff'.

The WM-201 uses Internet Radio technology which has been developed by a British company, Reciva Limited, based near Cambridge. Reciva allow you to register your radio on their web site, and then to associate a choice of radio stations with your radio. These stations can be selected from the large selection already listed. Additionally, if you find a radio station that is not listed then you may also add the Internet address (URL) of the station's audio stream to your selection.

Registering an account on Reciva's website

1. Open the website, <http://www.reciva.com>, using the Internet browser on your computer. Click on the '**My Account**' link and follow the on-screen instructions to register an account. Please note, during the registration process, a validation code will be sent to you via email. Please enter this code when prompted to do so.
2. After logging into your account, you will be able to edit your information for '**My Stations**', '**My Streams**', '**My Details**' and '**My Radios**' from the '**My Account**' section.
3. You can now add your Internet Radio to your account on the website by accessing the '**My Radios**' link. From the '**My Radios**' section, you will need to enter in your radio's eight-digit serial number, which can be found from the '**Configure > Version**' menu on the radio, and you will also need to enter in your radio's registration code - which can be found from the '**Configure > Register**' menu on the radio.

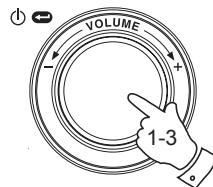

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Register
Version
Upgrade Firmware
Factory Reset

Service Pack
V257-a-297

Serial Number
00123ABC

Network
Register
Version
Upgrade Firmware

Key:
6a7b8c9d

Configuring My Stations

- 1. Using Reciva's website at <http://www.reciva.com>, it is possible to search for radio stations that are available in Reciva's stations database. Whenever stations are searched for on the website, they will be displayed in a list of search results together with a link to **Add to My Stations**.
- 2. Clicking on the **Add to My Stations** link, will add the station to your account's **My Stations** list. This list can be edited by clicking on **My Stations** under the **My Account** section on the website.
- 3. Once you have Internet stations available in your **My Stations** list, you may play these stations from your Internet Radio. These stations will be available on your radio from the menu item: 'Radio Stations > My Stuff > My Stations'.

Please note, the **My Stuff** menu item and your personal selection of radio stations (**My Stations**) will only be available on your radio once your radio has downloaded a new radio stations list. To cause the radio to download a new list of stations immediately, please remove and reconnect the power to your radio.

If a radio station is not listed

- 1. If you want to listen to a particular radio station which is currently not listed in your radio or on Reciva's web site, you can enter a request for them to add the radio station to their database.

Radio Stations

Media Player

Auxiliary input

Alarm clock

Configure

Off

Location

Genre

My Stuff

Preset 1

Preset 2

Preset 3

My Stations

<< Back

Configuring My Streams

1. Once logged into your Reciva website account, you can add your own Internet radio streams to the **My Streams** section, which is listed under the **My Account** section. Typically, these will be Internet radio stations that you will have found using your computer.
2. Clicking on **My Streams** will prompt you to enter the station's name and its media stream URL. The media stream URL should be a link to a website's actual audio stream. If you have any doubt about locating the media stream URL from a webpage, then please refer to the FAQs section on Reciva's website, <http://www.reciva.com>.
3. Once you have Internet radio streams available in your **My Streams** list, you may play these stations from your Internet Radio. These stations will be available on your radio from the menu item: 'Stations > My Stuff > My Streams'.

Please note, the **My Stuff** menu item and your personal selection of radio streams (**My Streams**) will only be available on your radio once your radio has downloaded a new radio stations list. To cause the radio to download a new list of stations immediately, please remove and reconnect the power to your radio.

Radio Stations

Media Player
Auxiliary input
Alarm clock
Configure
Off

Location

Genre

My Stuff

Preset 1

Preset 2

Preset 3

My Stations

My Streams

<< Back

Media Player

Media player basics

The Media Player allows you to play audio files which are stored on a computer on your network. Supported file formats are MP3, WMA, AAC, WAV, FLAC, AIFF, Real Audio, AU and playlists (M3U). Note that the playback of DRM protected content is not supported.

Your radio supports two file access methods. It can connect to folders shared on the network, commonly known as Windows Shares. It can also connect with file server applications using the Universal Plug and Play (UPnP) protocol.

All of the supported file types are playable in Windows Shares mode. When using a UPnP server, the playable file types are dependant on the server software used. For example, Microsoft Windows Media Player 11 can serve MP3, WMA and WAV files. To be able to play the other supported file types via UPnP you may need to install additional third-party software.

When using Windows Shares, music selection is by Artist, by Album and optionally by track within an Album. When using a UPnP server, the search and selection criteria are determined by the server, but typically include additional options such as Genre. Many server applications also allow you to access files according to the folders within which they are stored.

Note that the references to 'PC' in this section refer to any computer device that may be sharing content on your network, whether it is a Windows device, an Apple computer, a Linux device, or any other. We use the generic term 'PC' simply because it is short and convenient.

Using Windows Shares


Setting up your Windows PC to allow the radio to access your audio files via Windows Shares. If you wish to use UPnP, please turn to page 29.

1. Please ensure that your PC is available on the same network as your Internet radio. Using Windows Explorer, locate the folder where your audio files are stored.
2. Right click on the folder.
3. Select 'Properties'.
4. Click on 'Sharing'.
5. Select 'Share this folder on the network' and 'Allow network users to change my files'.

Please note, do not try to make your 'My Documents' or any of its sub-folders (e.g. 'My Music') shareable.

Locate the shared audio files using the radio

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu.
3. Rotate the Select control until 'Media Player' is highlighted on the display and press the Select control. Alternatively, use the **Media** button on the remote control
4. Rotate the **Select** control until 'Windows Shares' is highlighted, then press to select this option.
5. Rotate the **Select** control until 'Scan for PCs' is highlighted and press the **Select** control again.
6. The radio will now display 'Finding PCs'. If any PCs are sharing folders on the network they will be shown. When the search is complete, rotate the **Select** control to highlight the PC which is sharing your files. If your PC does not appear, check its file sharing and firewall settings.
7. Press the **Select** control. The radio will then search the selected PC for shared folders. If the PC's security settings require it, the radio may ask for a user name and password. Enter these according to your PC's settings.
8. Rotate the **Select** control to highlight the correct shared folder and press the **Select** control to confirm the selection.
9. The radio will display 'File Scan...' as it scans through the media files in the shared folder. The bottom row of the display will show some file or folder names to indicate that the file scan is in progress. If you have a large number of audio files this could take several minutes to complete.

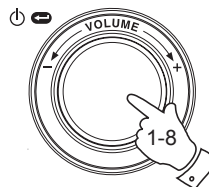

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Windows Shares
UPNP Servers
Playback mode
Clear Queue
<<Back

By Album
By Artist
Scan for PC's
Rescan Folder

Finding PC's

Gerry's PC
Jennifer's PC
Mum's PC

File Scan

10. Once the radio has finished scanning, it will display 'By Album', 'By Artist', etc. Use the **Select** control to scroll through the scanned media files, which will now be organised 'By Album', 'By Artist' and 'Playlists' – if available.

Note that the first time the file scan is performed, a file called '.reciva_media_cache' is written to the folder where the audio files are stored. This file is created by the scanning software in order to speed up subsequent file scans.

In the event that your radio cannot connect to your PC or its shared folders it is most likely that your PC's firewall software is blocking access (see the section 'Troubleshooting' on page 53).

Set up a Windows PC to allow the radio to access your audio files via a UPnP server

1. If your PC is running Microsoft Windows XP or Windows Vista then you can use Microsoft's Windows Media Player 11 (WMP 11) to act as your UPnP (Universal Plug and Play) media server. If not already installed on your PC, Windows Media Player 11 may be downloaded from Microsoft's website and installed by following the instructions detailed in its installation wizard, or by using Microsoft's Windows Update facility.
2. Once installed, WMP 11 can create a library from all the media files available to it on your PC. To add new media files to the library, select 'File > Add to Library... > Advanced Options', click 'Add' and choose the files you wish to add and click 'OK'.

You will now need to connect your Internet radio to Windows Media Player 11 and configure it to allow the radio to access your media library. In order to this, you will need to follow these next steps.


Selecting Media Sharing in Windows Media Player 11



Connecting the radio using UPnP

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option. Select the Media Player menu. Rotate the **Select** control to highlight 'UPnP Servers'.
 2. Press and release the **Select** control and the radio will scan for all available UPnP servers. Note, this may take a few seconds for the radio to complete its scan and before the scan has completed, the radio will display 'Empty'. The radio will continue to display 'Empty' if no UPnP servers are found.
 3. After scanning, select your UPnP server (rotate the **Select** control if more than one UPnP server is found), and then press the **Select** control. Your radio will normally display 'Access Denied' at this stage.
 4. Your PC may now prompt you that a device has attempted to connect to your UPnP server. Whether you are prompted or not, in order to allow the radio to have access to the media files, you will need to click the 'Library' tab in WMP 11 and select the 'Media Sharing...' item to open the 'Media Sharing' window.
 5. From the 'Media Sharing' window, the radio will be listed as an unknown device. Click on the unknown device shown to select it, then click the 'Allow' button and then click 'OK'.
- Note: If you are using Microsoft Windows' firewall software, this should be correctly configured by WMP 11. If you are using third party firewall software you may need to manually configure it to allow your radio and WMP 11 to communicate (see 'Troubleshooting' on page 53).
6. Select the named server again using the **Select** control. If WMP 11 is now able to communicate with your radio you will be presented with some media selection options by the server software.

If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

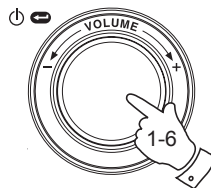


Windows Shares
UPnP Servers
Playback mode
Clear Queue
<<Back

Gerry's Music
Jenny's Music
<< Back

Access denied
801

Allowing a device to connect to Windows Media Player 11

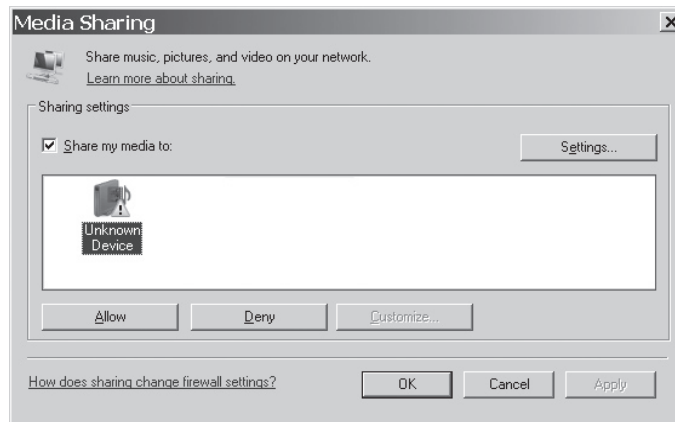


Locating and playing media files when using UPnP

Once the UPnP server has been configured to share media files with your Internet radio, you select the files that you wish to play as follows:-

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option. Select the Media Player menu. Rotate the **Select** control to highlight 'UPnP Servers'.
2. Press **Select** control and the radio will scan for all available UPnP servers. Note that it may take a few seconds for the radio to complete its scan, and that before the scan has completed the radio may display 'Empty'. The radio will continue to display 'Empty' if no UPnP servers are found.
3. After a successful scan, rotate the **Select** control to highlight your UPnP server and then press the **Select** control.
4. The radio will now list the media categories which are made available by the UPnP server - for example, 'Music' and 'Playlists'. Rotate the **Select** control to highlight which category you wish to browse, then press the **Select** control to confirm your choice.
5. Rotate the **Select** control to highlight a category and press the **Select** control again. For example, you could select 'Music' and then select 'Albums'.

Note: In UPnP mode the search criteria offered and the file types made available to the radio are a function of the UPnP server software installed on your PC.

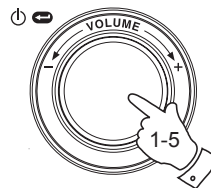

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Windows Shares
UPNP Servers
Playback mode
Clear Queue
<<Back

Gerry's Music
Jenny's Music
<< Back


Music
Playlists
<< Back

Album Artists
Albums
All Artists
All Music
Composers
Folders
Genre
<<Back

7. Rotate the **Select** control to highlight the media files that you wish to play and then press the **Select** control.

Do not worry if not all of your media appear in the menus immediately. Windows Media Player needs to look inside each file to identify the artist, album and track information from 'tags' embedded in each file. Additionally, Windows Media Player may take time to access the Internet to obtain additional information such as 'album art' which it can display when you examine your music library on your PC.

8. The radio will display '[Add to Queue]'. Press the **Select** control and the radio will add all the tracks in the album to its queue and begin playing them automatically.

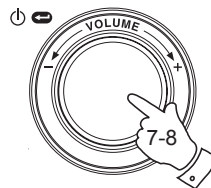

Duke
Live At Blues Alley
Victory for the Com
Wish You Were Here
<< Back

[Add to Queue]
Cheek to Cheek
Stormy Monday

Cheek to Cheek
Connecting

Cheek to Cheek
Eva Cassidy
00:00 160k


Media selection

Whether you access your files using Windows Shares or using UPnP, the file selection mechanisms are the same. The only difference between the two methods is that when using UPnP you will generally have a wider choice of search criteria, as determined by the UPnP server software on your computer. Some third party server applications allow customisation of the search criteria and indexing methods, which can be useful if you have a very large collection of stored music files.

The selection mechanism allows you to search by a given information type (Album, Artist, etc.) and then to narrow the search, either just to an album or to a particular track within an album. The selected album or track is then added to a queue of tracks to be played. You can add more albums or tracks to the queue while music is playing, or you can jump between tracks in the queue. You can also clear the queue if you wish to make a fresh selection. The searches described here are examples of the possibilities available.

Listening to a complete album

1. Rotate the **Select** control until 'By Artist' is highlighted on the display. Press the **Select** control.
2. Rotate the **Select** control until the required artist is highlighted on the display. Press the **Select** control.
3. Rotate the **Select** control until the required album name is highlighted on the display. Press the **Select** control. '[Add to Queue]' will be highlighted at the head of a list of tracks.
4. Press the **Select** control. The album will begin playing and all of the tracks in the album will be stored in the queue.

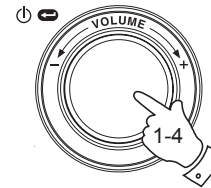

Album
Artist
Genre

Divine Comedy
Eva Cassidy
Fleetwood Mac

American Tune
Live at Blues Alley
Songbird


[Add to Queue]
Cheek to Cheek
Stormy Monday

Cheek to Cheek
Connecting

Cheek to Cheek
Eva Cassidy
00:00 160k

Listening to a single track

1. If you wish to play only a particular tracks from an album, first choose the album as described in steps 1 - 3 on the preceding page (section 'Listening to a complete album').
2. '[Add to Queue]' will be highlighted at the head of a list of tracks.
3. Rotate the **Select** control until the required track is highlighted.
4. Press and release the **Select** control. The track will begin playing.

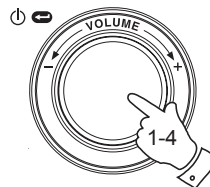

[Add to Queue]
Cheek to Cheek
Stormy Monday
Bridge Over Troubl
Fine and Mellow


Bridge Over Troubl
Connecting

Bridge Over Troubl
Eva Cassidy
00:00 160k

Queuing up albums for playback later

While the Media Player is playing, you may add additional albums or tracks to the media queue.

1. Use **rotary** control (with the **back** option as needed) to search for and highlight the required album (or use the **Select**, **Back** and **Menu up** and **Menu down** buttons on the remote control).
2. Press the **Select** control (or button) to choose the album. The list of tracks for the album will be displayed, headed by '[Add to Queue]'.
3. If needed, rotate the **Select** control or the **Menu up** button on the remote control so that '[Add to Queue]' is highlighted. Press and release the **Select** control. 'Tracks Added to Queue' will be displayed.

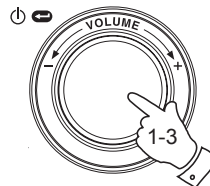


American Tune
Live at Blues Alley
Songbird

[Add to Queue]
Cheek to Cheek
Stormy Monday

Tracks Added To
Queue

Queuing up tracks for playback later

1. If you wish to add only particular tracks from an album to the queue, first choose the album as described in steps 1 - 3 on the preceding page (section 'Queuing up albums for playback later').
2. Use the **Rotary** control (or use the **Menu up** and **Menu down** buttons on the remote control) to search for and highlight the required track.
3. Press the **Select** control (or button). 'Track Added To Queue' will show on the display.

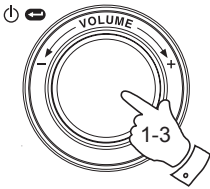


[Add to Queue]
Cheek to Cheek
Stormy Monday

Track Added To
Queue


Controlling playback

1. **Press and hold** the **Play / Pause** button on the remote control to stop playback of the current track.
If you press and release the button again, playback will resume from the beginning of the same track
2. **Press and release** the **Play / Pause** button to pause playback of the current track.
If you press and release the button again, playback will resume from the point where it was paused.
3. Press the **Rewind** button to start playback of the previous track in the queue.
4. Press the **Fast-forward** button to start playback of the next track in the queue.




Name of Track
Stopped

Name of Track
01:47 Paused



Browsing the list of tracks currently queued up for playback


- 1. Press the **Queue** button on the remote control. The currently playing track name will be displayed, along with its position in the queue.
- 2. Use the **Menu up** or **Menu down** buttons (or rotate the **Select** control) to see which tracks are queued up for playback.
- 3. If you want to jump to a particular track in the queue, press the **Select** button (or the rotary control) when the required track is displayed. Playback will then continue from the beginning of that track.

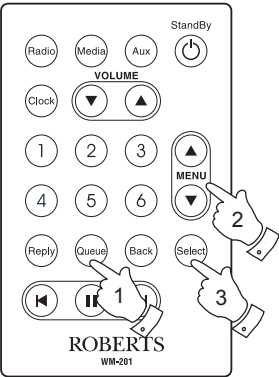


List of tracks
1 of 60

Clearing the media player queue

- 1. When the radio is playing press the **Select** control to access the menus. If needed, use the **Back** option to access the main Media Player menu.
- 2. Press the **Select** control and rotate the **Select** control until 'Clear Queue' is displayed.
- 3. Press the **Select** control. The display will then show 'Queue cleared' and all tracks will be erased from the media queue.
- 4. Alternatively, a **long press** of the **Queue** button can be used to clear the queue from any point in the Media Player without any need to navigate the menus.

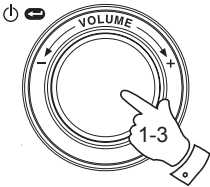

Windows Shares
UPNP Servers
Playback mode
Clear Queue
<<Back

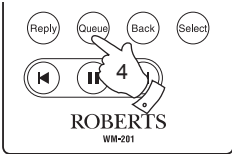


Queue cleared

Playing tracks in the queue repeatedly

1. When the radio is playing press the **Select** control to access the menus. If needed, use the **Back** option to access the main Mode menu.
2. Rotate the **Select** control until 'Media Player' is highlighted on the display then press the **Select** control to enter the Media Player menu. Alternatively press the **Media** button on the remote control.
3. Rotate the **Select** control until 'Playback Mode' is displayed then press the **Select** control.
4. Rotate the **Select** control until 'Repeat' is highlighted. Press and release the **Select** control. The display will show 'Enable' with a YES / NO option.
5. Rotate the **Select** control to select 'YES', then press the **Select** control to confirm that Repeat mode should be enabled. If you do not wish to enable Repeat mode select 'NO'.

If Repeat mode has previously been enabled, then the display will show 'Disable' with a YES / NO option after step 4. Select 'YES' to cancel Repeat mode.

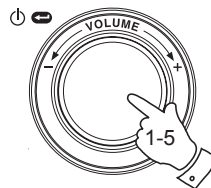

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Windows Shares
UPNP Servers
Playback mode
Clear Queue
<<Back


Repeat
Shuffle
<< Back

Enable
YES NO

Playing tracks in random order

1. When the radio is playing press the **Select** control to access the menus. If needed, use the **Back** option to access the main Mode menu.
2. Rotate the **Select** control until 'Media Player' is highlighted on the display then press the **Select** control to enter the Media Player menu. Alternatively press the **Media** button on the remote control.
3. Rotate the **Select** control until 'Playback Mode' is displayed then press the **Select** control.
4. Rotate the **Select** control until 'Shuffle' is highlighted. Press and release the **Select** control. The display will show 'Enable' with a YES / NO option.
5. Rotate the **Select** control to select 'YES', then press the **Select** control to confirm that Shuffle mode should be enabled. If you do not wish to enable Shuffle mode select 'NO'.

If Shuffle mode has previously been enabled, then the display will show 'Disable' with a YES / NO option after step 4. Select 'YES' to cancel shuffle mode.

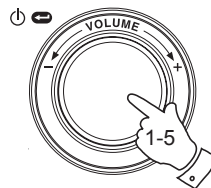

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Windows Shares
UPNP Servers
Playback mode
Clear Queue
<<Back

Repeat
Shuffle
<< Back



Enable
YES NO

Auxiliary input socket

Your radio has a 3.5mm stereo jack socket for connection to external audio sources. This can be configured to two sensitivity levels to suit the output level of the connected device.

1. Connect an external audio source, such as an MP3 or CD player to the Aux In socket on the back of the radio.
2. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu.
3. Rotate the **Select** control until **Auxiliary Input** is highlighted on the display.
4. Press the **Select** control. The display will then show 'Aux In' and the external source will be selected. Alternatively, simply press the **Aux** button on the remote control.
4. If you are using a headphone output on the connected player, adjust the volume control on the player to a mid-level and then use the volume control on your Internet radio to set a comfortable listening level.

Note: In the event that the sound is either too quiet, or loud and distorted, it may be that you need to adjust the Auxiliary Input level setting - please see the following page.

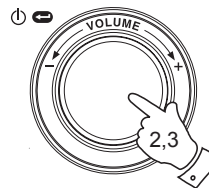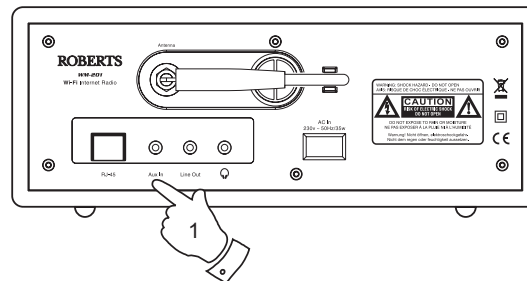

Radio Stations
Media Player
Auxiliary Input
Alarm clock
Configure
Off


Aux In

Setting the auxiliary input level

Different audio sources can vary quite significantly in the strength of the signals which they provide to other equipment such as your Internet radio. In particular, some headphone outputs are at a much lower level than others, and almost all headphone outputs are at a lower level than so called 'Line-level' outputs.

So that you may use your radio with a range of external audio sources, the input sensitivity of the Auxiliary Input may be configured to suit either Headphone or Line-level outputs. The Headphone Level setting is the more sensitive of the two.

1. When the radio is playing press the **Select** control to access the menus. If needed, use the **Back** option to access the main Mode menu. Rotate the **Select control** until 'Configure' is highlighted on the display.
2. Press the **Select** control to show the Configure menu on the display. Rotate the **Select** control until 'Auxiliary input level' is highlighted.
3. Rotate the **Select** control until either 'Headphone level' or 'Line Input Level' is highlighted on the display, and then press the **Select** control to activate the desired setting.
4. If needed, select the **Back** option to exit the menu.

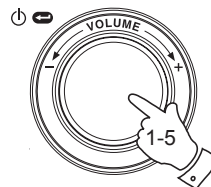

Radio Stations
Media Player
Auxiliary Input
Alarm clock
Configure
Off

Aux Input Level
Backlight
Clock Setup


Headphone Level
Line Input Level
<< Back

Headphone level
selected

Setting the clock

Normally the WM-201 Internet radio will set its clock automatically to UK time after a connection to the Internet has been established. Should you need to set the time manually, please follow this procedure.

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu.
2. Rotate the **Select** control until the display says 'Configure'. Press the **Select** control to enter the configure menu.
3. Rotate the **Select** control until 'Clock Setup' appears on the display. Press the **Select** control to enter the clock setup menu.
4. Rotate the **Select** control until 'Set Time/Date' is highlighted on the display. Press the **Select** control to highlight the hour digits on the display.
5. Rotate the **Select** control to select the hour. Press the **Select** control to highlight the minute digits on the display.
6. Rotate the **Select** control until the correct date is highlighted on the display. Press the **Select** control enter the date and to highlight the month on the display.
7. Rotate the **Select** control to select the correct month. Press the **Select** control enter the month and to highlight the year on the display.
8. Rotate the **Select** control to select the year. Press the **Select** control to confirm the clock setting. The display will show 'Time and Date Set' and will then return to the radio station display.

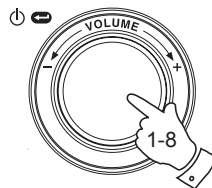

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Aux Input Level
Backlight
Clock Setup

Set Time/Date
Clock Format
DST

Set Time
10:00

Set Time
10:00


Set Date
21 May 2007

Time and Date
Set

Setting the clock format

The clock display can be set to 12 or 24 hour format. The selected format is then also used when setting the alarms.

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu.
2. Rotate the **Select** control until the display says 'Configure'. Press and release the **Select** control to enter the configure menu.
3. Rotate the **Select** control until 'Clock Setup' is highlighted on the display. Press the **Select** control to enter the clock setup menu.
4. Rotate the **Select** control until 'Clock format' is highlighted on the display. Press the **Select** control to enter the clock format menu.
5. Rotate the **Select** control to select either 24 hour or 12 hour format. Press the **Select** control to confirm your choice of clock format.

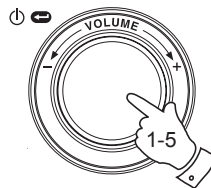

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Aux Input Level
Backlight
Clock Setup

Set Time/Date
Clock Format
DST

Clock format
24 12


Setting daylight saving time

Normally your radio will use European rules for Daylight Saving Time so that the changes between Greenwich Mean Time and British Summer Time will be handled automatically. If this is not suitable for your location the time change may be configured manually.

These three options are available:

- European - Sets DST by European rules.
- DST On - Sets Daylight Saving Time (offset +1 hour)
- DST Off - Cancels Daylight Saving Time.

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu.
2. Rotate the **Select** control until the display says 'Configure'. Press and release the **Select** control to enter the configure settings.
3. Rotate the **Select** control until 'Clock Setup' appears on the display. Press the **Select** control to enter the clock setup menu.
4. Rotate the **Select** control until 'DST' appears on the display. Press the **Select** control to enter the clock format menu.
5. Rotate the **Select** control to select either 'European DST', 'DST On' or 'DST Off' as required. Press the **Select** control to confirm your choice.

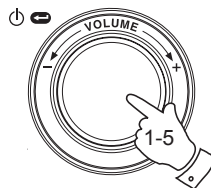

Radio Stations
Media Player
Auxiliary input
Alarm clock

Configure
Off

Aux Input Level
Backlight
Clock Setup

Set Time/Date
Clock Format
DST


European DST
DST On
DST Off

Setting the alarm clock

Your radio has four separate alarms which can be set to wake you to either a radio station or a buzzer alarm. Each alarm can be set to sound either once, everyday, weekly, weekdays or at weekends. In the event of a power interruption your radio has built in memory chip that will retain your alarm settings.

Note: If no buttons are pressed for 10 seconds the radio will exit the alarm setup. If you make a mistake at any point, use the **Back** option to go back to the previous screen.

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu.
2. Rotate the **Select** control until the 'Alarm clock' is highlighted on the display. Press the **Select** control to enter the alarm settings.
3. Rotate the **Select** control until 'Set Alarms' is highlighted on the display then press the **Select** control. The display will show the status of alarms 1-4. It will also offer a 'Disable All' option.
4. Rotate the **Select** control until the desired alarm 1 - 4 is highlighted on the display. Alarms which are not highlighted show the time of the next alarm (if any) and the day of the week on which they will occur. The currently highlighted entry will scroll through the full alarm details including whether the alarm is daily, weekly, etc. and the details of the alarm type (buzzer or radio station name).
5. To change the setting for the highlighted alarm press the **Select** control. The alarm hour will be highlighted. The 12 hour or 24 hour clock format will be used according to the currently selected clock format option (please see page 42).

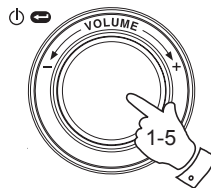

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Set Alarms
Sleep timer
<<Back

Disable all
1 OFF
2 OFF
3 OFF
4 OFF

Set Time
00:00 AM

Setting the alarm cont.

6. Rotate the **Select** control to choose the hour for the alarm. Press the **Select** control to store this setting and the minute digits will be highlighted.

7. Rotate the **Select** control to choose the minute for the alarm. Press and **Select** control to store this setting. The alarm day option will be highlighted on the display:-


Once	- will sound at one time only
Everyday	- will sound everyday.
Weekly	- will sound once every week.
Weekdays	- will sound on weekdays only.
Weekends	- will sound on weekends only.

8. Rotate the **Select** control to choose one of the above options for the alarm. Press the **Select** control to store this setting. If setting the alarm to everyday, weekdays or weekends please skip to point 10.

9. Rotate the **Select** control until the required day of the week for the alarm is highlighted on the display. Press the **Select** control to store this setting. The radio will enter the alarm mode option.

10. The alarm can be set to a radio station or a buzzer alarm. The radio station alarm may be set to any of the stations which have been stored as presets or to the station currently being listened to. Rotate the **Select** control to select either Buzzer or the required radio station.

11. Press the **Select** control to confirm the alarm settings. Your radio will show 'Alarm Set' and will go back to the list of alarms with the new alarm setting shown in the display.

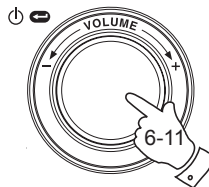

Set Time
07:00 AM

Set Time
07:30 AM

Once
Everyday
Weekly
Weekdays
Weekends

Monday
Tuesday
Wednesday
Thursday
Friday
Saturday
Sunday

Buzzer
100-102 Century
100.7 Heart FM
102.2 Smooth FM
102.3 2CR FM


Alarm Set

When the alarm sounds

The radio alarm will sound at the selected times for up to 60 minutes unless cancelled. The volume for the radio alarm will be the same as the volume previously used when listening to the radio or media player. If for any reason the radio cannot connect to the requested radio station at the time that the alarm is due, the buzzer alarm will be used instead.

The buzzer alarm sounds for 10 minutes and the volume will gradually increase from a low level. If the radio is playing at the time that the buzzer sounds, then the buzzer volume is based on the radio volume setting.

1. If the radio alarm sounds when the radio is in standby, the display will show 'Turn on Radio' with a YES / NO option. If no action is taken the radio will switch off at the end of the alarm period. If you select NO, the radio will switch off immediately. If you wish to listen to the radio, or to be able to select alternative stations, then select YES using the **Select** control.
2. If a radio alarm sounds and the radio is already playing, the radio will change to the station specified for the alarm, and the display will show 'Stop alarm' with a YES / NO option. Selecting YES will revert to the previous radio station or the media player. Selecting NO will allow the radio station from the alarm to continue.
3. If the buzzer alarm sounds when the radio is in standby, the display will show 'Turn on Radio' with a YES / NO option. If no action is taken, the buzzer will stop after 10 minutes. If you select NO, the alarm will switch off immediately. If you wish to listen to the radio or media player, then select YES using the **Select** control.
4. If the buzzer alarm sounds when the radio is already playing, the display will show 'Alarm'. If no action is taken, the buzzer will stop after 10 minutes. If you wish to go back to the radio station press the **Select** control.

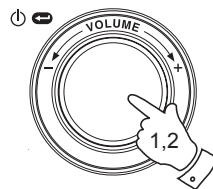

Disable all
1 07:30 Monday Buzzer
2 OFF
3 OFF
4 OFF

Turn on Radio
YES NO

Stop alarm
YES NO


Alarm

Disabling alarms

1. To Disable all alarms enter the alarm setup menu and Rotate the **Select** control until 'Disable all' is highlighted on the display. Press the **Select** control to confirm. The display will show 'All alarms disabled' for 3 seconds then return to the alarms list display.
2. To Disable a single alarm enter the alarm setup menu and rotate the **Select** control until the desired alarm is highlighted on the display. Press the **Select** control. The display will show 'Enable Alarm YES / NO'.

If NO is selected alarm is cancelled and the display returns to the alarm list.

If YES is selected the alarm details may be changed by modifying any or all of the alarm options (from point 5 on page 44, 'Setting the alarms').

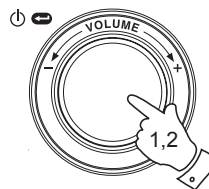

Disable all

- 1 OFF
- 2 9:30 AM Tue
- 3 10:30 AM Wed
- 4 7:30 PM Thu

Enable Alarm


YES NO

Sleep timer

Your radio can be set to turn off after a preset time has elapsed. The sleep setting can be adjusted between 15 and 120 minutes in 15 minute increments.

1. When the radio is playing press the **Select** control to access the menus. If needed, use the **Back** option to access the main Mode menu.
2. Rotate the **Select** control until the 'Alarm clock' is highlighted on the display then press the **Select** control.
3. Rotate the Select control until 'Sleep timer' is highlighted on the display then press the **Select** control.
4. Rotate the **Select** control until the required sleep time setting is selected between 15 and 120 minutes or to Off. Press the **Select** control to confirm the setting.
5. The display will show 'Sleep timer' set. Your radio will switch off after the preset time has elapsed.
6. To cancel the sleep time before the preset time has elapsed and to turn off the radio, use the **Select** control (or the remote control) to turn the radio off manually. To cancel the sleep timer and leave the radio playing, go back into the sleep timer settings (steps 1 to 4 above) and select the Off option in step 4.

During the last two minutes of the sleep timer period, the radio will gradually reduce the volume before switching off.

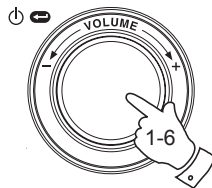

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Set Alarms
Sleep Timer
<<Back


Sleep Timeout
00:15

Sleep Timeout
Off

Backlight

This option allows you to alter the radio's display backlight settings to suit your needs. Separate settings are available for Active mode (while using the menu system), Inactive mode (when listening), and Standby mode (when the radio is off with just the clock display showing).

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu.
2. Rotate the **Select control** until 'Configure' is highlighted on the display. Press the **Select** control to enter the Configure menu.
3. Rotate the **Select** control until 'Backlight' is highlighted on the display. Press the Select control to enter the Backlight menu.
4. The backlight setting can be adjusted for 'Active', 'Inactive' and 'Standby' modes. Rotate the **Select** control to highlight the desired backlight option then press the **Select** control.
5. The radio will now display the setting for the selected backlight option. You can alter this value by rotating the **Select** control to increase or decrease it according to your needs.
6. When the desired value is reached, press the **Select** control to store the setting. If the value is not modified or stored after five seconds, the radio exit the Backlight menu and will return to its previous display.

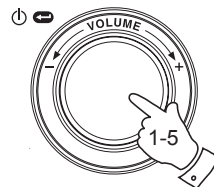

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Aux Input Level
Backlight
Language
Clock Setup

Active
Inactive
Standby
<<Back

Active Level
27

Active Level
Set to 27

Language selection


This facility allows you to change the display language for the menus.

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu. Rotate the **Select** control until 'Configure' is highlighted on the display then press the **Select** control to enter the Configure menu.
2. Rotate the **Select** control until 'Language' is highlighted then press the **Select** control to access the list of available languages (English, French, Spanish, German, Danish, Italian, Dutch, Portuguese, Finnish, Swedish and Norwegian).
3. Rotate the **Select** control to highlight the desired menu language. Press the **Select** control confirm your choice and to restart the radio using the chosen language.

Software version display

The software version display is provided for your reference only.


1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu. Rotate the **Select** control until 'Configure' is highlighted on the display.
2. Press and release the **Select** control to enter the Configure menu. Rotate the **Select** control until 'Version' is highlighted.
3. Press and release the **Select** control to show the current software version on the display. Rotating the control will display additional information. Use the **Back** option to exit.

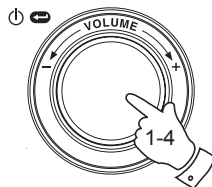

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Register
Version
Upgrade Firmware
Factory Reset
<<Back

Aux Input Level
Backlight
Language
Clock Setup

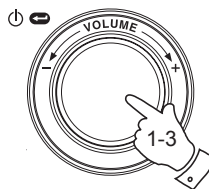

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Service Pack
V257-a-297

Network Configuration

This menu enables you to configure your radio's network settings, scan for a connection to an alternative wireless network, or to manually configure the network parameters. This can be useful if you take the Internet radio to another location where there is a different network setup.


It is possible to configure your radio to connect to your network via an available Ethernet connection (RJ-45) or via a Wi-Fi router.

Configuring the radio only to use a wired Ethernet connection

1. From the radio's Network Configuration menu, select 'Wired / Wireless'. This menu will present you with three options: 'Wireless Only', 'Wired Only' and 'Auto'. Selecting 'Wired Only' will allow cause the radio to restart and then to use only its Ethernet connection to communicate with the network. The radio will also disable its wireless network capabilities. This will require your radio to be physically connected to a wired Ethernet using the RJ-45 socket on the rear panel.

Configuring the radio only to use a Wi-Fi connection

2. Selecting the 'Wireless Only' option from the 'Wired / Wireless' menu will allow cause the radio to restart and then only to use only its Wi-Fi connection to communicate with the network. The radio will also disable its Ethernet connection.

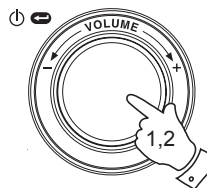

Radio Stations
Media Player
Auxiliary Input
Alarm Clock
Configure
Off

Aux Input Level
Backlight
Language
Clock Setup
Network
Register
Version

Scan for networks
Enter network name
View Config
Edit Config
Wired/Wireless
Signal Warning
<< Back

Auto
Wired Only
Wireless Only
<< Back

Configuring the radio to use either an Ethernet or a Wi-Fi connection

3. Selecting the 'Auto' option from the 'Wired / Wireless' menu will cause the radio to restart. It will then attempt to establish an Ethernet connection to the network. If no Ethernet connection is available the radio will attempt to establish a Wi-Fi connection to the network.

Having established a particular type of connection to the network, this connection will remain in use while the radio is on.

The Network Configuration menu also allows you to choose whether or not the Internet radio displays a warning message when the Wi-Fi signal strength is low. You can enable this feature by selecting 'Signal Warning' and then selecting 'Yes'.


Entering the network name manually

If your network is configured with a hidden ESSID, then you will need to enter the network name manually.


1. In the Network Configuration menu, select 'Enter network name'. A string of characters will be displayed. You can scroll through this list by turning the rotary control or by pressing the **Menu up** or **Menu down** buttons. The centre character will be entered into the network name each time that you press **Select**.

If you make an error, either use the Back button on the remote control, or give a long press on the rotary control.

2. When the name has been entered, locate the END symbol in the string of characters and then press Select. The radio will then try to connect to the named network. The remainder of the connection procedure should then be followed - see page 13, step 9.

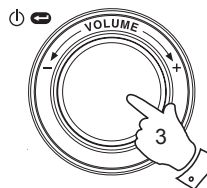

Auto
Wired Only
Wireless Only
<< Back

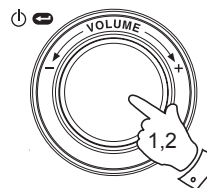

Scan for networks
Enter network name
View Config

mnopq r stuvw
Les's-netwo

()~ **END** ◀ ▶ 01
Les's-netwo

Connecting to
network

Troubleshooting

If you experience any trouble with your Internet radio, then you may find it useful to visit the help section on our web site at

http://www.robertsradio.co.uk/pages/wm201_faq.htm

or on Reciva's website at

<http://www.reciva.com>

If you have difficulty connecting the radio to your wireless network, some of these steps may help to resolve the problem:

1. Confirm that a Wi-Fi connected PC can access the Internet (i.e. can browse the web) using the same network.
2. Check that a DHCP server is available, or that you have configured a static IP address on the radio. You can configure a static IP address on the radio using the menu item 'Configure -> Network Config -> Edit Config', and then select 'No' for 'Auto (DHCP)'.
3. Check that your network's firewall is not blocking any outgoing ports. As a minimum, the radio needs access to UDP and TCP ports 80, 554, 1755, 5000 and 7070. The use of Windows Shares requires access to UDP and TCP ports 135 - 139 and 445. Windows Media Player 11 will allocate a port number for UPnP media sharing and will configure Microsoft's Windows built-in firewall appropriately. Other firewall software may require configuration for UPnP or to allow particular IP addresses to have trusted access.
4. Check that your access point does not restrict connections to particular MAC addresses. You can view the radio's MAC address using the menu item 'Configure -> Network Config -> View Config -> MAC address'. Note that the WM-201 radio has both wired and wireless MAC addresses.

5. If you have an encrypted network, check that you have entered the correct key or pass-phrase into the radio. Remember that text-format WPA keys are case sensitive. If your radio displays 'Wireless error' when attempting to connect to an encrypted network followed by a 5-digit number, then please ensure that you enter the correct pass-phrase for the network. If the problem persists, then you may need to consult your network configuration.

If your radio can connect to the network successfully, but is unable to play particular stations, it may be due to one of the following causes:

1. The station is not broadcasting at this time of the day (remember it may be located in a different time zone).
2. The station has reached the maximum allowed number of simultaneous listeners.
3. The Internet connection between your radio and the server (often located in a different country) is slow.
4. The station is not broadcasting any more.
5. The link to the audio stream used by the radio is out of date.
6. The radio station is broadcasting using an audio format which is not playable by your radio (although the WM-201 does play almost all formats used by regular broadcasters).

Try using a PC to play back the stream via the broadcaster's web site. If you can play back the station with a PC, use the form at **<http://www.reciva.com>** to notify Reciva so that they can update the station data that is used by the radio.


Factory reset

If you wish to completely reset your radio to its initial state this may be performed by following this procedure.

1. Use the **Select** control to switch on your radio and to access the menus. If needed, use the **Back** option to access the main Mode menu. Rotate the **Select control** until 'Configure' is highlighted on the display.
2. Press the **Select** control to enter the Configure menu. Rotate the **Select control** until 'Factory Reset' is highlighted on the display.
3. Press the **Select** control again and the display will show 'Are you sure?'. Rotate the **Select control** to highlight 'Yes' if you wish to carry out a system reset or highlight 'No' if wish to return to the previous screen. Then press the **Select control** again.
4. A full reset will be performed, the station list together with any preset stations will be erased and your wireless network connection details will be lost. All configuration settings will be restored to their defaults, and the language used for menus will be reset to English.

In the event that you are unable to access the menus (or if the language setting has accidentally been changed to a language that you cannot understand) the Factory Reset may also be performed as follows:

1. Remove all power from the unit and wait 30 seconds.
2. Then, re-apply power while simultaneously pressing and holding the front panel rotary control. Keep this pressed as the radio powers up and until it displays 'Factory Reset Complete'. This should normally only take between 10 and 15 few seconds. Then, release the control while the radio restarts.
3. If this is not successful, please remove power for one minute, and then repeat the operation.

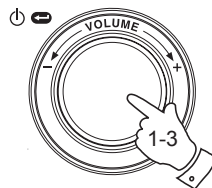


Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Register
Version
Upgrade Firmware
Factory Reset
<<Back

Are you sure?
YES NO

Factory Reset
Complete

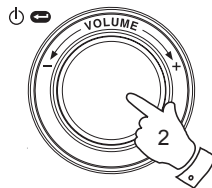

Upgrade firmware

From time to time, new software features for your radio may be developed. For example, a new audio decoder may be added to allow an alternative audio format to be supported. Your radio has therefore been designed to allow its internal software to be upgraded using your Internet connection. The upgrade mechanism is accessible via the Configure menu.

Roberts does not recommend that you use this option unless it is recommended to you by Roberts Customer Services. Upgrading the software will remove all network settings, radio station presets and alarm settings from your radio. Do not attempt this procedure unless you have a good Internet connection and a reliable mains power supply. If you connect to your router using a Wi-Fi connection, make sure that this is also reliable before proceeding.

The Upgrade Firmware option allows your radio to download new internal software from the Reciva portal on the Internet. If there is new software available, then the radio will ask whether you want to download it or not. Selecting No or using the **Back** option will cancel the operation. A software upgrade may take several minutes.

IMPORTANT: Do not switch off the power to the radio until the upgrade operation is complete and the radio has restarted, otherwise the radio may become permanently damaged.

Once the software upgrade is completed your radio will restart. If you use a Wi-Fi connection, you will need to re-enter all network settings in order to be able to reconnect to your network. A firmware update also erases all radio station presets, alarm settings, and configuration options.

Radio Stations
Media Player
Auxiliary input
Alarm clock
Configure
Off

Register
Version
Upgrade Firmware
Factory Reset
<<Back

Checking For
Updates


No Upgrade
Available

Update Software
YES **NO**

Headphone socket


1. A 3.5mm **Headphone Socket** located on the rear of your radio is provided for use with headphones. Inserting a plug automatically mutes the internal loudspeaker.

IMPORTANT: Excessive sound pressure from earphones and headphones can cause hearing loss.

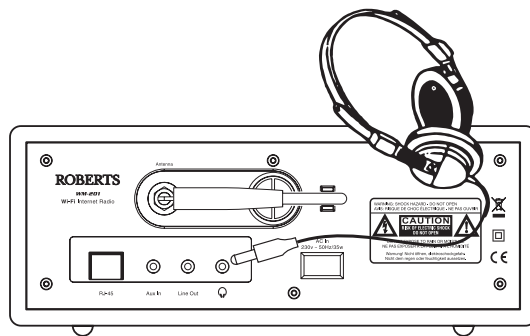

Line out socket (3.5mm Jack)


A 3.5mm **Line Out** socket located on the rear of your radio is provided for connecting the audio signal to an external amplifier. Inserting an audio cable into this socket will not mute the internal loudspeaker. Set the volume control on the radio to minimum if desired.

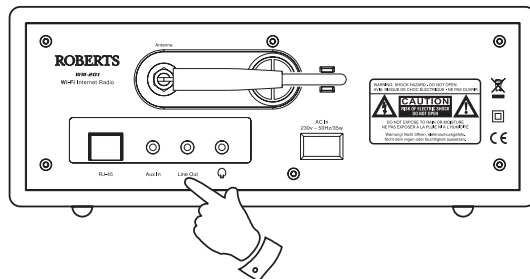

General

Do not allow your radio to be exposed to water, steam or sand. Do not leave your radio where excessive heat could cause damage.

The name plate is located on the rear of the radio.

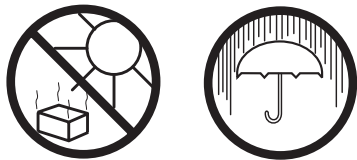

- The radio shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the radio.
- It is recommended to operate the product such that there is a minimum distance (10cm recommended) to adjacent objects in order to ensure good ventilation.
- The ventilation of the product should not be restricted by covering it with items such as newspapers, tablecloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the product.
- It is recommended to avoid using or storing the product at extremes of temperature. Avoid leaving the unit in cars, on window sills, in direct sunlight etc.

Specifications

Power Requirements

Mains	AC 230 volts, 50Hz ~ only
Battery (Remote control)	CR2032

Connectivity

Wired Ethernet	10/100M bits/sec via RJ-45
Wi-Fi	802.11b and 802.11g supported WEP and WPA encryption supported

Circuit features

Loudspeaker	2 x 75 mm
Output Power	5 Watts RMS per channel
Headphone socket	3.5mm dia
Auxiliary In socket	3.5mm dia
Line Out socket	3.5mm dia
Aerial System	External Wi-Fi Antenna

The Company reserves the right to amend the specification without notice.


Mains supply

The WM-201 will operate from a supply of AC 230 volts, 50Hz  only.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or adaptor. If in doubt consult your dealer.

If the event that the mains plug is cut off, remove the fuse and dispose of the plug immediately to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied with a mains plug, or one has to be fitted, then follow the instructions given below:

IMPORTANT. DO NOT make any connection to the larger terminal which is marked with the letter **E** or by the safety earth symbol  or coloured Green or Green-and-yellow.

The wires in the mains lead are coloured in accordance with the following codes :-

BLUE - NEUTRAL

BROWN - LIVE

The wire coloured BLUE must be connected to the terminal marked **L** or coloured BLACK.


The wire coloured BROWN must be connected to the terminal marked **N** or coloured RED.

Fuse

When replacing the fuse only a 3 Amp ASTA approved to BS1362 type should be used. Be sure to re-fit the fuse cover.

IF IN DOUBT - CONSULT A QUALIFIED ELECTRICIAN.

Replacement fuse holders are available from Roberts Radio Technical Services at the address shown on the rear of this manual.

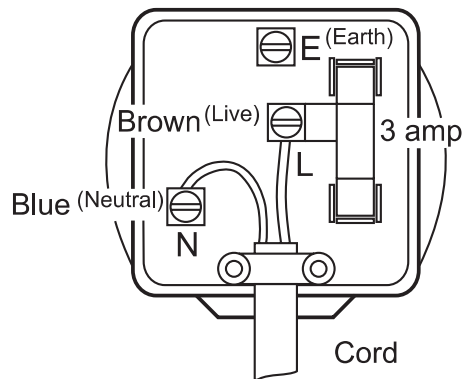

Software license information

This product contains software licensed under version 2 of the GNU Public License and version 2.1 of the GNU Lesser Public License, The source code for this software is available from: <http://www.reciva.com/gpl/>

This product includes technology owned by Microsoft Corporation and under a licence from Microsoft Licensing, GP. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft Corporation and / or Microsoft Licensing, GP as applicable.

The Roberts WM-201 Internet radio incorporates hardware and software technology which has been developed by Reciva Limited, Cambridge, UK.



This image shows a full page of white paper with horizontal dotted lines. The lines are evenly spaced and run across the width of the page, providing a guide for handwriting practice. There are no margins, text, or other markings on the page.

Guarantee

This instrument is guaranteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

N.B. Damaged or broken aerials will not be replaced under guarantee.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts' dealer will be able to attend to any defect quickly and efficiently but should it be necessary the dealer will return the instrument to the Company's service department for attention. In the event that it is not possible to return the instrument to the Roberts' dealer from whom it was purchased, please contact Roberts Radio Technical Services at the address shown overleaf.

These statements do not affect the statutory rights of a consumer.



Issue 1

ROBERTS RADIO TECHNICAL SERVICES

97-99 Worton Road

Isleworth Middlesex

TW7 6EG

Technical Helpline :- 020 8758 0338 (Mon-Fri during office hours)

Website: <http://www.robertsradio.co.uk>

